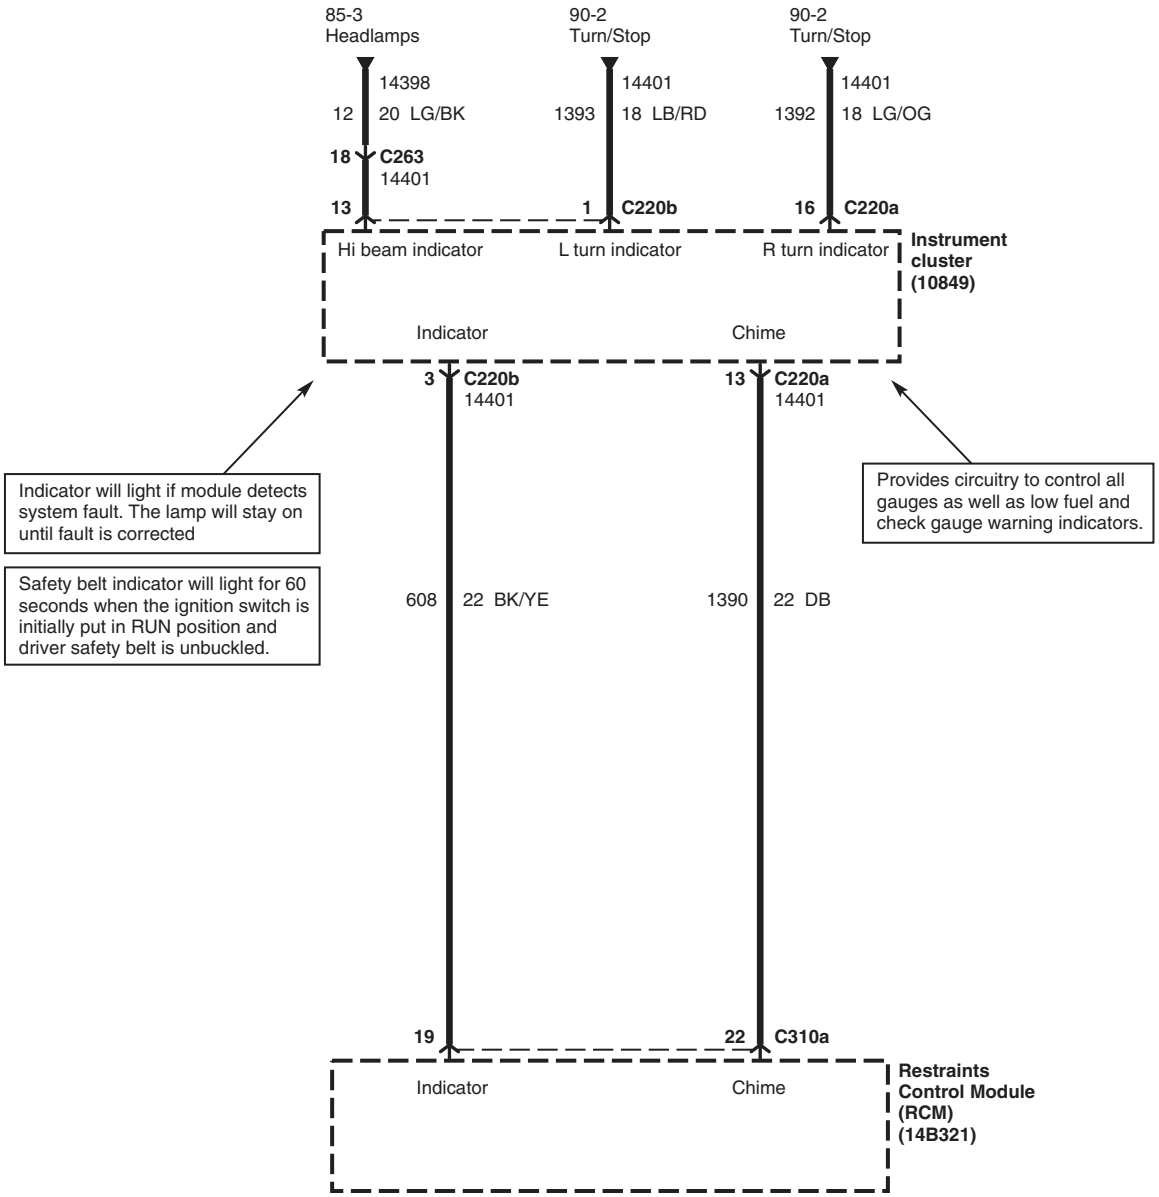
85-3
Headlamps
90-2
Turn/Stop
90-2
Turn/Stop
14398
12 20 LG/BK
14401
1393 18 LB/RD
14401
1392 18 LG/OG
18 C263
14401
13
1 C220b
16 C220a
Hi beam indicator
L turn indicator
R turn indicator
Instrument cluster (10849)
Indicator
Chime
3 C220b
14401
13 C220a
14401
Indicator will light if module detects system fault. The lamp will stay on until fault is corrected
Provides circuitry to control all gauges as well as low fuel and check gauge warning indicators.
Safety belt indicator will light for 60 seconds when the ignition switch is initially put in RUN position and driver safety belt is unbuckled.
608 22 BK/YE
1390 22 DB
19
22 C310a
Indicator
Chime
Restraints Control Module (RCM) (14B321)