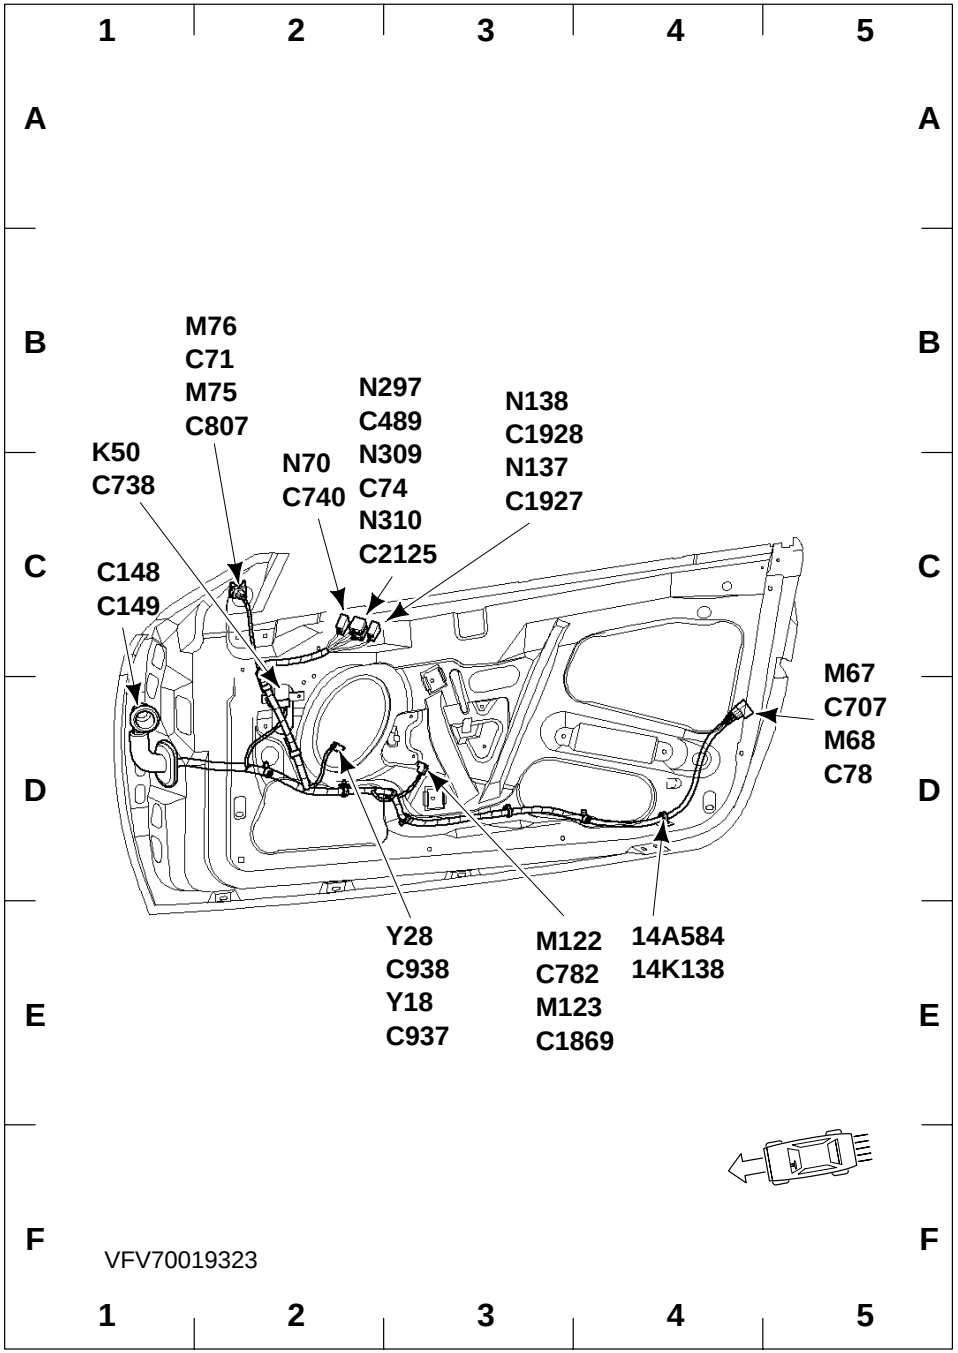

Front door

14A584 . . . . . E 4
14K138 . . . . . E 4
C71 . . . . . B 2
C74 . . . . . C 3
C78 . . . . . D 5
C148 . . . . . C 1
C149 . . . . . C 1
C489 . . . . . B 3
C707 . . . . . D 5
C738 . . . . . C 1
C740 . . . . . C 2
C782 . . . . . E 3
C807 . . . . . B 2
C937 . . . . . E 3
C938 . . . . . E 3
C1869 . . . . . E 4
C1927 . . . . . C 3
C1928 . . . . . B 3
C2125 . . . . . C 3
K50 . One–touch window relay . . . . . C 1
M67 . Door lock motor, driver side . . . . . C 5
M68 . Door lock motor, passenger side . . . . . D 5
M75 . Mirror motor, driver side . . . . . B 2
M76 . Mirror motor, passenger side . . . . . B 2
M122 Window regulator motor, driver side front . . . . . E 3
M123 Window regulator motor, passenger side front . . . . . E 3
N70 . Power mirror adjust switch . . . . . C 2
N137 Door lock/unlock switch, driver . . . . . C 3
N138 Door lock/unlock switch, passenger . . . . . B 3
N297 Window operating switch, passenger side front . . . . . B 3
N309 Window operating switch, driver side front . . . . . C 3
N310 Window operating switch, driver side for passenger side . C 3
Y18 . Speaker, right front (18808) . . . . . E 3
Y28 . Speaker, left front (18808) . . . . . E 3