C892 (BK)

14335

E19
Interior lamp, rear

F01005

Pin	Circuit	Circuit Function
1	29-LC17 (OG/YE)	Voltage supplied at all times (overload protected)

C894 (BK)

12A522

B22
Mass Air Flow (MAF) sensor

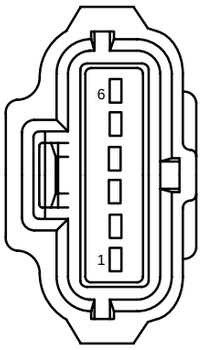

F06077

Pin	Circuit	Circuit Function
1	8-RJ17 (WH/VT)	Sensor signal
2	15-RJ22 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)
3	91-RJ22 (BK/OG)	Ground
4	9-RJ22 (BN/BU)	Sensor signal return (reference/ground)
5	8-RJ22 (WH/BU)	Sensor signal
6	9-RJ17 (BN/WH)	Sensor signal return (reference/ground)

C896 (BK)

14401

P13
Clock spring

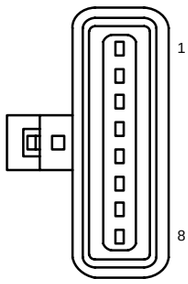

F08102

Pin	Circuit	Circuit Function
1	9-PG30 (BK/WH)	Sensor signal return (reference/ground)
2	91S-GJ7 (BK/BU)	Ground, switched
3	–	not used
4	8-PG13 (WH)	Sensor signal
5	9-PG13 (BN)	Sensor signal return (reference/ground)
6	15-PG13 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
7	91S-JA8 (BK/OG)	Ground, switched
8	15S-JA8 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched

C897 (BK)

14K733

N21
Engine compartment switch



F02058

Pin	Circuit	Circuit Function
1	31-GL7 (BK)	Ground
2	31S-GL7 (BK/YE)	Ground, switched