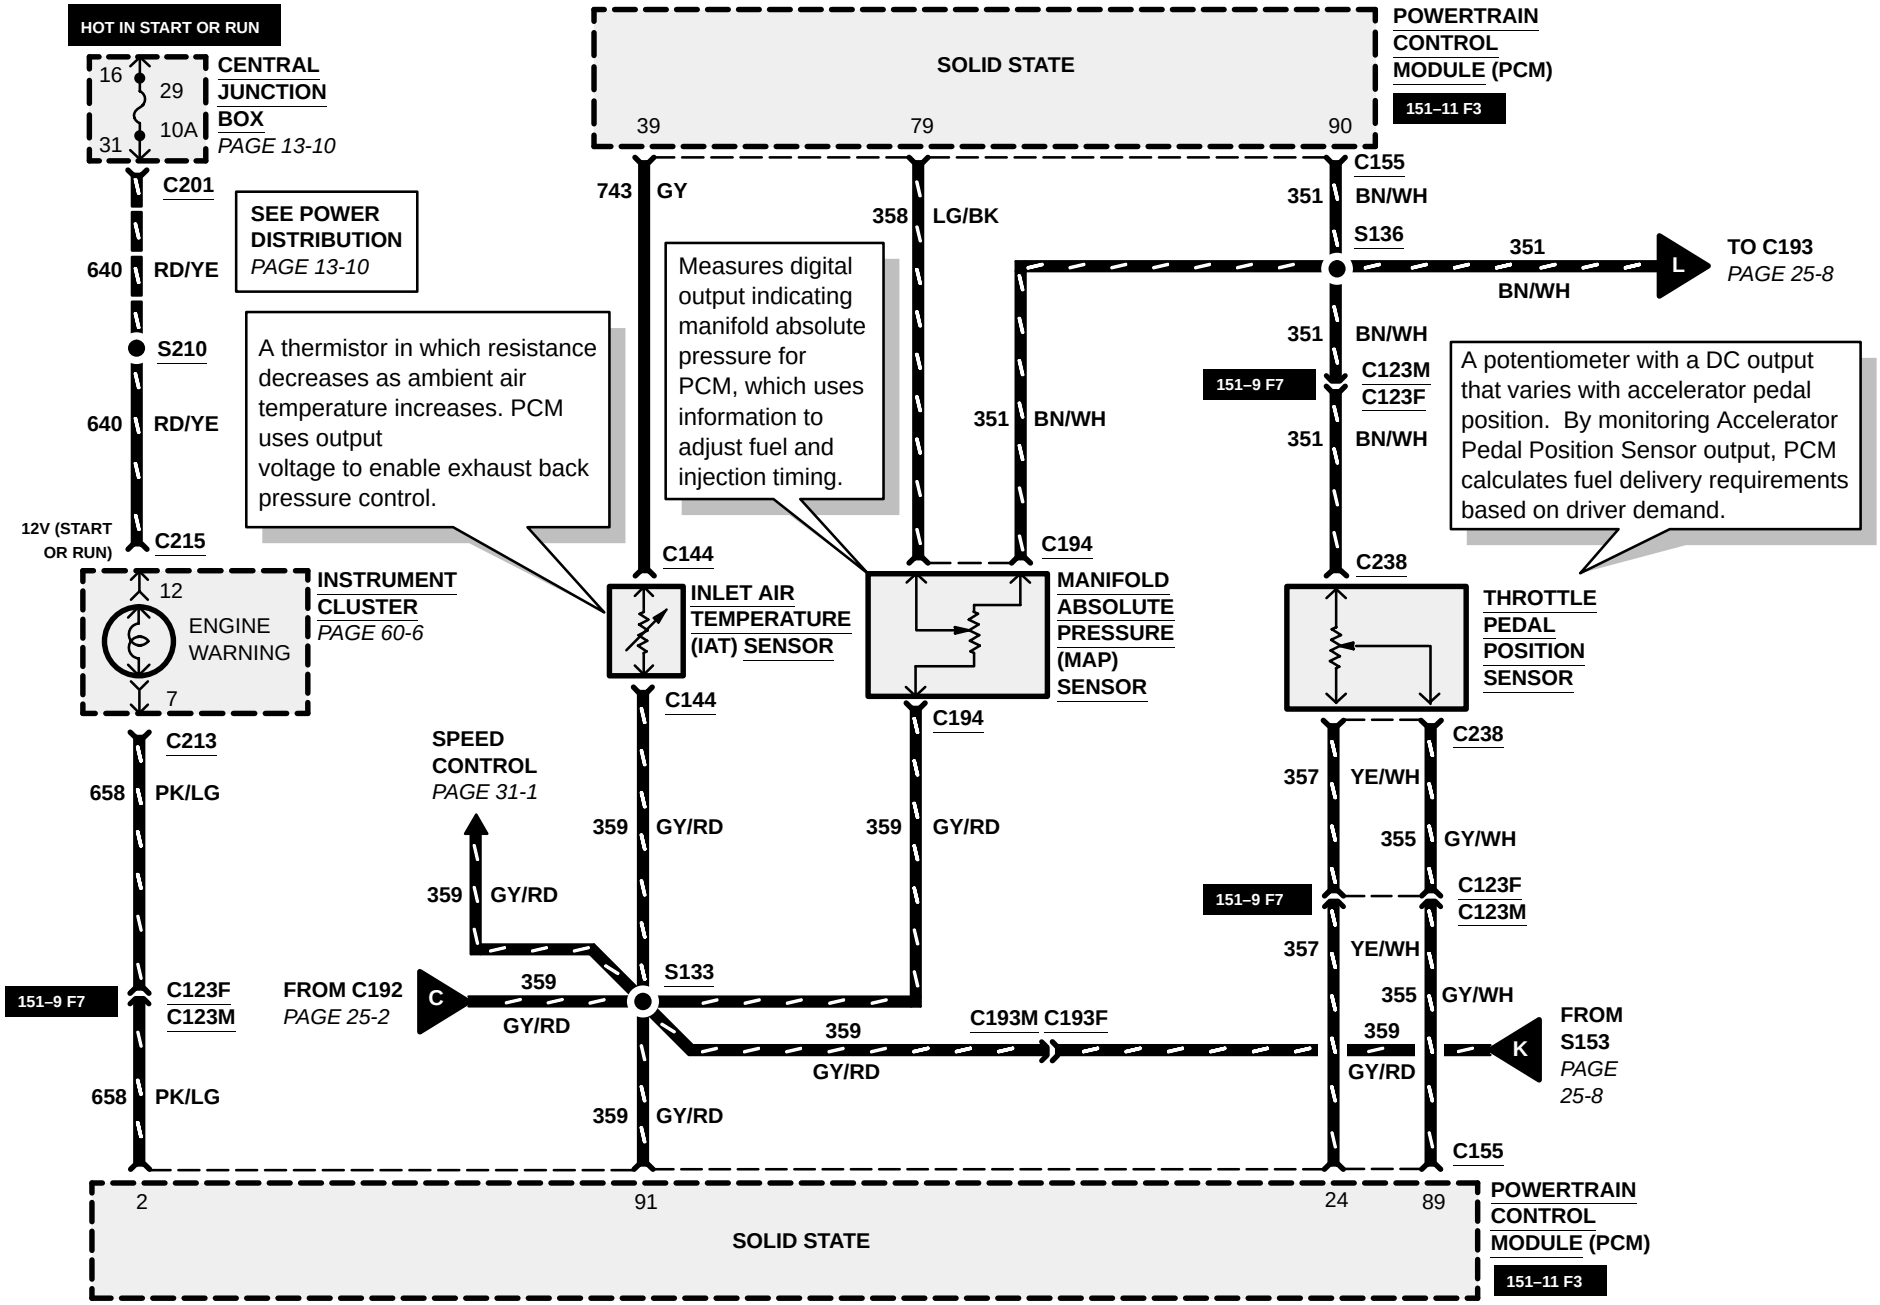
HOT IN START OR RUN
CENTRAL JUNCTION BOX
PAGE 13-10
16
29
10A
31
C201
640 RD/YE
SEE POWER DISTRIBUTION
PAGE 13-10
S210
640 RD/YE
12V (START OR RUN)
C215
INSTRUMENT CLUSTER
PAGE 60-6
12
ENGINE WARNING
7
C213
658 PK/LG
151–9 F7
C123F
C123M
658 PK/LG
FROM C192
PAGE 25-2
C
359 GY/RD
SPEED CONTROL
PAGE 31-1
359 GY/RD
A thermistor in which resistance decreases as ambient air temperature increases. PCM uses output voltage to enable exhaust back pressure control.
SOLID STATE
39
79
90
743 GY
358 LG/BK
Measures digital output indicating manifold absolute pressure for PCM, which uses information to adjust fuel and injection timing.
C144
INLET AIR TEMPERATURE (IAT) SENSOR
C144
359 GY/RD
S133
359 GY/RD
359 GY/RD
C194
MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR
C194
359 GY/RD
C193M C193F
359 GY/RD
359 GY/RD
POWERTRAIN CONTROL MODULE (PCM)
151–11 F3
C155
351 BN/WH
S136
351 BN/WH
TO C193
PAGE 25-8
L
351 BN/WH
151–9 F7
C123M
C123F
351 BN/WH
351 BN/WH
A potentiometer with a DC output that varies with accelerator pedal position. By monitoring Accelerator Pedal Position Sensor output, PCM calculates fuel delivery requirements based on driver demand.
C238
THROTTLE PEDAL POSITION SENSOR
C238
357 YE/WH
355 GY/WH
151–9 F7
C123F
C123M
357 YE/WH
355 GY/WH
359 GY/RD
K
FROM S153
PAGE 25-8
C155
2
91
24
89
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 F3