93-1 REVERSING LAMPS

2001 E-SERIES

For diagnostic information, refer to Section 417-01 of the Workshop Manual.

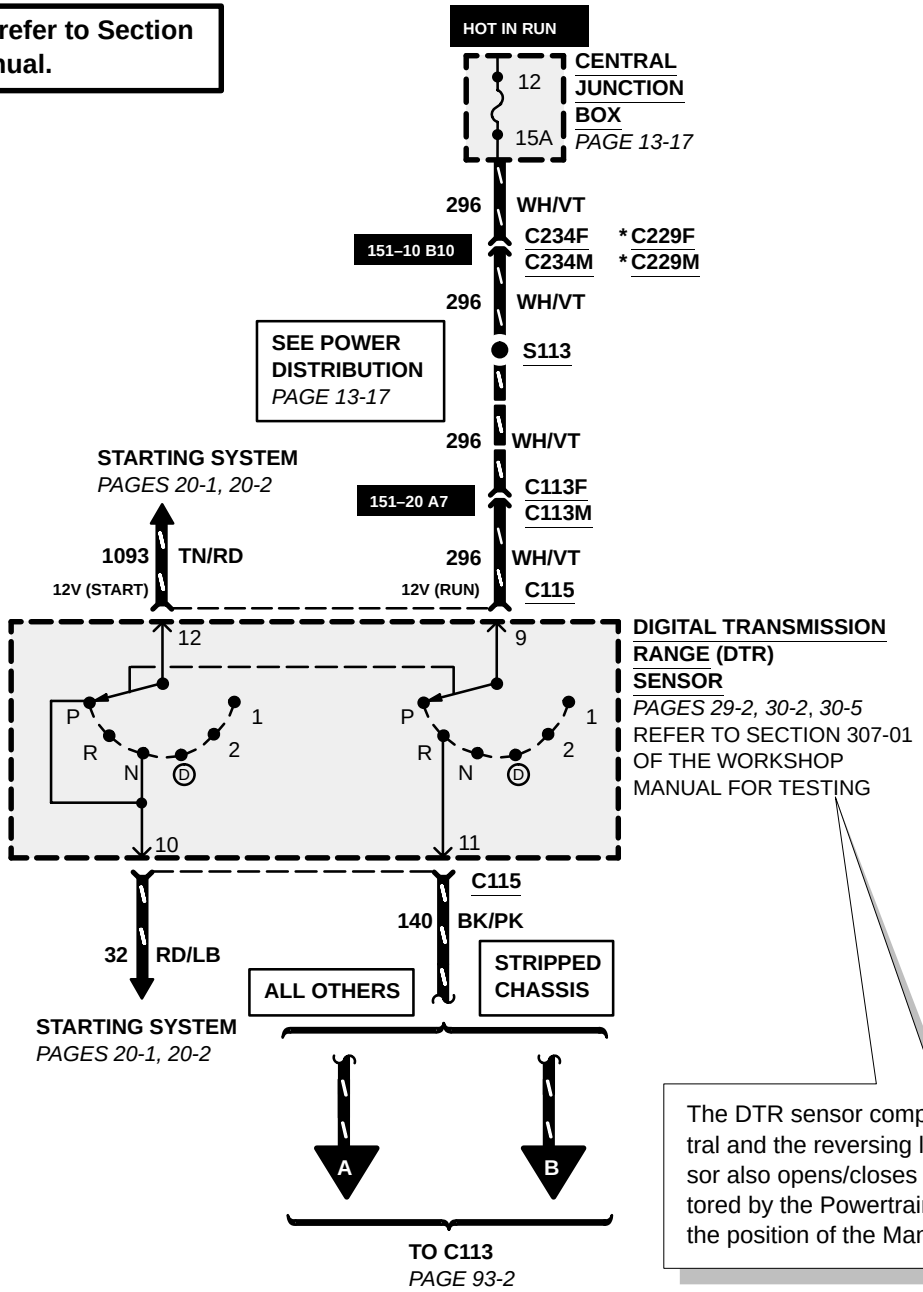

* STRIPPED CHASSIS

The DTR sensor completes the start circuit in Park and Neutral and the reversing lamp circuit in Reverse. The DTR sensor also opens/closes a set of four switches that are monitored by the Powertrain control module (PCM) to determine the position of the Manual lever (P, R, D, 2, 1).