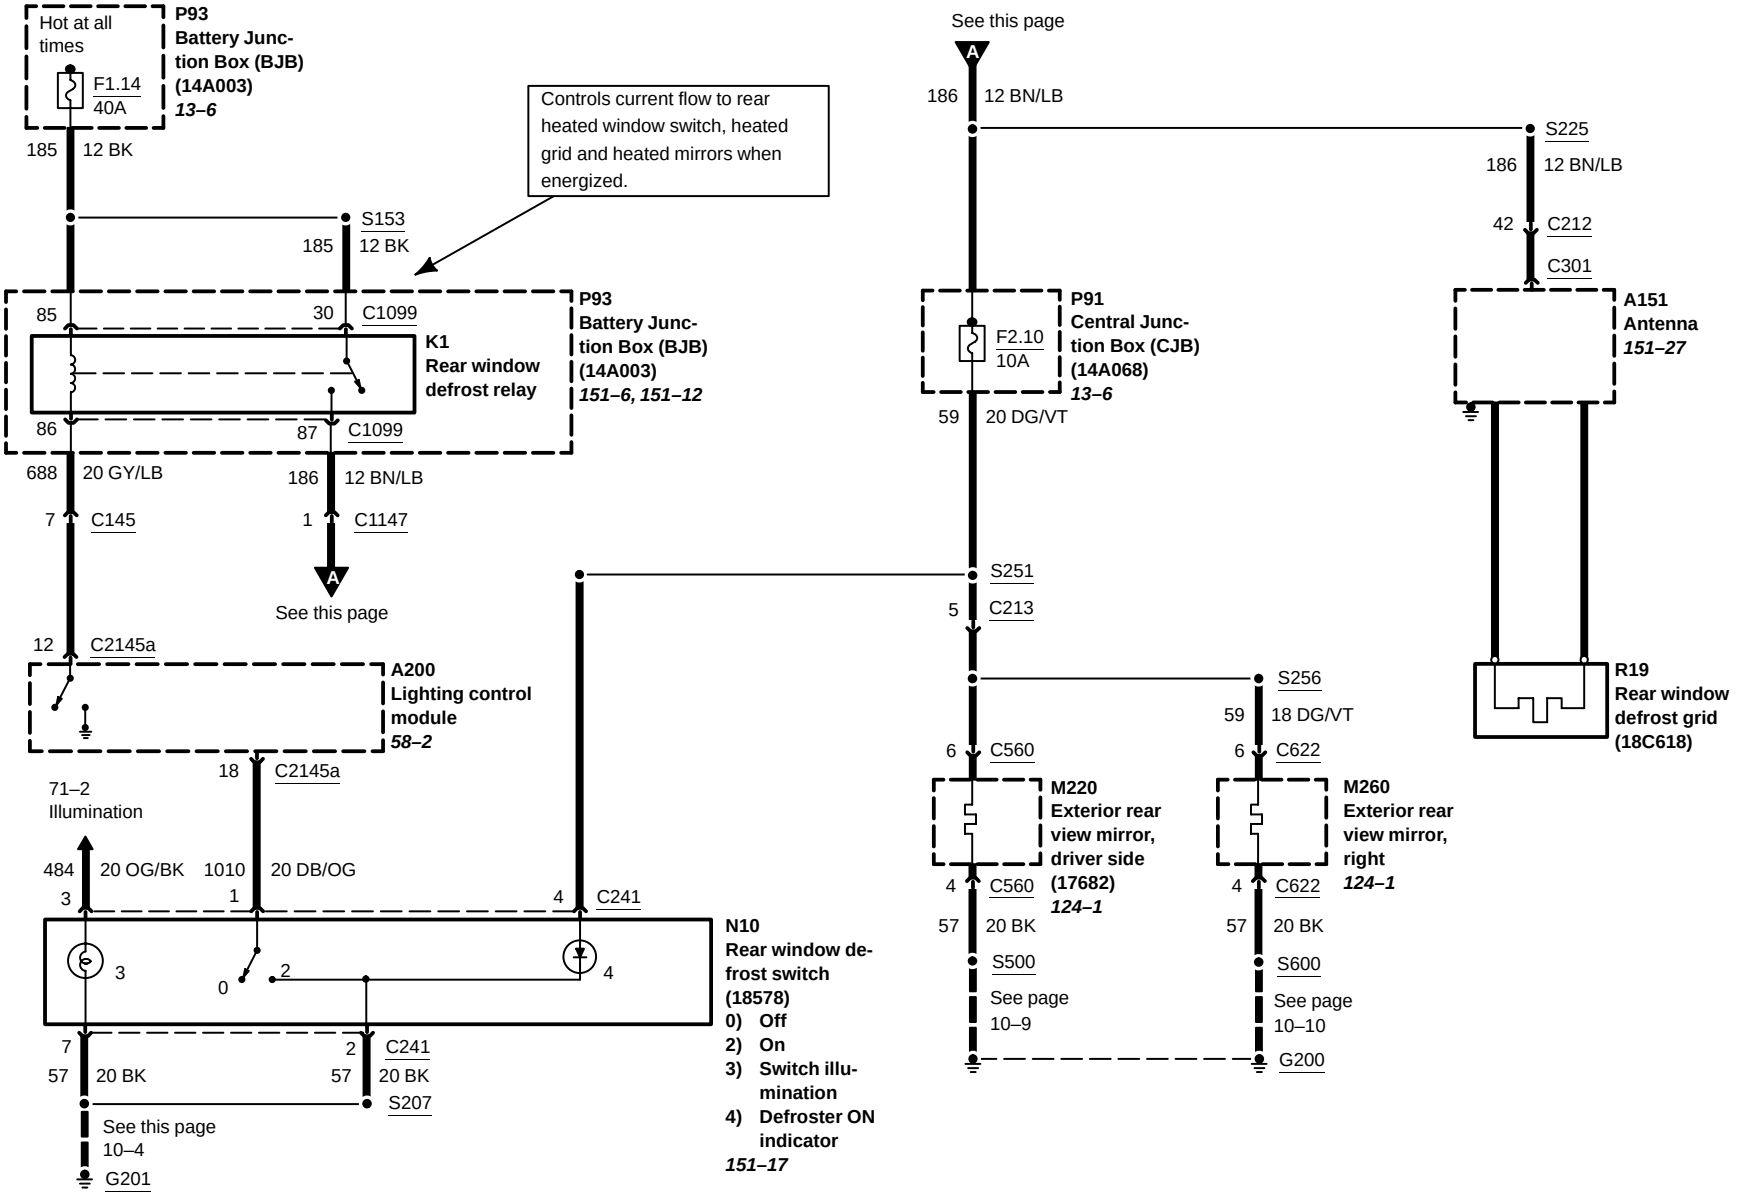
Hot at all times
F1.14
40A
P93
Battery Junction Box (BJB)
(14A003)
13–6
185 12 BK
Controls current flow to rear heated window switch, heated grid and heated mirrors when energized.
S153
185 12 BK
85
30 C1099
K1
Rear window defrost relay
86
87 C1099
P93
Battery Junction Box (BJB)
(14A003)
151–6, 151–12
688 20 GY/LB
186 12 BN/LB
7 C145
1 C1147
A
See this page
12 C2145a
A200
Lighting control module
58–2
18 C2145a
71–2
Illumination
484 20 OG/BK
1010 20 DB/OG
3
1
4 C241
N10
Rear window defrost switch
(18578)
0) Off
2) On
3) Switch illumination
4) Defroster ON indicator
151–17
3
2
0
4
7
57 20 BK
2 C241
57 20 BK
S207
See this page
10–4
G201
See this page
A
186 12 BN/LB
P91
Central Junction Box (CJB)
(14A068)
13–6
F2.10
10A
59 20 DG/VT
S251
5 C213
6 C560
M220
Exterior rear view mirror, driver side
(17682)
124–1
4 C560
57 20 BK
S500
See page
10–9
S256
59 18 DG/VT
6 C622
M260
Exterior rear view mirror, right
124–1
4 C622
57 20 BK
S600
See page
10–10
G200
S225
186 12 BN/LB
42 C212
C301
A151
Antenna
151–27
R19
Rear window defrost grid
(18C618)