Battery Junction Box (BJB) (14A003)

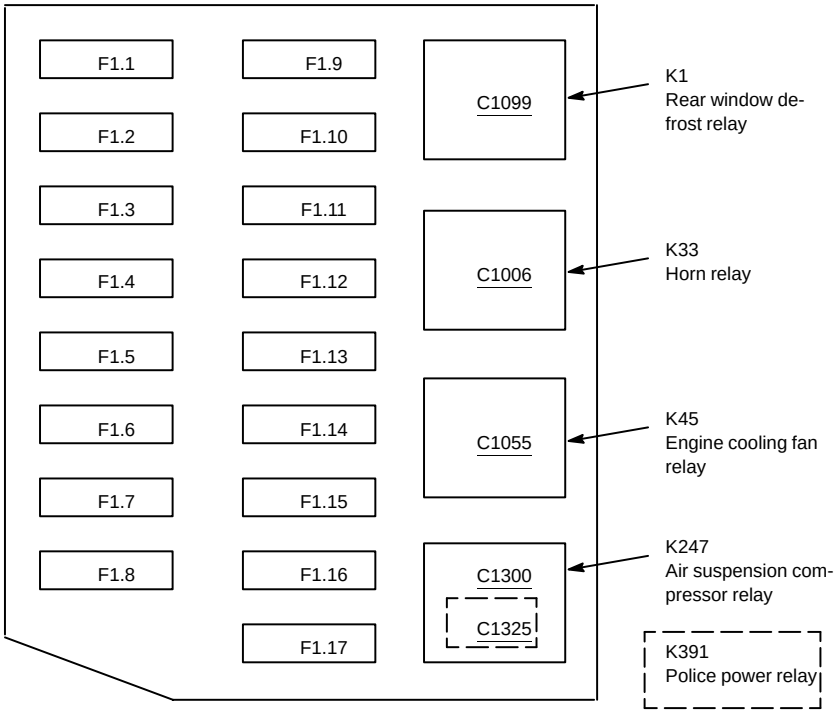

Maxi–fuse	Amps	Circuits protected
F1.1	20	Fuel pump relay
F1.2	30	Starter relay (11450), Generator, Central Junction Box (CJB) (14A068)
F1.3	25	CD changer (18D806), Subwoofer amplifier (18C804), Radio (18806)
F1.4	30	Police power relay
F1.5	15	Horn relay
F1.6	20	Daytime Running Lamps (DRL) module
Fuse	**Amps**	**Circuits protected**
F1.8	30	Air suspension compressor relay, Air suspension module (3C142), Shock absorber solenoid valve, left rear (5A891), Shock absorber solenoid valve, right rear (5A891), Air suspension compressor assembly, Instrument cluster
F1.9	50	Ignition switch (11572), Central Junction Box (CJB) (14A068)
F1.10	50	Central Junction Box (CJB) (14A068), Ignition switch (11572)
F1.11	50	Central Junction Box (CJB) (14A068)
F1.12	30	Powertrain Control Module (PCM) (12A650), PCM power relay, Data Link Connector (DLC) (14489), Natural Gas Vehicle (NGV) module
F1.13	50	High speed fan control relay
F1.14	40	Rear window defrost relay, Lighting control module, Antenna
F1.15	40	ABS control module (2C219)
F1.16	50	Police option fuse holder
Circuit breaker	**Amps**	**Circuits protected**
F1.7	20	Seat adjust switch, driver side front (14A701), Power seat switch, left, Lumbar adjust switch, left front (14B691), Luggage compartment lid release switch 2, Adjustable pedal switch, Lumbar adjust switch, right front, Power seat switch, right, Driver Door Module, Master window/door lock/unlock switch, Luggage compartment lid release switch 1, Window adjust switch, passenger side
F1.17	30	Engine cooling fan relay