without IVD

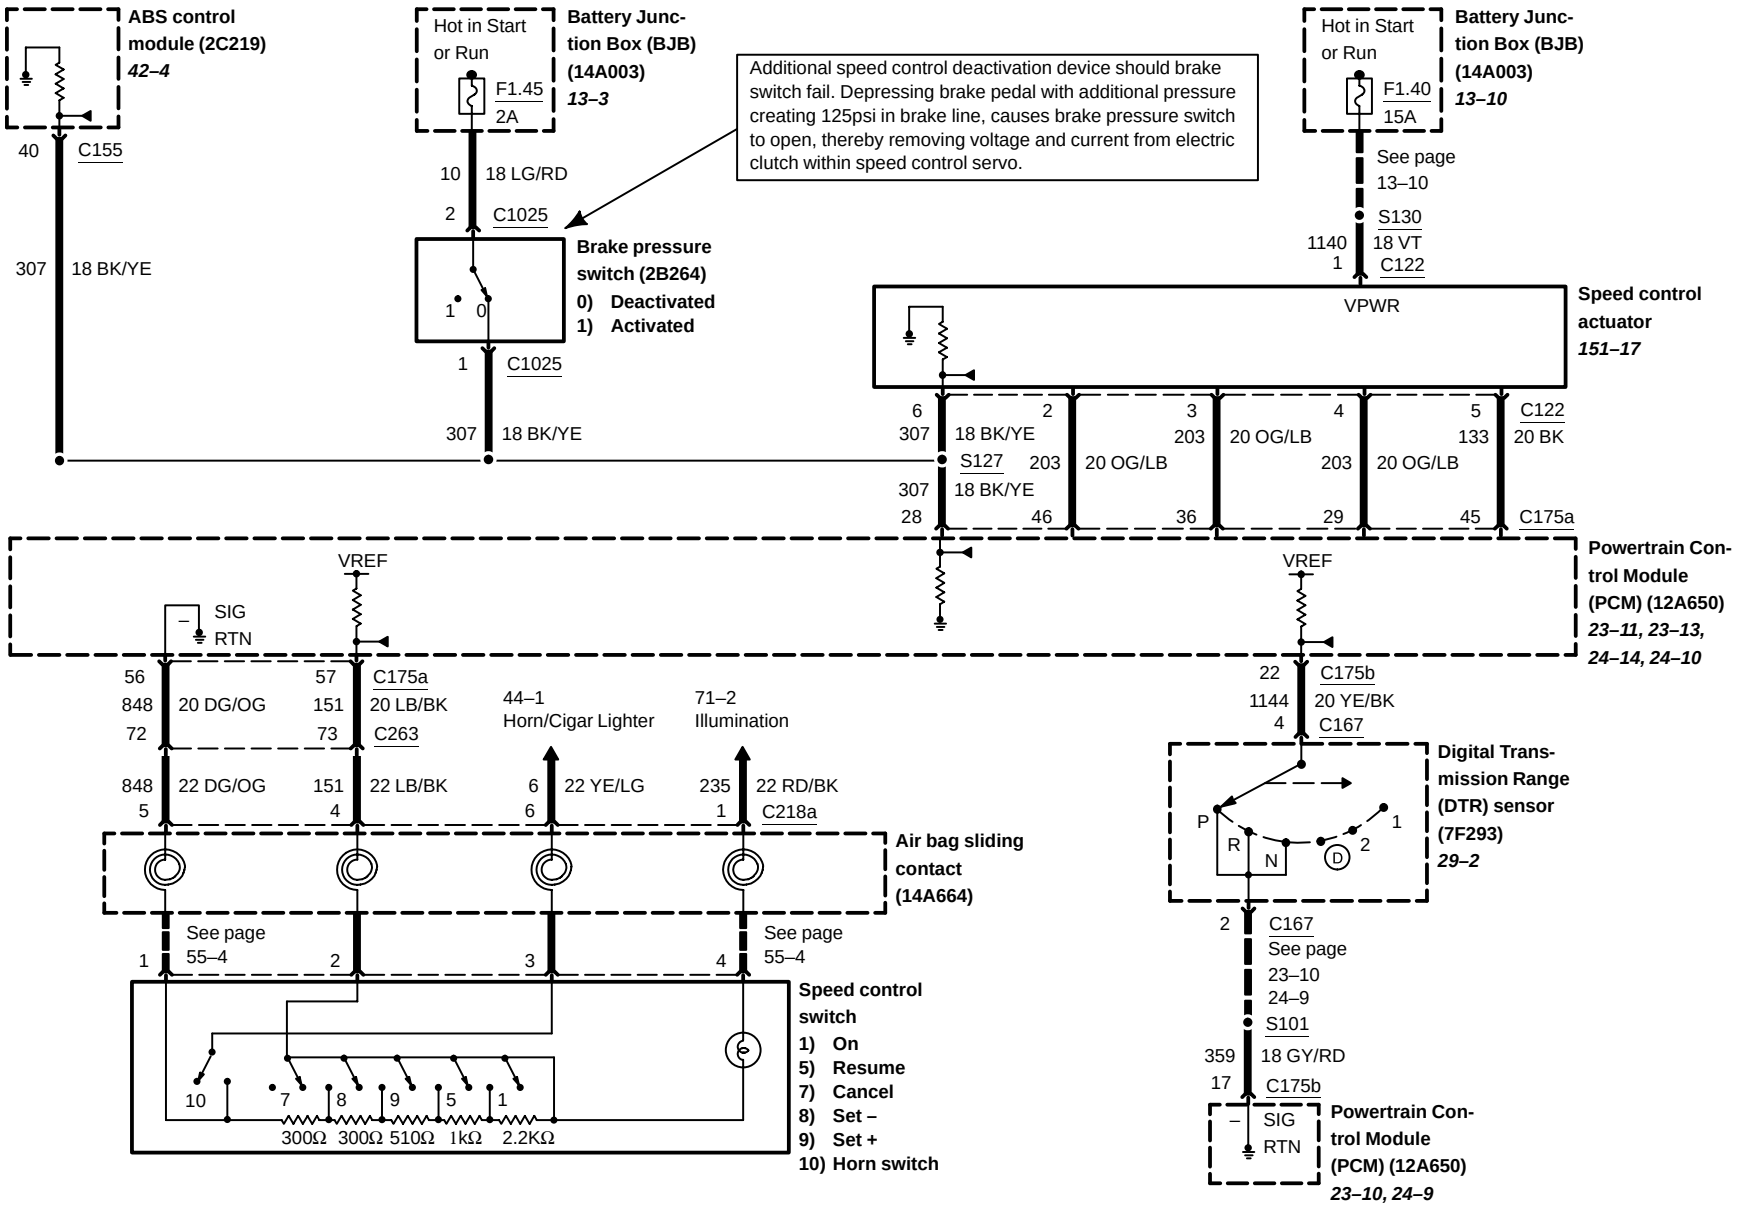
ABS control module (2C219)
42–4
40
C155
307
18 BK/YE
Hot in Start or Run
F1.45
2A
Battery Junction Box (BJB) (14A003)
13–3
10
18 LG/RD
2
C1025
Additional speed control deactivation device should brake switch fail. Depressing brake pedal with additional pressure creating 125psi in brake line, causes brake pressure switch to open, thereby removing voltage and current from electric clutch within speed control servo.
Brake pressure switch (2B264)
0) Deactivated
1) Activated
1
0
1
C1025
307
18 BK/YE
Hot in Start or Run
F1.40
15A
Battery Junction Box (BJB) (14A003)
13–10
See page 13–10
S130
1140
18 VT
1
C122
VPWR
Speed control actuator
151–17
6
307
18 BK/YE
2
S127
203
20 OG/LB
3
203
20 OG/LB
4
203
20 OG/LB
5
133
20 BK
C122
307
18 BK/YE
28
46
36
29
45
C175a
Powertrain Control Module (PCM) (12A650)
23–11, 23–13, 24–14, 24–10
VREF
SIG RTN
VREF
56
848
72
20 DG/OG
57
151
73
C175a
20 LB/BK
C263
44–1
Horn/Cigar Lighter
71–2
Illumination
848
5
22 DG/OG
151
4
22 LB/BK
6
6
22 YE/LG
235
1
22 RD/BK
C218a
Air bag sliding contact (14A664)
See page 55–4
See page 55–4
1
2
3
4
10
7
8
9
5
1
300Ω
300Ω
510Ω
1kΩ
2.2KΩ
Speed control switch
1) On
5) Resume
7) Cancel
8) Set –
9) Set +
10) Horn switch
22
1144
4
C175b
20 YE/BK
C167
Digital Transmission Range (DTR) sensor (7F293)
29–2
P
R
N
D
1
2
2
C167
See page 23–10
24–9
S101
359
18 GY/RD
17
C175b
SIG RTN
Powertrain Control Module (PCM) (12A650)
23–10, 24–9