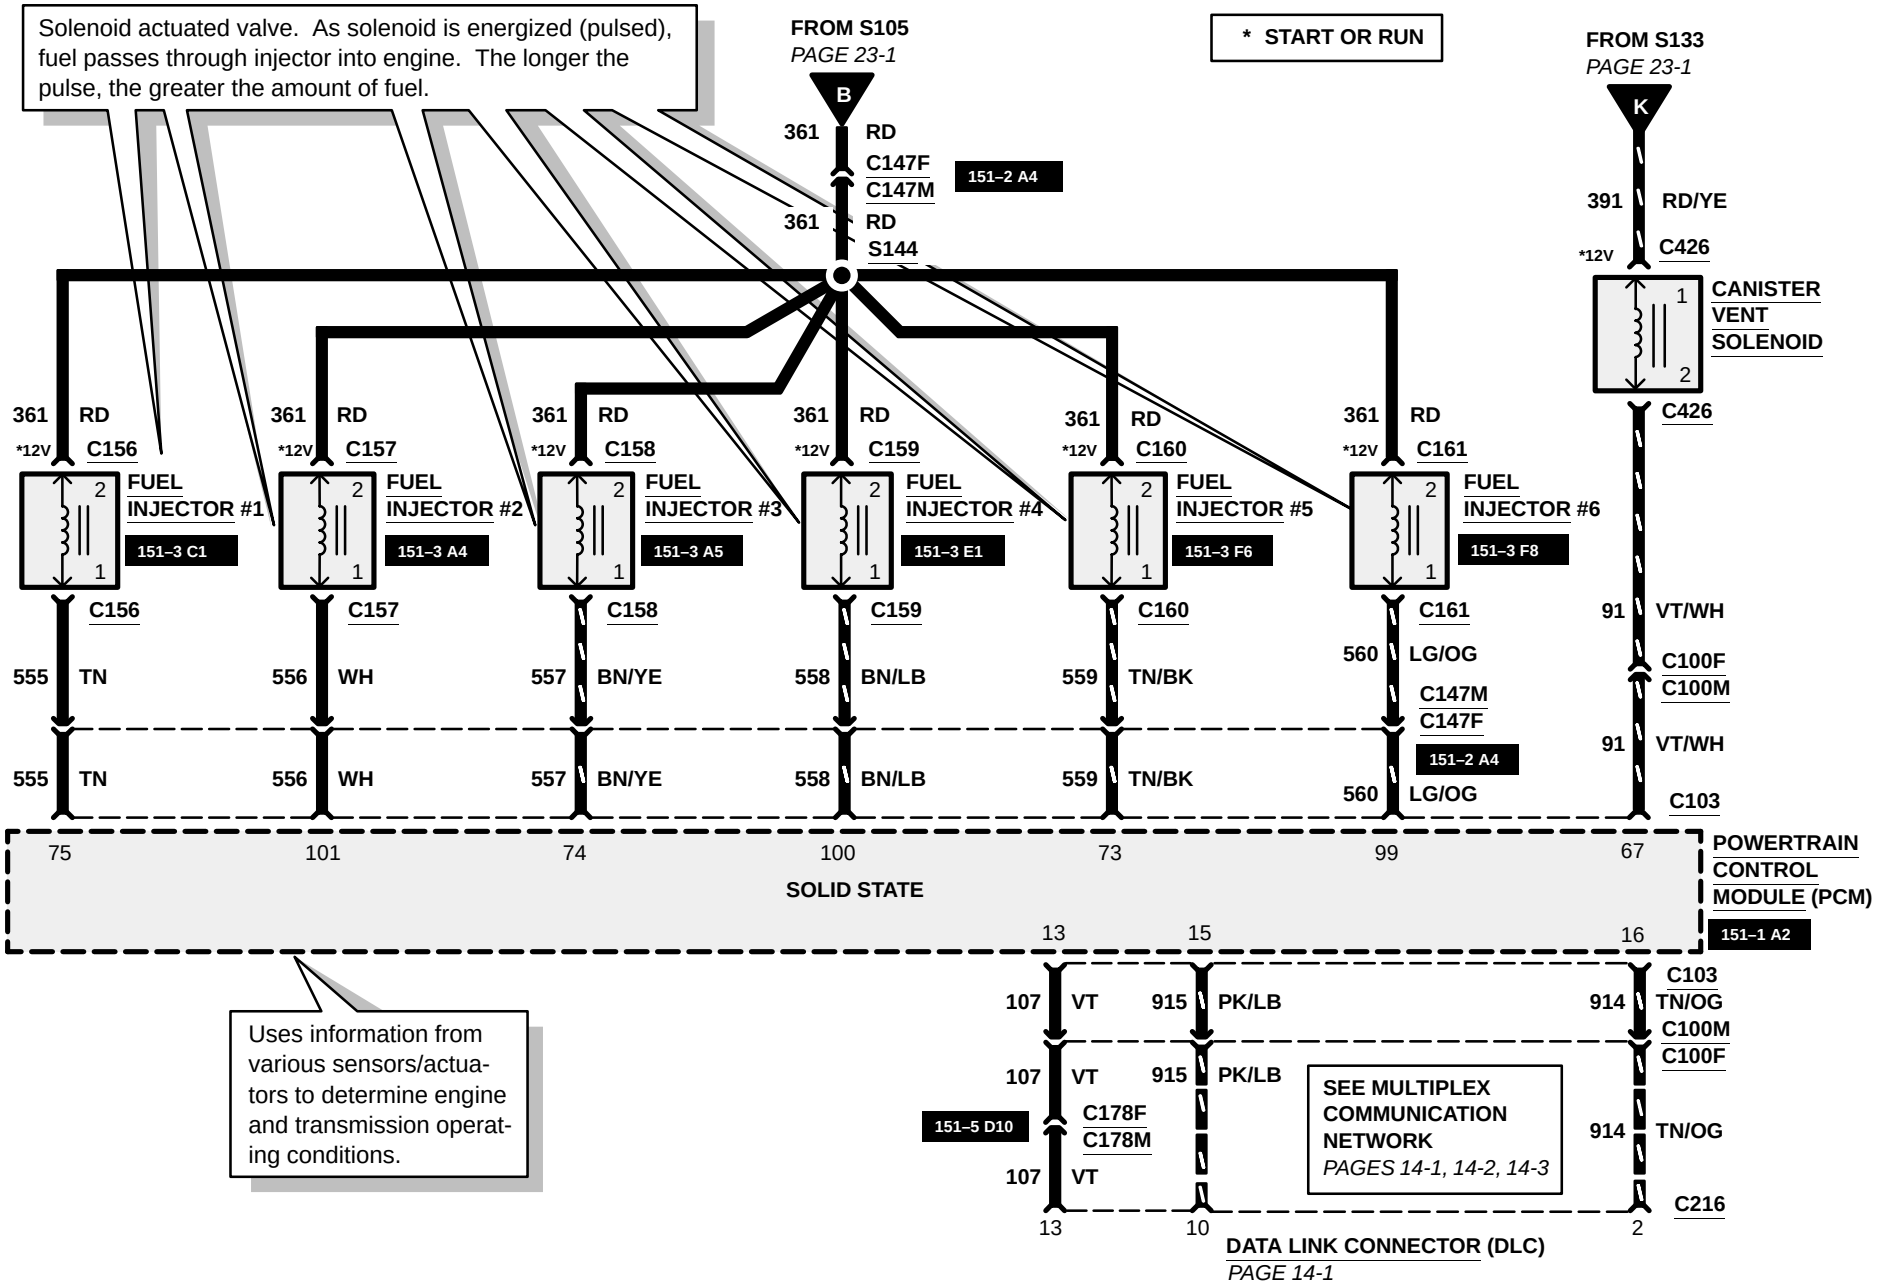
Solenoid actuated valve. As solenoid is energized (pulsed), fuel passes through injector into engine. The longer the pulse, the greater the amount of fuel.
FROM S105
PAGE 23-1
* START OR RUN
FROM S133
PAGE 23-1
B
361 RD
C147F
C147M
151–2 A4
361 RD
S144
K
391 RD/YE
*12V
C426
CANISTER VENT SOLENOID
C426
361 RD *12V C156
361 RD *12V C157
361 RD *12V C158
361 RD *12V C159
361 RD *12V C160
361 RD *12V C161
FUEL INJECTOR #1
151–3 C1
FUEL INJECTOR #2
151–3 A4
FUEL INJECTOR #3
151–3 A5
FUEL INJECTOR #4
151–3 E1
FUEL INJECTOR #5
151–3 F6
FUEL INJECTOR #6
151–3 F8
C156
C157
C158
C159
C160
C161
555 TN
556 WH
557 BN/YE
558 BN/LB
559 TN/BK
560 LG/OG
C147M
C147F
151–2 A4
91 VT/WH
C100F
C100M
91 VT/WH
C103
555 TN
556 WH
557 BN/YE
558 BN/LB
559 TN/BK
560 LG/OG
75 101 74 100 73 99 67
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–1 A2
13 15 16
107 VT
915 PK/LB
C103
914 TN/OG
C100M
C100F
107 VT
915 PK/LB
914 TN/OG
151–5 D10
C178F
C178M
107 VT
SEE MULTIPLEX COMMUNICATION NETWORK
PAGES 14-1, 14-2, 14-3
C216
13 10 2
DATA LINK CONNECTOR (DLC)
PAGE 14-1
Uses information from various sensors/actuators to determine engine and transmission operating conditions.