Seat adjust switch

Schematic

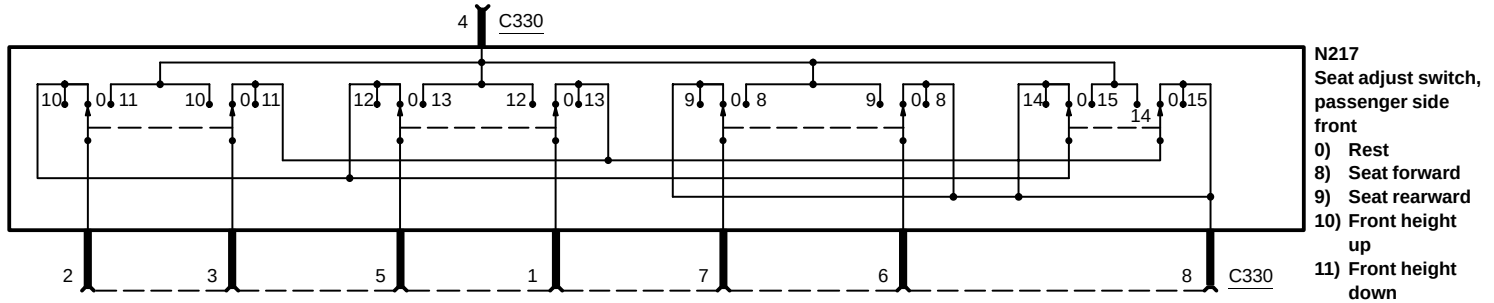

N217
Seat adjust switch, passenger side front
0) Rest
8) Seat forward
9) Seat rearward
10) Front height up
11) Front height down
12) Rear height up
13) Rear height down
14) Seat up
15) Seat down

Terminals

C330

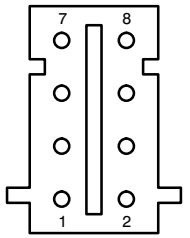

F08245

Component testing procedure

Circuit to test	Connect self–powered test light or ohm-meter to terminals	Move switch to these positions	A good switch will indicate
Forward/Rearward circuit	4 and 6 8 and 7	Rearward	Closed circuit
		Forward	Open circuit
	4 and 7 6 and 8	Rearward	Open circuit
		Forward	Closed circuit
Front up/down circuit	4 and 2 3 and 8	Down	Closed circuit
		Up	Open circuit
	4 and 3 2 and 8	Down	Open circuit
		Up	Closed circuit
Rear up/down circuit	4 and 5 8 and 1	Down	Closed circuit
		Up	Open circuit
	1 and 4 5 and 8	Down	Open circuit
		Up	Closed circuit
Up/Down Circuit	4 and 1 4 and 3	Up	Closed circuit
	4 and 5 4 and 2	Down	Closed circuit