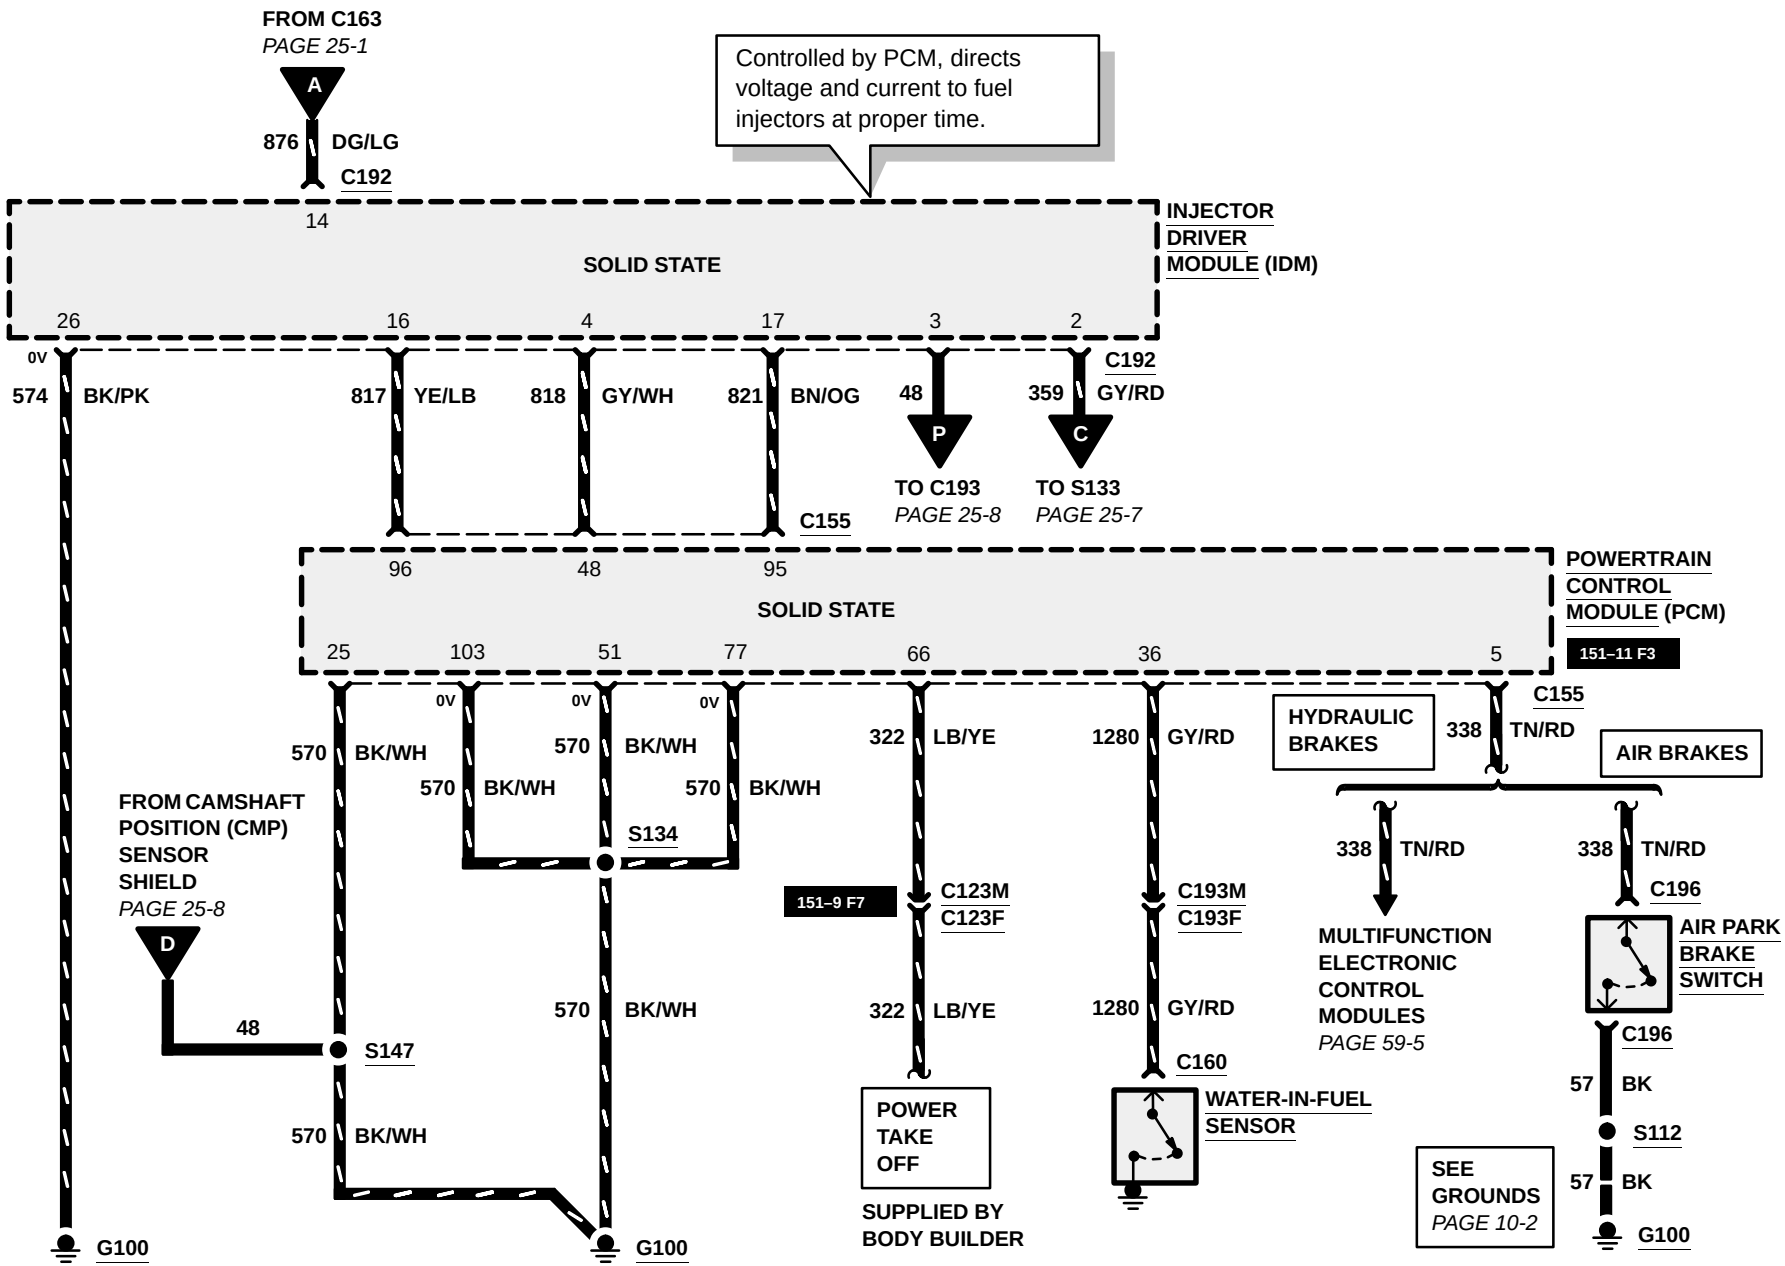
FROM C163
PAGE 25-1
A
876 DG/LG
C192
14
Controlled by PCM, directs voltage and current to fuel injectors at proper time.
SOLID STATE
INJECTOR DRIVER MODULE (IDM)
26 16 4 17 3 2
0V
574 BK/PK
817 YE/LB
818 GY/WH
821 BN/OG
48
359 GY/RD
C192
P
C
TO C193
PAGE 25-8
TO S133
PAGE 25-7
C155
96 48 95
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 F3
25 103 51 77 66 36 5
0V
570 BK/WH
570 BK/WH
570 BK/WH
570 BK/WH
S134
322 LB/YE
1280 GY/RD
HYDRAULIC BRAKES
338 TN/RD
C155
AIR BRAKES
FROM CAMSHAFT POSITION (CMP) SENSOR SHIELD
PAGE 25-8
D
48
S147
570 BK/WH
570 BK/WH
151–9 F7
C123M
C123F
322 LB/YE
C193M
C193F
1280 GY/RD
C160
338 TN/RD
338 TN/RD
C196
MULTIFUNCTION ELECTRONIC CONTROL MODULES
PAGE 59-5
AIR PARK BRAKE SWITCH
C196
57 BK
S112
57 BK
G100
POWER TAKE OFF
SUPPLIED BY BODY BUILDER
WATER-IN-FUEL SENSOR
SEE GROUNDS
PAGE 10-2
G100
G100