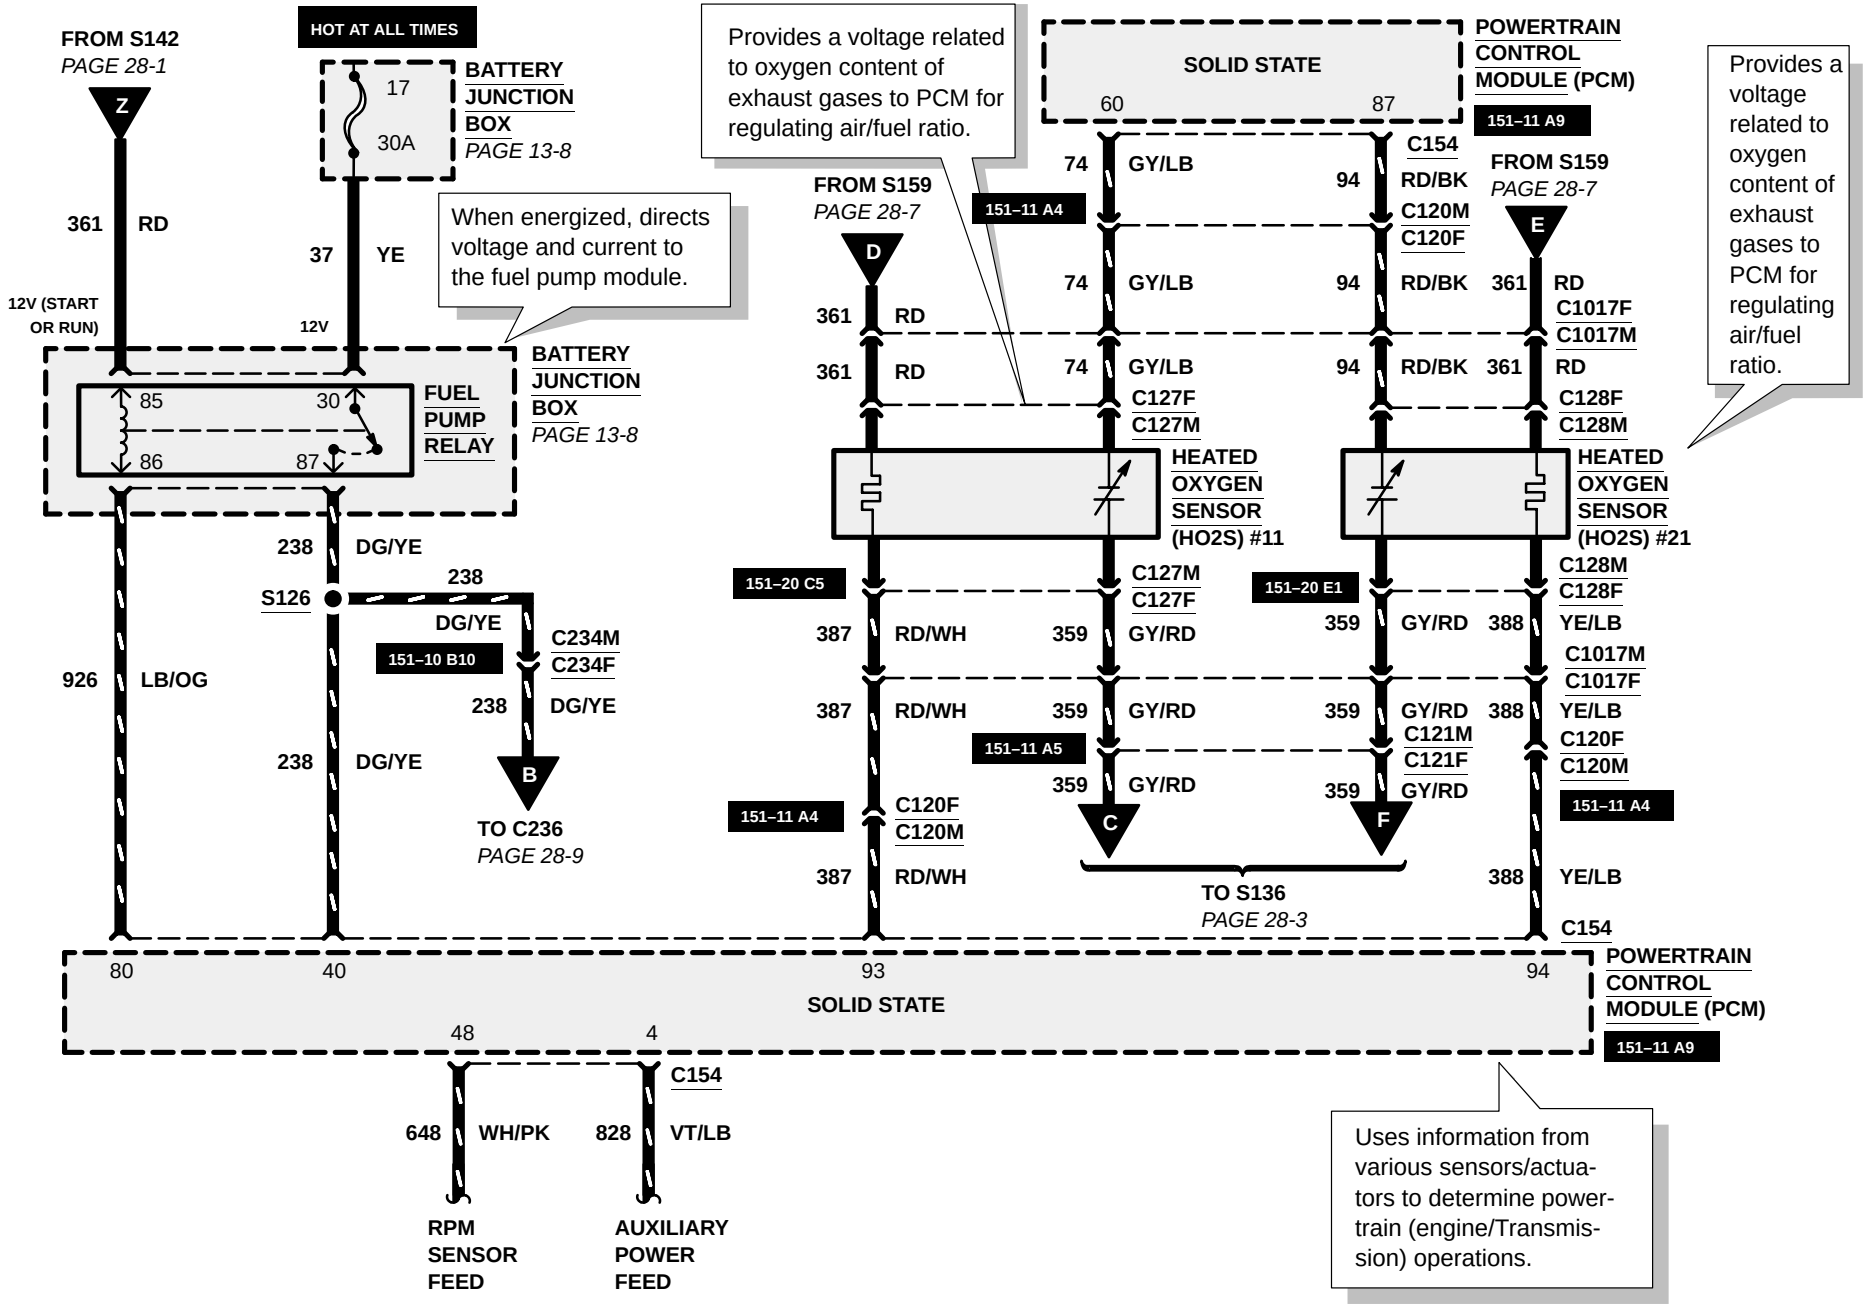
FROM S142
PAGE 28-1
Z
HOT AT ALL TIMES
17
30A
BATTERY JUNCTION BOX
PAGE 13-8
361 RD
37 YE
12V (START OR RUN)
12V
When energized, directs voltage and current to the fuel pump module.
85
30
86
87
FUEL PUMP RELAY
BATTERY JUNCTION BOX
PAGE 13-8
238 DG/YE
S126
238 DG/YE
926 LB/OG
151–10 B10
C234M
C234F
238 DG/YE
238 DG/YE
B
TO C236
PAGE 28-9
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.
SOLID STATE
60
87
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
FROM S159
PAGE 28-7
151–11 A4
74 GY/LB
94 RD/BK
C154
C120M
C120F
D
74 GY/LB
94 RD/BK
361 RD
E
361 RD
C1017F
C1017M
361 RD
74 GY/LB
94 RD/BK
361 RD
C127F
C127M
C128F
C128M
HEATED OXYGEN SENSOR (HO2S) #11
HEATED OXYGEN SENSOR (HO2S) #21
151–20 C5
C127M
C127F
151–20 E1
C128M
C128F
387 RD/WH
359 GY/RD
359 GY/RD
388 YE/LB
C1017M
C1017F
387 RD/WH
359 GY/RD
359 GY/RD
388 YE/LB
151–11 A5
C121M
C121F
C120F
C120M
359 GY/RD
359 GY/RD
151–11 A4
151–11 A4
C
F
C120F
C120M
387 RD/WH
TO S136
PAGE 28-3
388 YE/LB
C154
80
40
93
94
POWERTRAIN CONTROL MODULE (PCM)
SOLID STATE
151–11 A9
48
4
C154
648 WH/PK
828 VT/LB
RPM SENSOR FEED
AUXILIARY POWER FEED
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.
Uses information from various sensors/actuators to determine powertrain (engine/Transmission) operations.