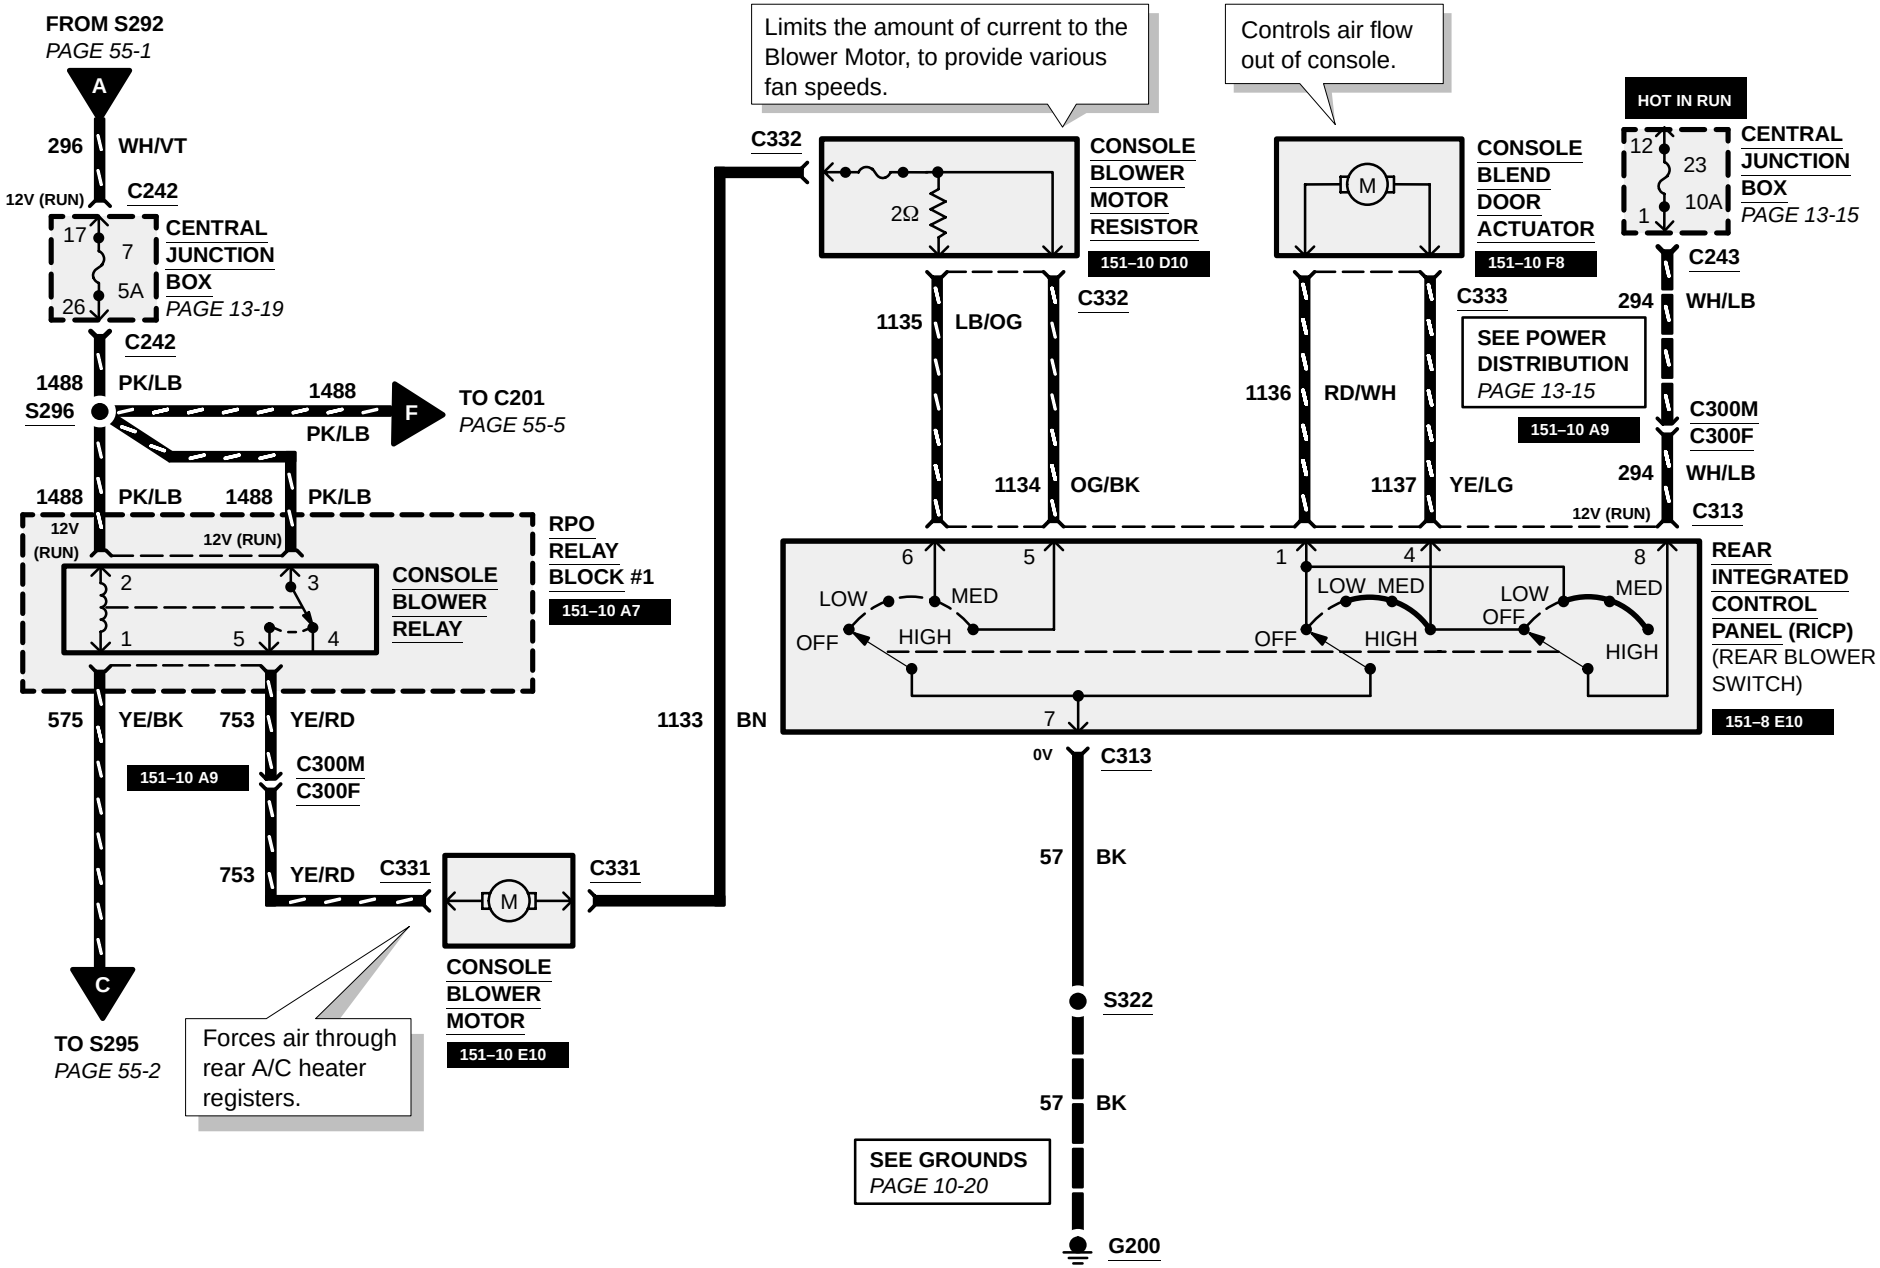
FROM S292
PAGE 55-1
A
296 WH/VT
12V (RUN) C242
CENTRAL JUNCTION BOX
PAGE 13-19
17
7
5A
26
C242
1488 PK/LB
S296
1488 PK/LB
TO C201
PAGE 55-5
1488 PK/LB
1488 PK/LB
12V (RUN)
12V (RUN)
RPO RELAY BLOCK #1
151–10 A7
CONSOLE BLOWER RELAY
2
3
1
5
4
575 YE/BK
753 YE/RD
151–10 A9
C300M
C300F
753 YE/RD
C331
C331
CONSOLE BLOWER MOTOR
151–10 E10
C
TO S295
PAGE 55-2
Forces air through rear A/C heater registers.
1133 BN
C332
Limits the amount of current to the Blower Motor, to provide various fan speeds.
2Ω
CONSOLE BLOWER MOTOR RESISTOR
151–10 D10
1135 LB/OG
C332
1134 OG/BK
Controls air flow out of console.
CONSOLE BLEND DOOR ACTUATOR
151–10 F8
C333
SEE POWER DISTRIBUTION
PAGE 13-15
151–10 A9
1136 RD/WH
1137 YE/LG
HOT IN RUN
12
23
1
10A
CENTRAL JUNCTION BOX
PAGE 13-15
C243
294 WH/LB
C300M
C300F
294 WH/LB
12V (RUN)
C313
6
5
1
4
8
LOW
MED
OFF
HIGH
LOW MED
OFF
HIGH
LOW
MED
OFF
HIGH
7
REAR INTEGRATED CONTROL PANEL (RICP)
(REAR BLOWER SWITCH)
151–8 E10
0V C313
57 BK
S322
57 BK
SEE GROUNDS
PAGE 10-20
G200