3.8L

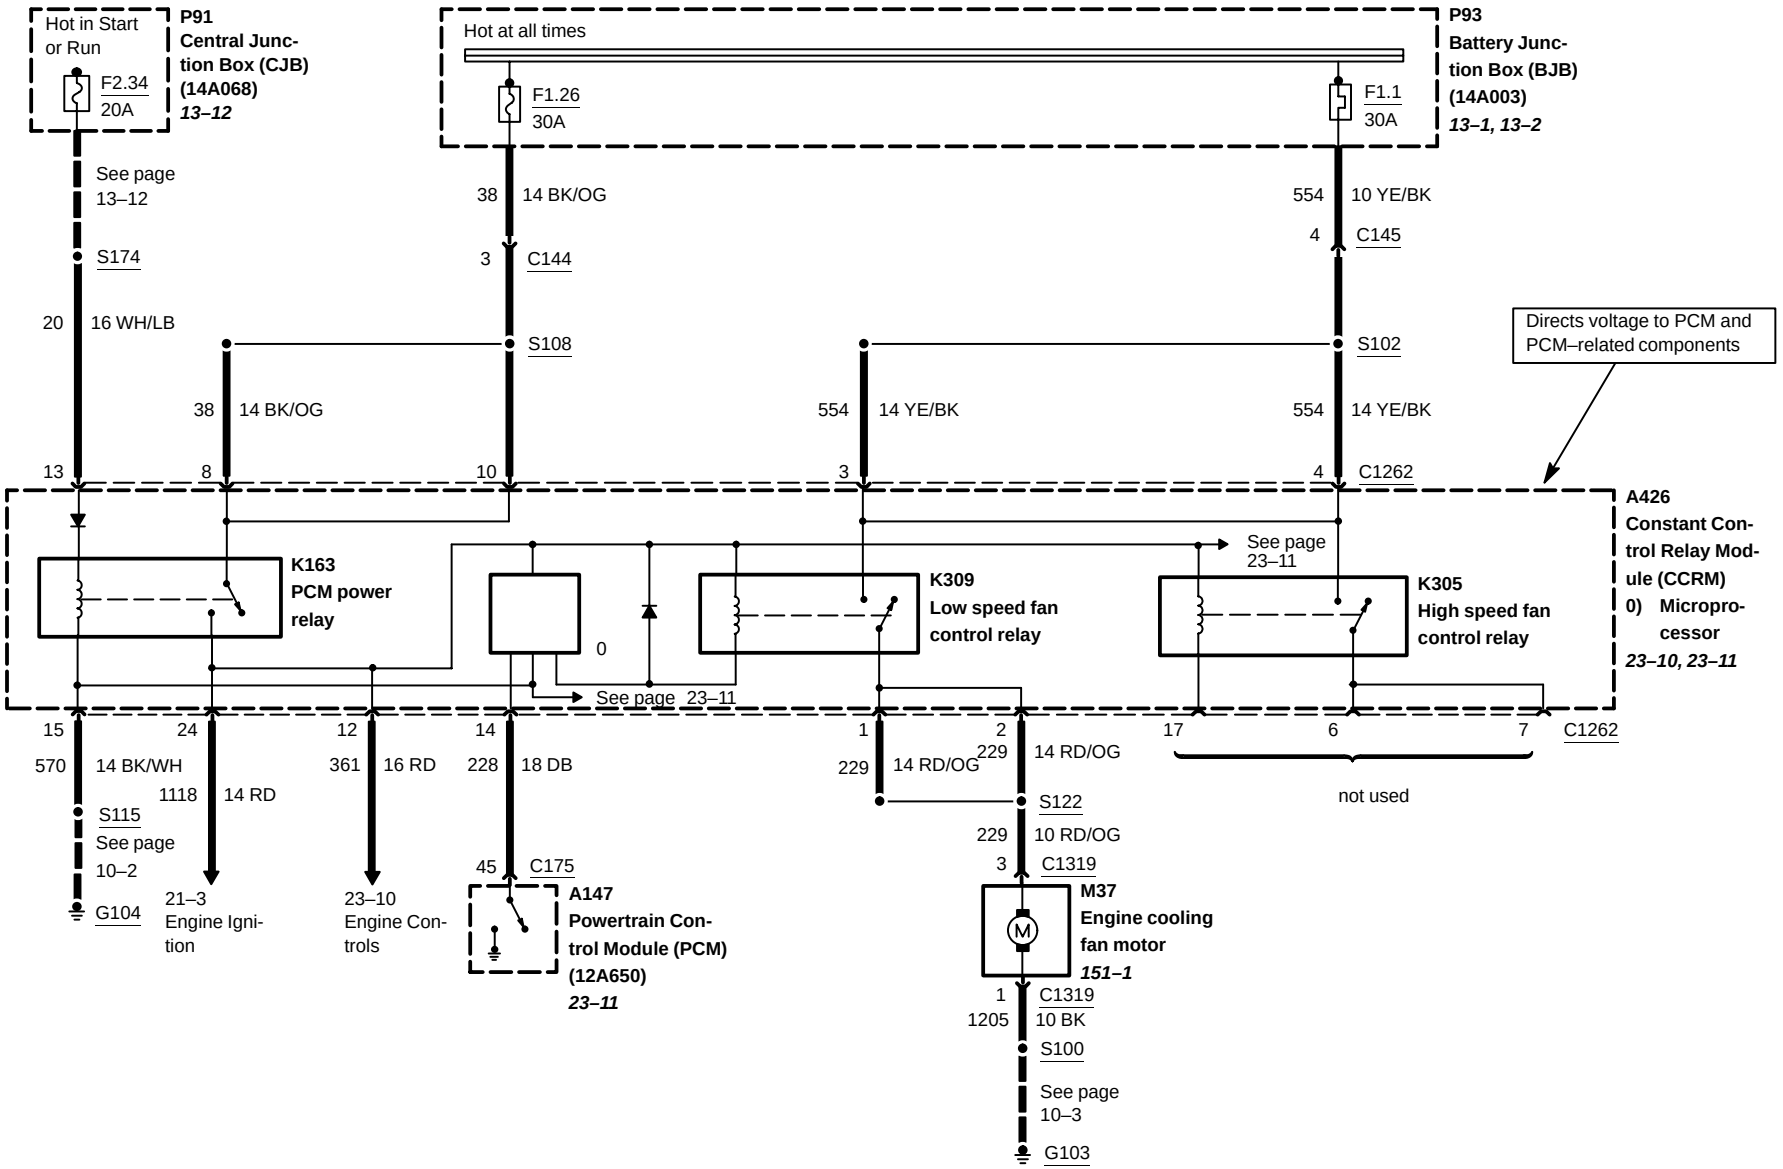
Hot in Start or Run
P91 Central Junction Box (CJB) (14A068) 13–12
F2.34 20A
See page 13–12
S174
20 16 WH/LB
Hot at all times
F1.26 30A
38 14 BK/OG
3 C144
P93 Battery Junction Box (BJB) (14A003) 13–1, 13–2
F1.1 30A
554 10 YE/BK
4 C145
Directs voltage to PCM and PCM–related components
S108
S102
38 14 BK/OG
554 14 YE/BK
554 14 YE/BK
13 8 10 3 4 C1262
A426 Constant Control Relay Module (CCRM)
0) Microprocessor
23–10, 23–11
K163 PCM power relay
0
K309 Low speed fan control relay
K305 High speed fan control relay
See page 23–11
See page 23–11
15 24 12 14 1 2 17 6 7 C1262
570 14 BK/WH
1118 14 RD
361 16 RD
228 18 DB
229 14 RD/OG
229 14 RD/OG
not used
S115
See page 10–2
G104
21–3 Engine Ignition
23–10 Engine Controls
45 C175
A147 Powertrain Control Module (PCM) (12A650) 23–11
S122
229 10 RD/OG
3 C1319
M37 Engine cooling fan motor 151–1
1 C1319
1205 10 BK
S100
See page 10–3
G103