C500 (BK)

14631

Key pad switch assembly

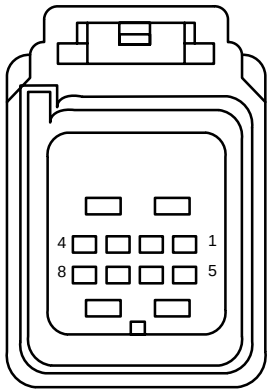

F12165

Pin	Circuit	Circuit function
1	78 (LB/YE)	signal, Key pad button 1/2, Key pad button 3/4, Key pad button 5/6
2	1458 (VT/WH)	Illumination, feed
3	121 (YE/BK)	signal, Key pad button 5/6, Key pad button 7/8
4	–	not used
5	1334 (OG/WH)	Illumination, Switched ground
6	1205 (BK)	Ground
7	79 (LG/RD)	signal, Key pad button 3/4, Key pad button 9/0
8	–	not used

C502

14631

Lock cylinder switch, left

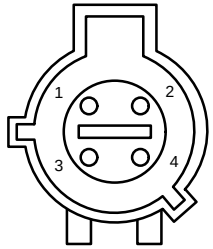

F04251

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	–	not used
3	1313 (LB/BK)	Front Electronic Module (FEM) (13C788), disarm, signal
4	–	not used

C506 (WH)

14631

Door entry lamp, left front (13776)

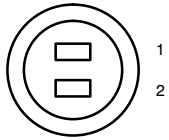

F02086

Pin	Circuit	Circuit function
1	1334 (OG/WH)	Switched ground
2	1458 (VT/WH)	Voltage supplied at all times (overload protected)