C503

14B121

N440
Memory set switch

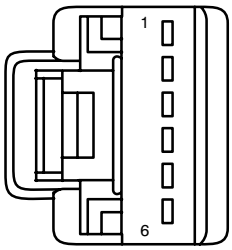

F006179

Pin	Circuit	Circuit Function
1	8-AH32 (WH/BU)	Sensor signal
2	8-AH27 (WH)	Sensor signal
3	29S-AH27 (OG/YE)	Voltage supplied at all times (overload protected), Switched
4	31-AH27 (BK)	Ground
5	7S-AH27 (YE)	Voltage D.C. supplied at all times (sensor), Switched
6	8-AH31 (WH/RD)	Sensor signal

C504

14B121

N447
Master window adjust switch

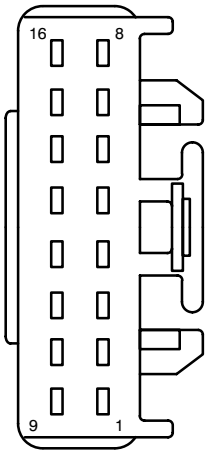

F16029

Pin	Circuit	Circuit Function
1	–	not used
2	7S-AJ47 (YE/BK)	Voltage D.C. supplied at all times (sensor), Switched
3	7S-AJ48 (YE/VT)	Voltage D.C. supplied at all times (sensor), Switched
4	7S-AJ16 (YE/BK)	Voltage D.C. supplied at all times (sensor), Switched
5	7S-AJ20 (YE/BU)	Voltage D.C. supplied at all times (sensor), Switched
6	7S-AJ40 (YE/GN)	Voltage D.C. supplied at all times (sensor), Switched
7	7S-AJ41 (YE/BK)	Voltage D.C. supplied at all times (sensor), Switched
8	–	not used
9	7-AJ7 (YE/RD)	Voltage D.C. supplied at all times (sensor)
10	7S-AJ52 (YE)	Voltage D.C. supplied at all times (sensor), Switched
11	29S-LH14 (OG/YE)	Voltage supplied at all times (overload protected), Switched
12	7S-AJ51 (YE/RD)	Voltage D.C. supplied at all times (sensor), Switched
13	7S-AJ49 (YE/GN)	Voltage D.C. supplied at all times (sensor), Switched
14	31-AJ80 (BK)	Ground
15	7S-AJ50 (YE/BU)	Voltage D.C. supplied at all times (sensor), Switched
16	–	not used