Pickup

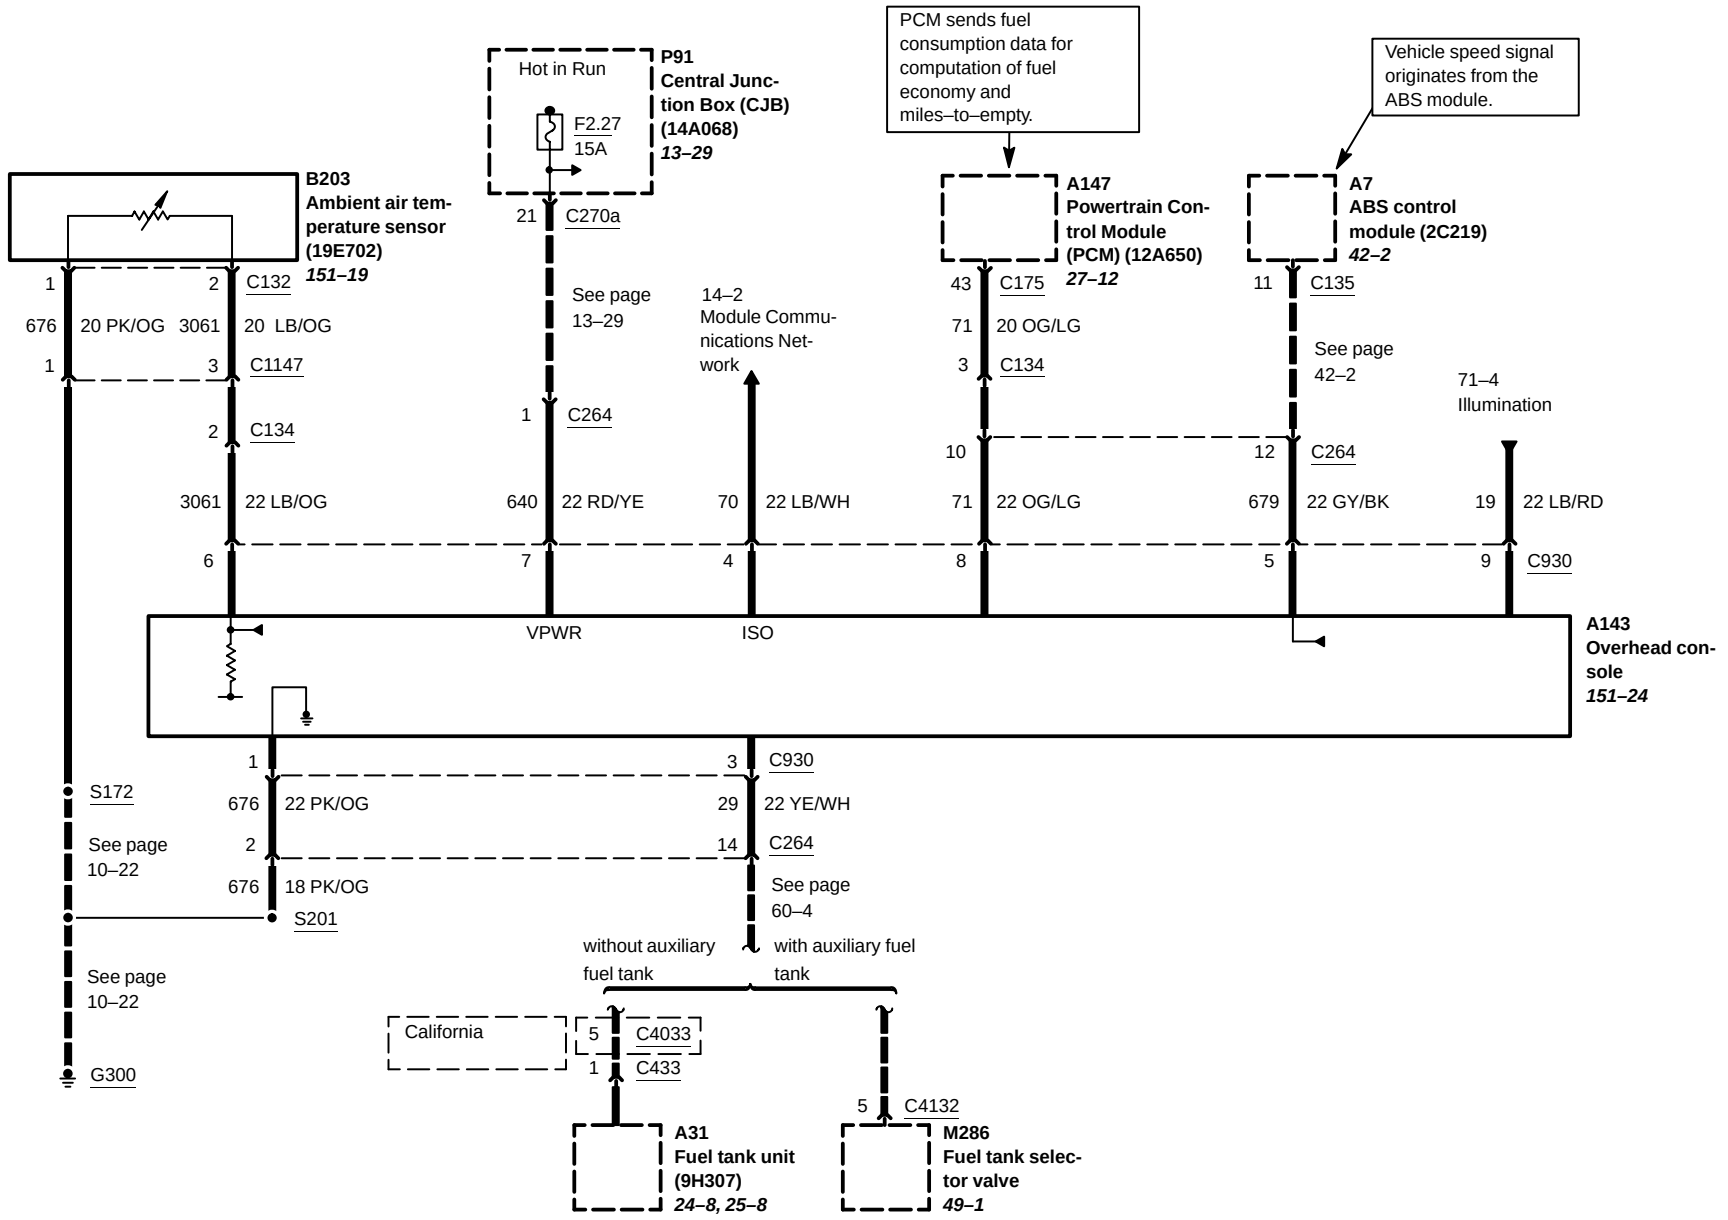
PCM sends fuel consumption data for computation of fuel economy and miles–to–empty.
Vehicle speed signal originates from the ABS module.
Hot in Run
F2.27
15A
P91
Central Junction Box (CJB) (14A068)
13–29
B203
Ambient air temperature sensor (19E702)
151–19
A147
Powertrain Control Module (PCM) (12A650)
27–12
A7
ABS control module (2C219)
42–2
1
2
C132
676
20 PK/OG
3061
20 LB/OG
1
3
C1147
2
C134
21
C270a
See page 13–29
1
C264
14–2
Module Communications Network
43
C175
71
20 OG/LG
3
C134
11
C135
See page 42–2
71–4
Illumination
10
12
C264
3061
22 LB/OG
640
22 RD/YE
70
22 LB/WH
71
22 OG/LG
679
22 GY/BK
19
22 LB/RD
6
7
4
8
5
9
C930
VPWR
ISO
A143
Overhead console
151–24
1
3
C930
676
22 PK/OG
29
22 YE/WH
2
14
C264
676
18 PK/OG
S201
See page 60–4
S172
See page 10–22
See page 10–22
G300
without auxiliary fuel tank
with auxiliary fuel tank
California
5
C4033
1
C433
5
C4132
A31
Fuel tank unit (9H307)
24–8, 25–8
M286
Fuel tank selector valve
49–1