C320 (BK)

14N104

N439
Radio control, rear

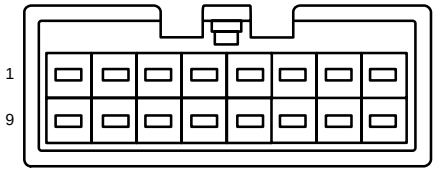

F16061

Pin	Circuit	Circuit function
1	RB15 (BU)	Speaker, right rear (18808)
2	RA46 (RD/BU)	Radio (18806), to Radio control, rear
3	RA21 (BU/BK)	Speaker, right rear (18808)
4	–	not used
5	RA12 (BU/YE)	Speaker, left rear (18808)
6	RA44 (BU/WH)	Radio (18806), to Radio control, rear
7	RB11 (GN)	Speaker, left rear (18808)
8	–	not used
9	RB04 (YE/RD)	Radio to CD changer
10	RB37 (BN/WH)	Voltage supplied at all times (overload protected)
11	RBE2 (BK)	Ground
12	RB36 (LG)	Radio to CD changer
13	RB35 (VT)	Radio to CD changer
14	–	not used
15	LF94 (PK/BK)	Illumination, Ground
16	LF04 (PK)	Illumination, feed

C321

14N104

N274
Seat heater switch,
driver side



F02129

Pin	Circuit	Circuit function
1	SB10 (WH/RD)	Power window relay, switched output
2	SBE5 (BK)	Ground

C322 (WH)

14N104

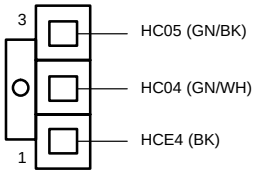

F03056

19D887

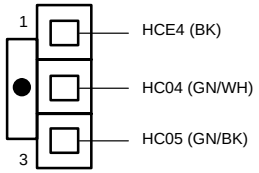

F03056

C323

14A333

N275
Seat heater switch,
passenger side



F02129

Pin	Circuit	Circuit function
1	SB11 (WH/RD)	Power window relay, switched output
2	SBE6 (BK)	Ground

C327 (GY)

14A507

M213
Door lock actuator
assembly, right slid-
ing door



F04157

Pin	Circuit	Circuit function
1	PH50 (GN/YE)	Door lock, output
2	PH31 (WH/RD)	Door unlock, output
3	SC24 (VT)	Door unlock, switch sense
4	PH46 (GN/YE)	Door lock, output