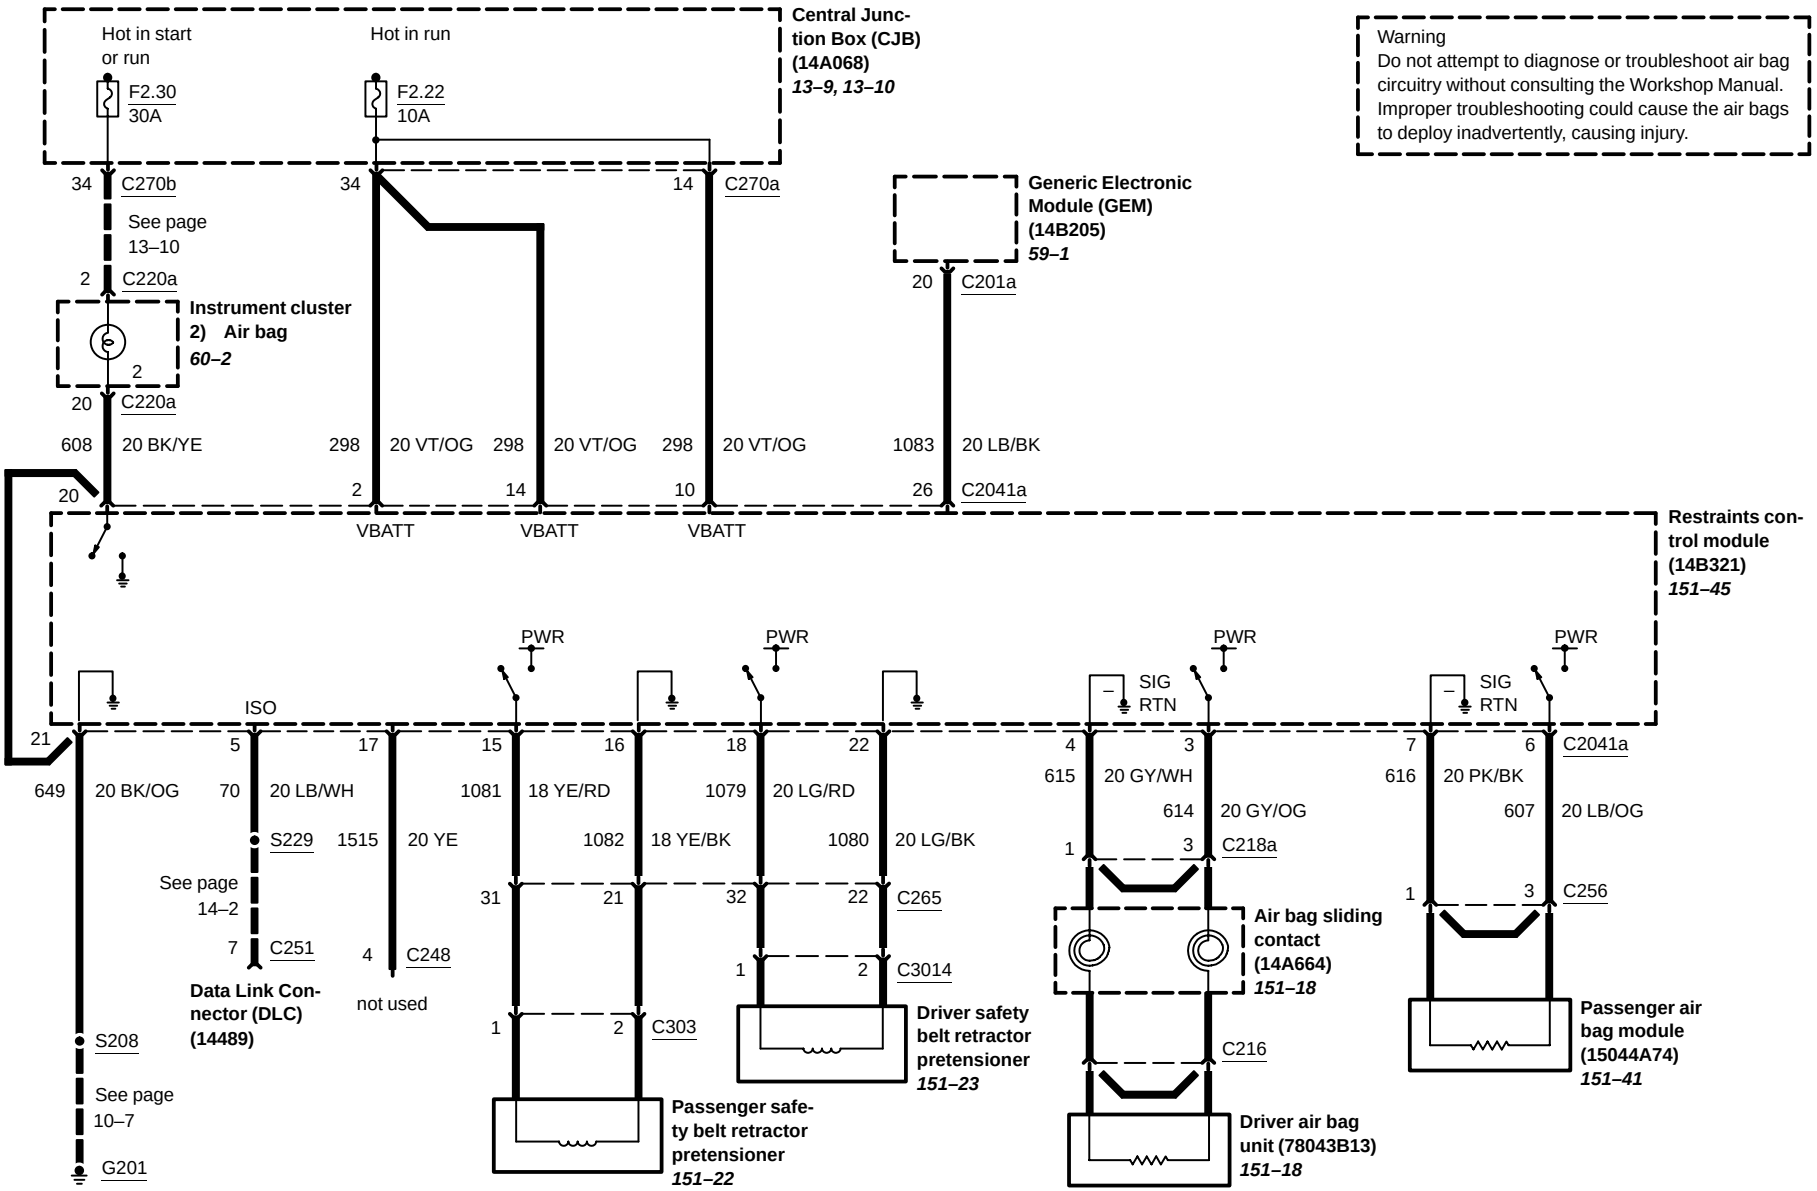
Central Junction Box (CJB) (14A068) 13–9, 13–10
Hot in start or run
Hot in run
F2.30 30A
F2.22 10A
34 C270b
34
14 C270a
See page 13–10
2 C220a
Instrument cluster 2) Air bag 60–2
2
20 C220a
608 20 BK/YE
298 20 VT/OG
298 20 VT/OG
298 20 VT/OG
2
14
10
VBATT
VBATT
VBATT
Generic Electronic Module (GEM) (14B205) 59–1
20 C201a
1083 20 LB/BK
26 C2041a
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
Restraints control module (14B321) 151–45
20
21
649 20 BK/OG
ISO
5
70 20 LB/WH
17
1515 20 YE
PWR
15
1081 18 YE/RD
16
1082 18 YE/BK
PWR
18
1079 20 LG/RD
22
1080 20 LG/BK
SIG RTN
4
615 20 GY/WH
PWR
3
614 20 GY/OG
SIG RTN
7
616 20 PK/BK
PWR
6
607 20 LB/OG
C2041a
S229
See page 14–2
7 C251
Data Link Connector (DLC) (14489)
4 C248
not used
31
21 C265
32
22 C265
1 C3014
2 C3014
Driver safety belt retractor pretensioner 151–23
1 C218a
3 C218a
Air bag sliding contact (14A664) 151–18
C216
Driver air bag unit (78043B13) 151–18
1 C256
3 C256
Passenger air bag module (15044A74) 151–41
1 C303
2 C303
Passenger safety belt retractor pretensioner 151–22
S208
See page 10–7
G201