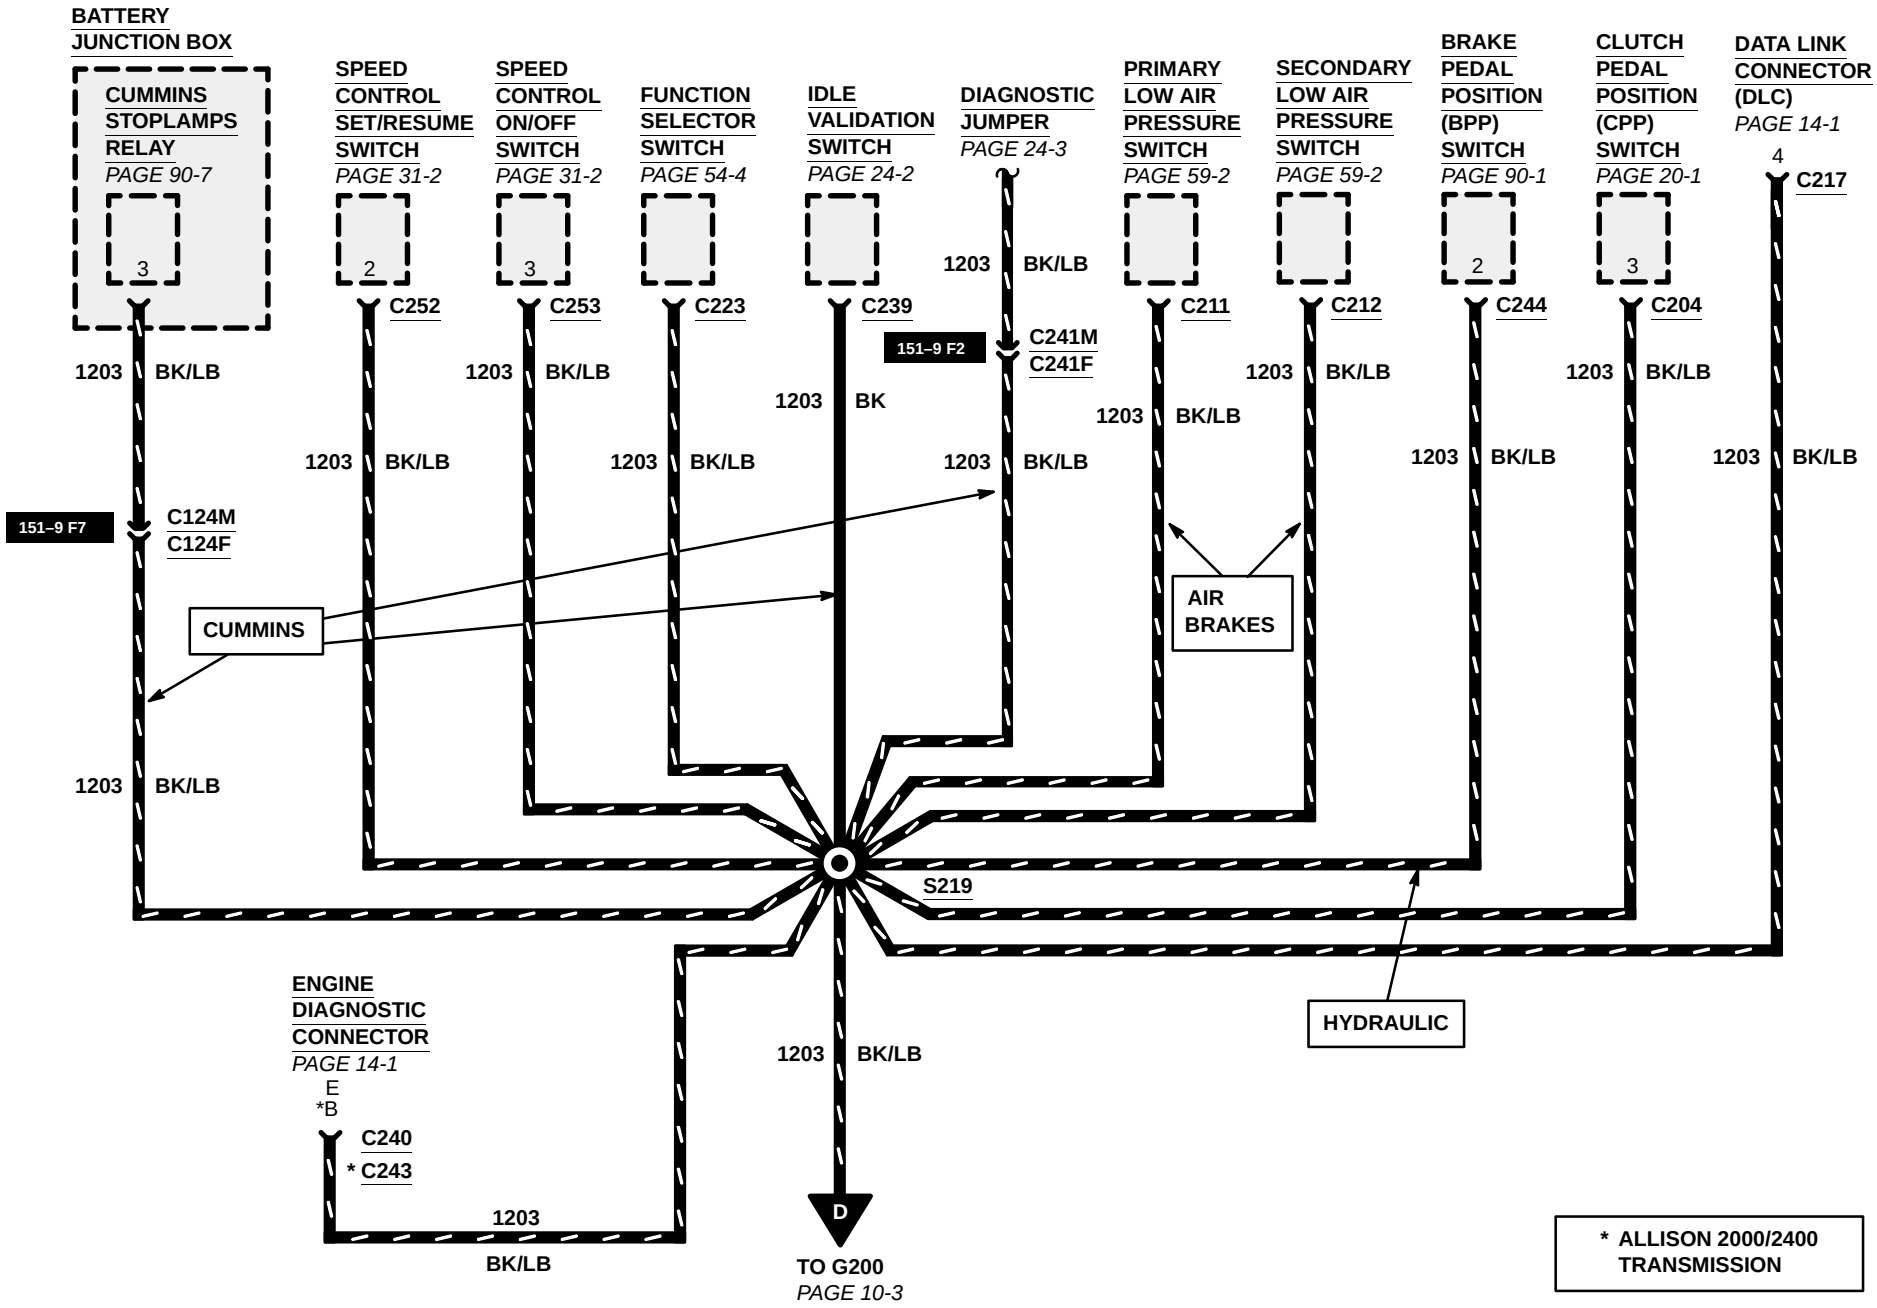
BATTERY JUNCTION BOX
CUMMINS STOPLAMPS RELAY
PAGE 90-7
3
SPEED CONTROL SET/RESUME SWITCH
PAGE 31-2
2
SPEED CONTROL ON/OFF SWITCH
PAGE 31-2
3
FUNCTION SELECTOR SWITCH
PAGE 54-4
IDLE VALIDATION SWITCH
PAGE 24-2
DIAGNOSTIC JUMPER
PAGE 24-3
PRIMARY LOW AIR PRESSURE SWITCH
PAGE 59-2
SECONDARY LOW AIR PRESSURE SWITCH
PAGE 59-2
BRAKE PEDAL POSITION (BPP) SWITCH
PAGE 90-1
2
CLUTCH PEDAL POSITION (CPP) SWITCH
PAGE 20-1
3
DATA LINK CONNECTOR (DLC)
PAGE 14-1
4
C217
C252
C253
C223
C239
C241M
C241F
C211
C212
C244
C204
151–9 F2
151–9 F7
C124M
C124F
1203 BK/LB
1203 BK
CUMMINS
AIR BRAKES
S219
HYDRAULIC
ENGINE DIAGNOSTIC CONNECTOR
PAGE 14-1
E
*B
C240
* C243
D
TO G200
PAGE 10-3
* ALLISON 2000/2400 TRANSMISSION