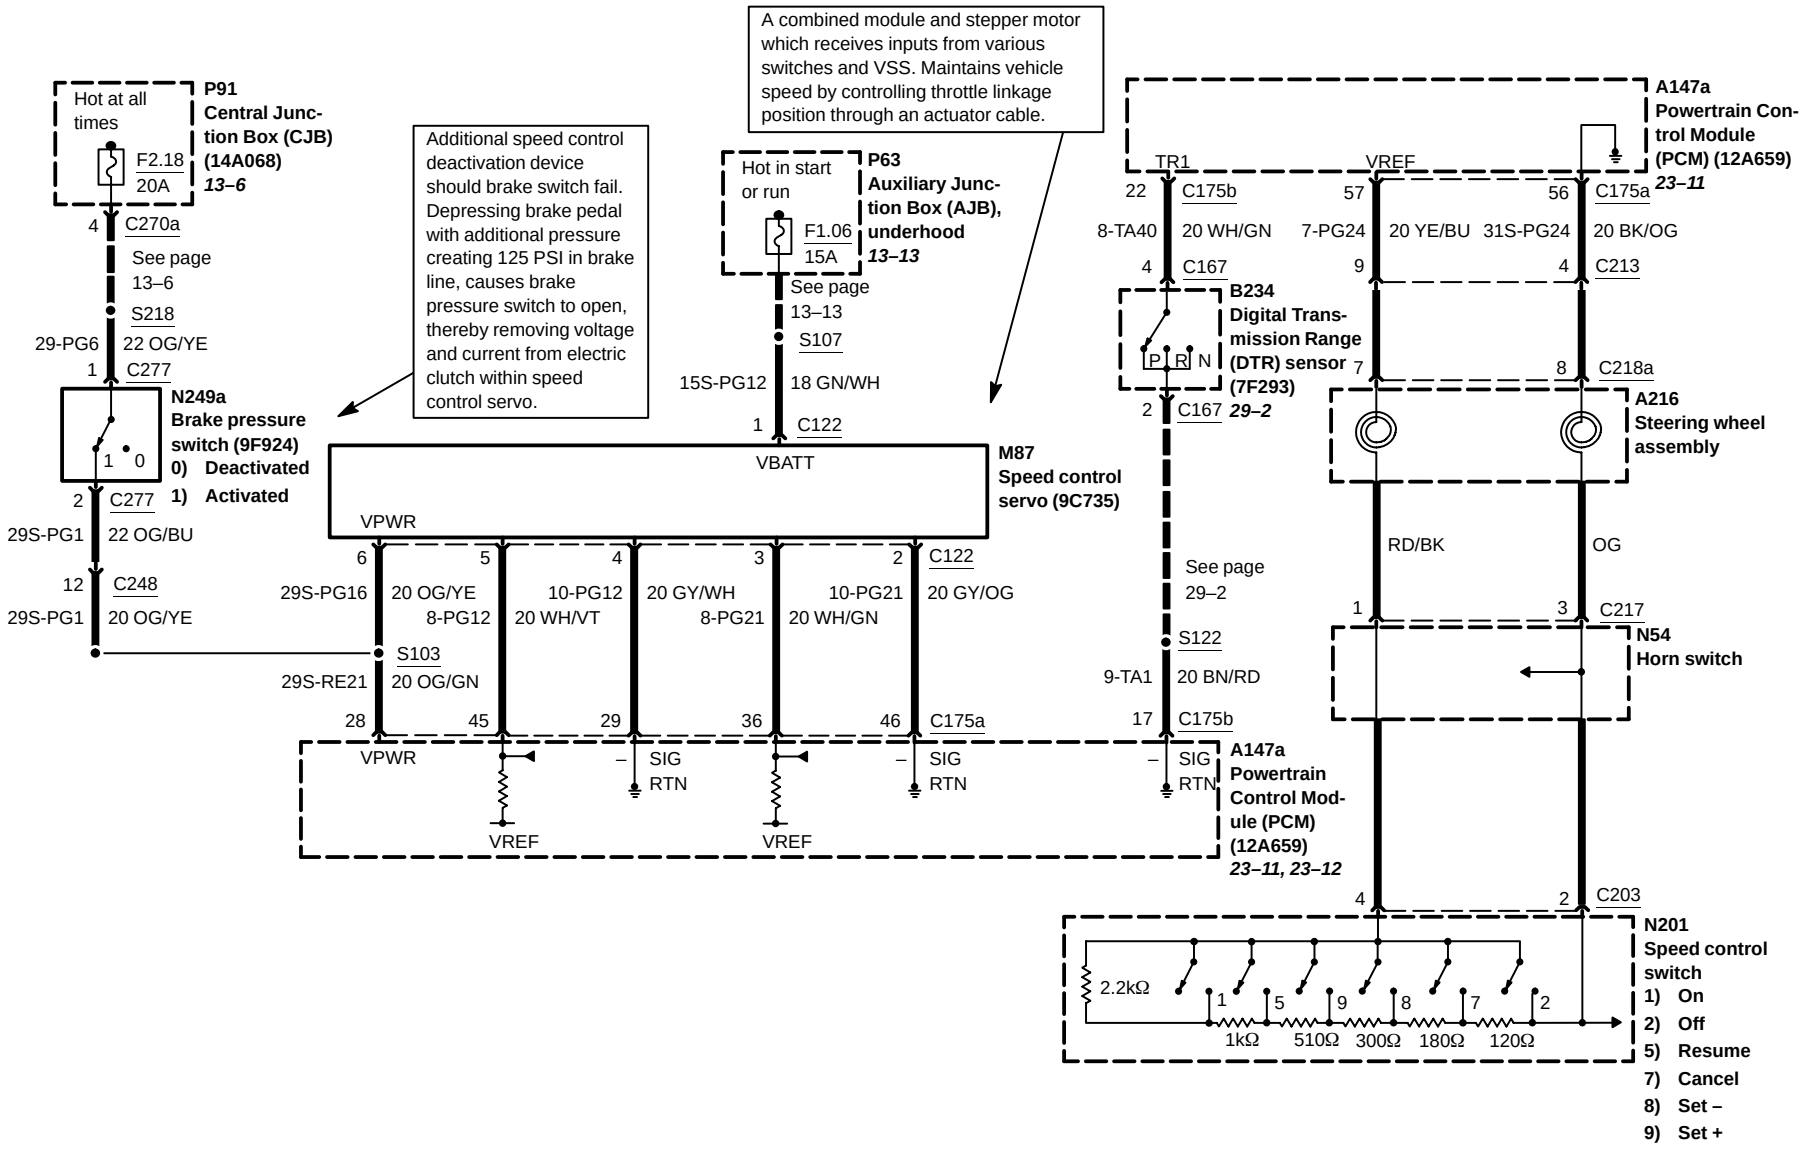
A combined module and stepper motor which receives inputs from various switches and VSS. Maintains vehicle speed by controlling throttle linkage position through an actuator cable.
Additional speed control deactivation device should brake switch fail. Depressing brake pedal with additional pressure creating 125 PSI in brake line, causes brake pressure switch to open, thereby removing voltage and current from electric clutch within speed control servo.
Hot at all times
F2.18
20A
P91 Central Junction Box (CJB) (14A068) 13–6
4 C270a
See page 13–6
S218
29-PG6 22 OG/YE
1 C277
N249a Brake pressure switch (9F924)
0) Deactivated
1) Activated
2 C277
29S-PG1 22 OG/BU
12 C248
29S-PG1 20 OG/YE
Hot in start or run
F1.06
15A
P63 Auxiliary Junction Box (AJB), underhood 13–13
See page 13–13
S107
15S-PG12 18 GN/WH
1 C122
VBATT
M87 Speed control servo (9C735)
VPWR
6 5 4 3 2 C122
29S-PG16 20 OG/YE 8-PG12
10-PG12 20 WH/VT 8-PG21
20 GY/WH 10-PG21
20 WH/GN 20 GY/OG
S103
29S-RE21 20 OG/GN
28 45 29 36 46 C175a
VPWR
SIG RTN
SIG RTN
SIG RTN
VREF
VREF
A147a Powertrain Control Module (PCM) (12A659) 23–11, 23–12
TR1
VREF
22 C175b
8-TA40 20 WH/GN
4 C167
B234 Digital Transmission Range (DTR) sensor (7F293)
P R N
2 C167 29–2
See page 29–2
S122
9-TA1 20 BN/RD
17 C175b
57 56 C175a
7-PG24 20 YE/BU 31S-PG24 20 BK/OG
9 4 C213
7 8 C218a
A216 Steering wheel assembly
RD/BK OG
1 3 C217
N54 Horn switch
4 2 C203
N201 Speed control switch
2.2kΩ
1 5 9 8 7 2
1kΩ 510Ω 300Ω 180Ω 120Ω
1) On
2) Off
5) Resume
7) Cancel
8) Set –
9) Set +