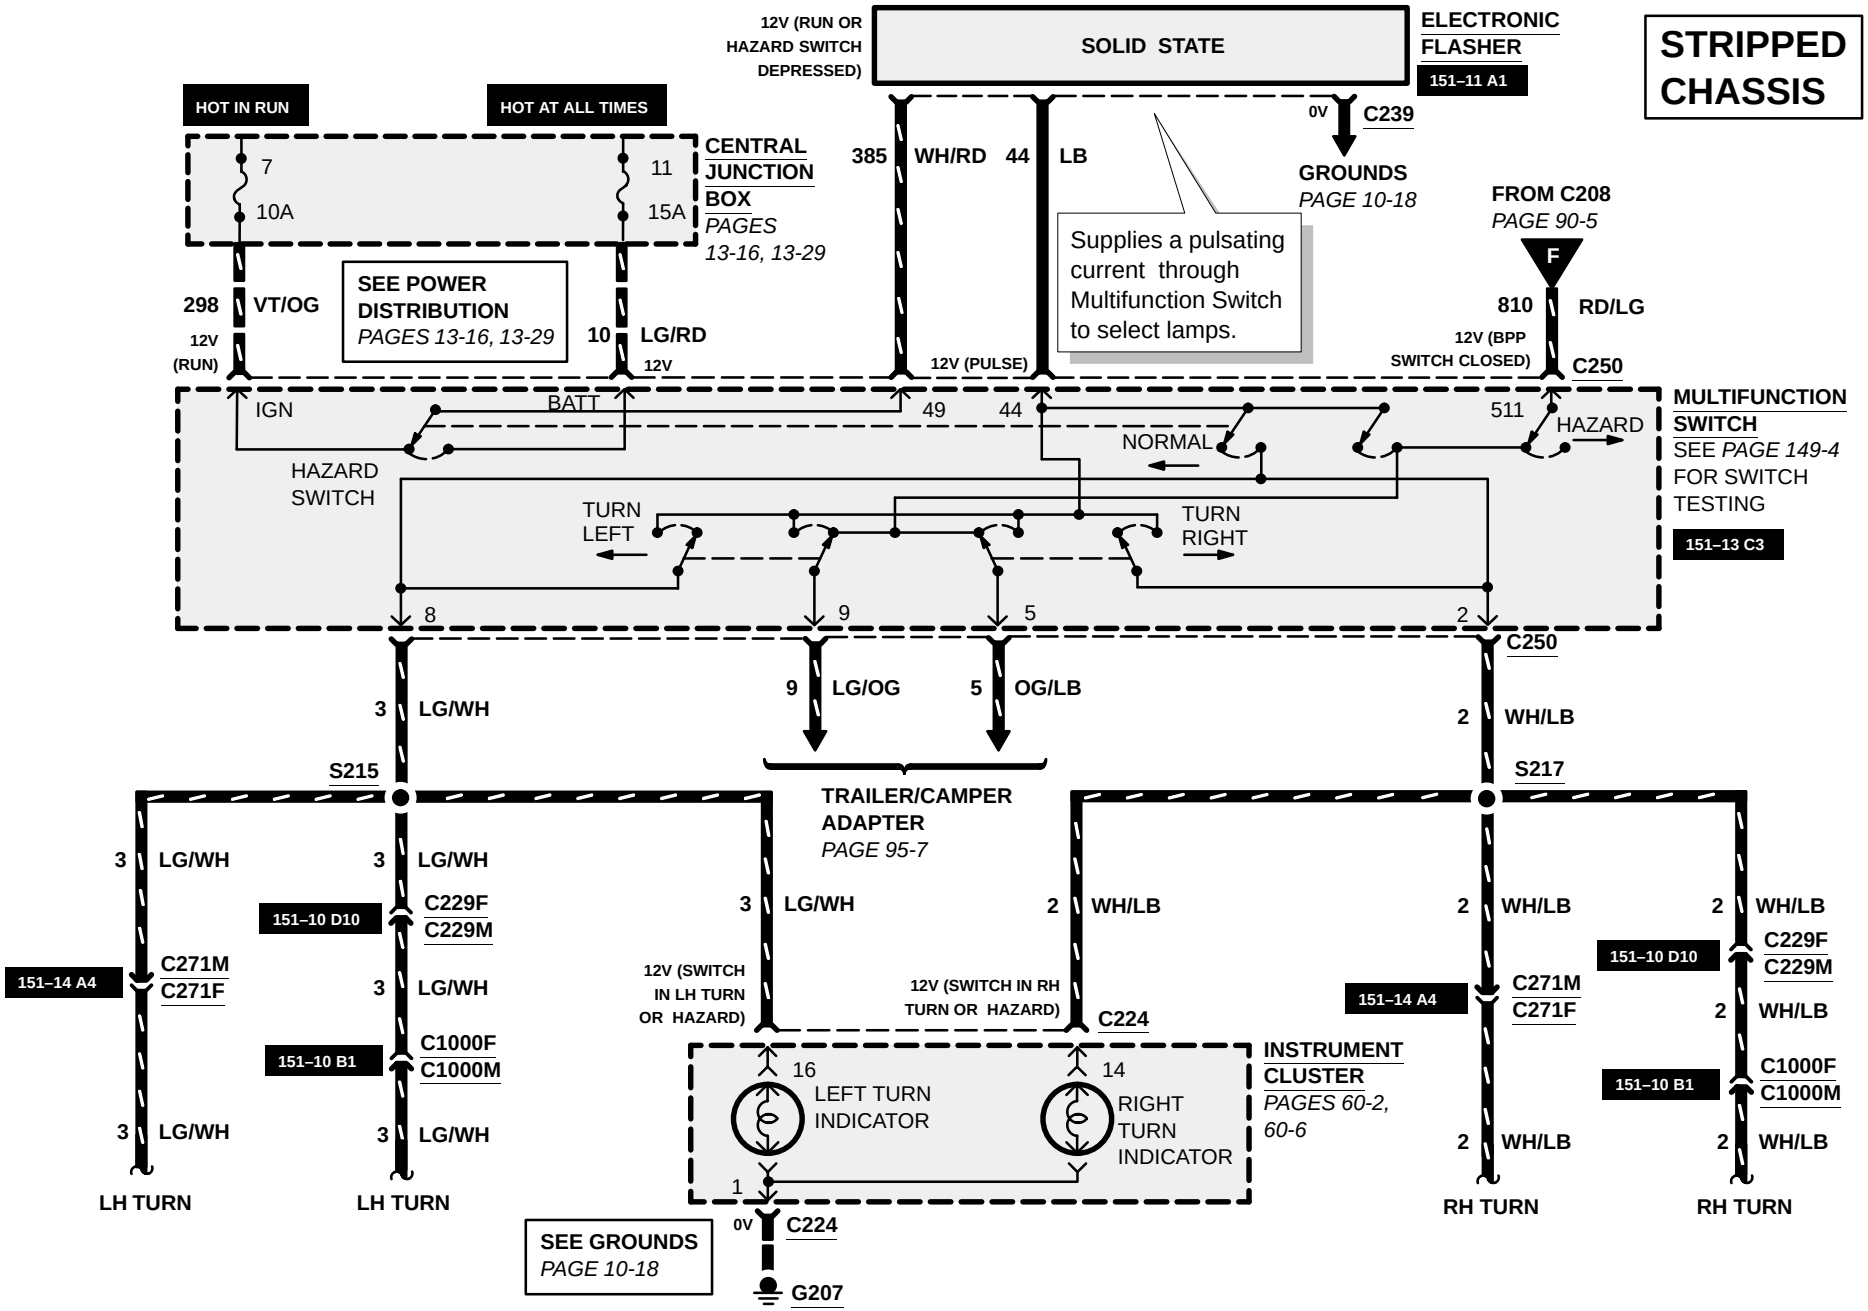
STRIPPED CHASSIS
12V (RUN OR HAZARD SWITCH DEPRESSED)
SOLID STATE
ELECTRONIC FLASHER
151–11 A1
HOT IN RUN
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGES 13-16, 13-29
7
10A
11
15A
SEE POWER DISTRIBUTION
PAGES 13-16, 13-29
298 VT/OG
12V (RUN)
10 LG/RD
12V
385 WH/RD
12V (PULSE)
44 LB
0V
C239
GROUNDS
PAGE 10-18
Supplies a pulsating current through Multifunction Switch to select lamps.
FROM C208
PAGE 90-5
F
810 RD/LG
12V (BPP SWITCH CLOSED)
C250
MULTIFUNCTION SWITCH
SEE PAGE 149-4 FOR SWITCH TESTING
151–13 C3
IGN
BATT
49
44
511
HAZARD
NORMAL
HAZARD SWITCH
TURN LEFT
TURN RIGHT
8
9
5
2
C250
3 LG/WH
9 LG/OG
5 OG/LB
2 WH/LB
S215
S217
TRAILER/CAMPER ADAPTER
PAGE 95-7
3 LG/WH
151–14 A4
C271M
C271F
3 LG/WH
151–10 D10
C229F
C229M
3 LG/WH
151–10 B1
C1000F
C1000M
3 LG/WH
LH TURN
3 LG/WH
LH TURN
12V (SWITCH IN LH TURN OR HAZARD)
3 LG/WH
12V (SWITCH IN RH TURN OR HAZARD)
2 WH/LB
C224
16
LEFT TURN INDICATOR
14
RIGHT TURN INDICATOR
1
INSTRUMENT CLUSTER
PAGES 60-2, 60-6
0V
C224
G207
SEE GROUNDS
PAGE 10-18
2 WH/LB
151–14 A4
C271M
C271F
2 WH/LB
RH TURN
2 WH/LB
151–10 D10
C229F
C229M
2 WH/LB
151–10 B1
C1000F
C1000M
2 WH/LB
RH TURN