C3192 (GY)

14C719

Heated seat module, passenger side front

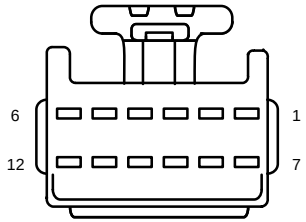

F12217

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	–	not used
3	1061 (BN/LB)	Seat cushion heater, passenger side, Sensor, return
4	1060 (BK/LB)	Seat cushion heater, passenger side, Sensor, feed
5	298 (VT/OG)	Voltage supplied in Start and Run (overload protected)
6	1064 (YE/LB)	Seat cushion heater, passenger side, feed
7	1067 (VT/LB)	Seat cushion heater, passenger side, return
8	581 (RD)	Heated seat switch, passenger side, input
9	–	not used
10	461 (OG)	Heated seat switch, passenger side, indicator
11	–	not used
12	175 (BK/YE)	Voltage supplied at all times (overload protected)

C3201 (BK)

14K691

Safety belt buckle pretensioner, driver

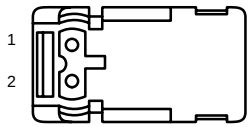

F02215

Pin	Circuit	Circuit function
1	1079 (LG/RD)	Safety belt buckle pretensioner, driver, feed
2	1080 (LG/BK)	Safety belt buckle pretensioner, driver, return

C3202 (BK)

14K691

Safety belt buckle pretensioner, passenger

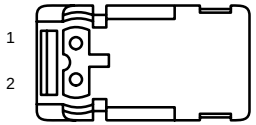

F02215

Pin	Circuit	Circuit function
1	1079 (LG/RD)	Passenger safety belt retractor pretensioner, feed
2	1080 (LG/BK)	Passenger safety belt retractor pretensioner, return

C3209 (BK)

14A488

Side impact sensor, driver 1



F02383

Pin	Circuit	Circuit function
1	1262 (BN/LG)	Air bag, – driver side impact, – crash sensor to module, – return
2	1261 (WH/LG)	Air bag, – driver side impact, – crash sensor to module, – feed

C3210 (BK)

14A488

Side impact sensor, driver 2



F02221

Pin	Circuit	Circuit function
1	1262 (BN/LG)	Air bag, – driver side impact, – crash sensor to module, – return
2	1261 (WH/LG)	Air bag, – driver side impact, – crash sensor to module, – feed