C799

14401

N155
Liftgate/decklid release switch

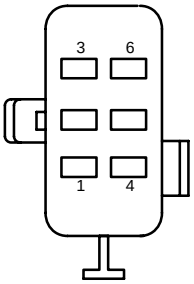

F06065

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	31S-AA30 (BK/YE)	Ground, switched
4	–	not used
5	–	not used
6	31-AA30 (BK)	Ground

C803

9H589

B41
Camshaft position sensor

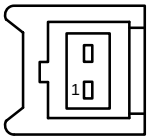

F02012

Pin	Circuit	Circuit Function
1	8-RJ3 (WH/VT)	Sensor signal
2	9-RJ3 (BN/WH)	Sensor signal return (reference/ground)

C804

9H589

B41
Camshaft position sensor

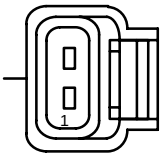

F02026

Pin	Circuit	Circuit Function
1	9-RJ3 (BN/WH)	Sensor signal return (reference/ground)
2	8-RJ3 (WH/VT)	Sensor signal

C800 (NA)

14A584

N22
Liftgate/decklid switch

F05061

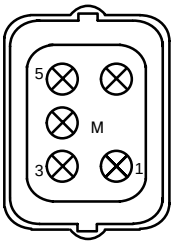

Pin	Circuit	Circuit Function
1	32-AA27 (WH/GN)	Switched between: Battery voltage, Ground or Open
2	31S-GL27 (BK/OG)	Ground, switched
3	31-GL20 (BK)	Ground
4	31S-LB26 (BK/OG)	Ground, switched
5	31S-GL20 (BK/RD)	Ground, switched

C807

F05027

14A584

M75
Mirror motor, driver side

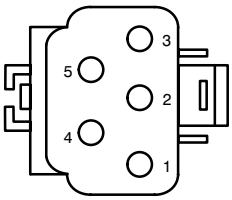

Pin	Circuit	Circuit Function
1	32-AD6 (WH)	Switched between: Battery voltage, Ground or Open
2	34-AD7 (BU/RD)	Switched between: Battery voltage, Ground or Open
3	33-AD8 (YE/BU)	Switched between: Battery voltage, Ground or Open
4	15S-HB35 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
5	31-HB35 (BK)	Ground