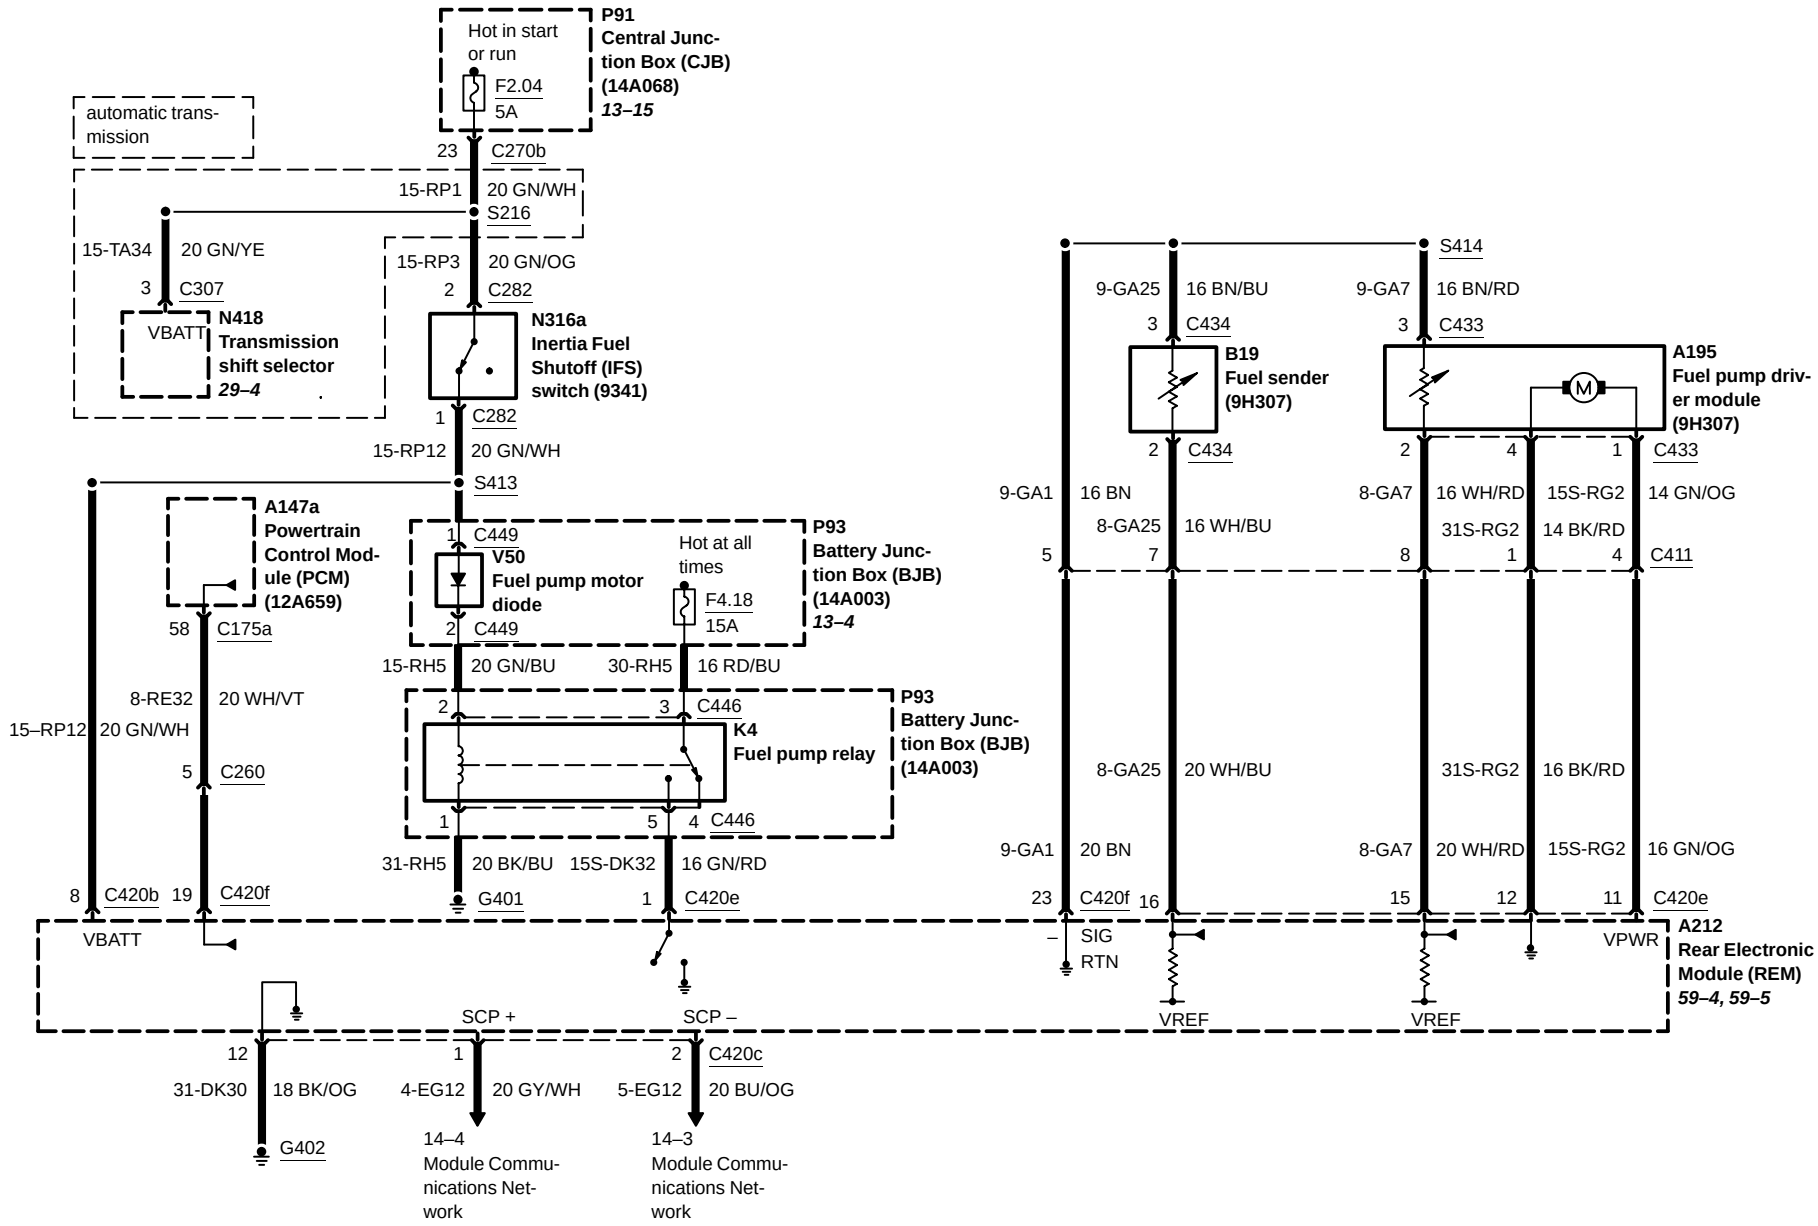
P91
Central Junction Box (CJB)
(14A068)
13–15
Hot in start or run
F2.04
5A
23
C270b
15-RP1
20 GN/WH
S216
automatic transmission
15-TA34
20 GN/YE
3
C307
VBATT
N418
Transmission shift selector
29–4
15-RP3
20 GN/OG
2
C282
N316a
Inertia Fuel Shutoff (IFS) switch (9341)
1
C282
15-RP12
20 GN/WH
S413
A147a
Powertrain Control Module (PCM)
(12A659)
58
C175a
8-RE32
20 WH/VT
15–RP12
20 GN/WH
5
C260
8
C420b
19
C420f
VBATT
1
C449
V50
Fuel pump motor diode
2
C449
Hot at all times
F4.18
15A
P93
Battery Junction Box (BJB)
(14A003)
13–4
15-RH5
20 GN/BU
30-RH5
16 RD/BU
2
3
C446
K4
Fuel pump relay
1
5
4
C446
31-RH5
20 BK/BU
15S-DK32
16 GN/RD
G401
1
C420e
SCP +
SCP –
12
1
2
C420c
31-DK30
18 BK/OG
4-EG12
20 GY/WH
5-EG12
20 BU/OG
G402
14–4
Module Communications Network
14–3
Module Communications Network
S414
9-GA25
16 BN/BU
3
C434
B19
Fuel sender (9H307)
2
C434
9-GA1
16 BN
8-GA25
16 WH/BU
5
7
9-GA1
20 BN
8-GA25
20 WH/BU
23
C420f
16
SIG RTN
VREF
9-GA7
16 BN/RD
3
C433
A195
Fuel pump driver module (9H307)
2
4
1
C433
8-GA7
16 WH/RD
15S-RG2
14 GN/OG
31S-RG2
14 BK/RD
8
1
4
C411
31S-RG2
16 BK/RD
8-GA7
20 WH/RD
15S-RG2
16 GN/OG
15
12
11
C420e
VPWR
VREF
A212
Rear Electronic Module (REM)
59–4, 59–5