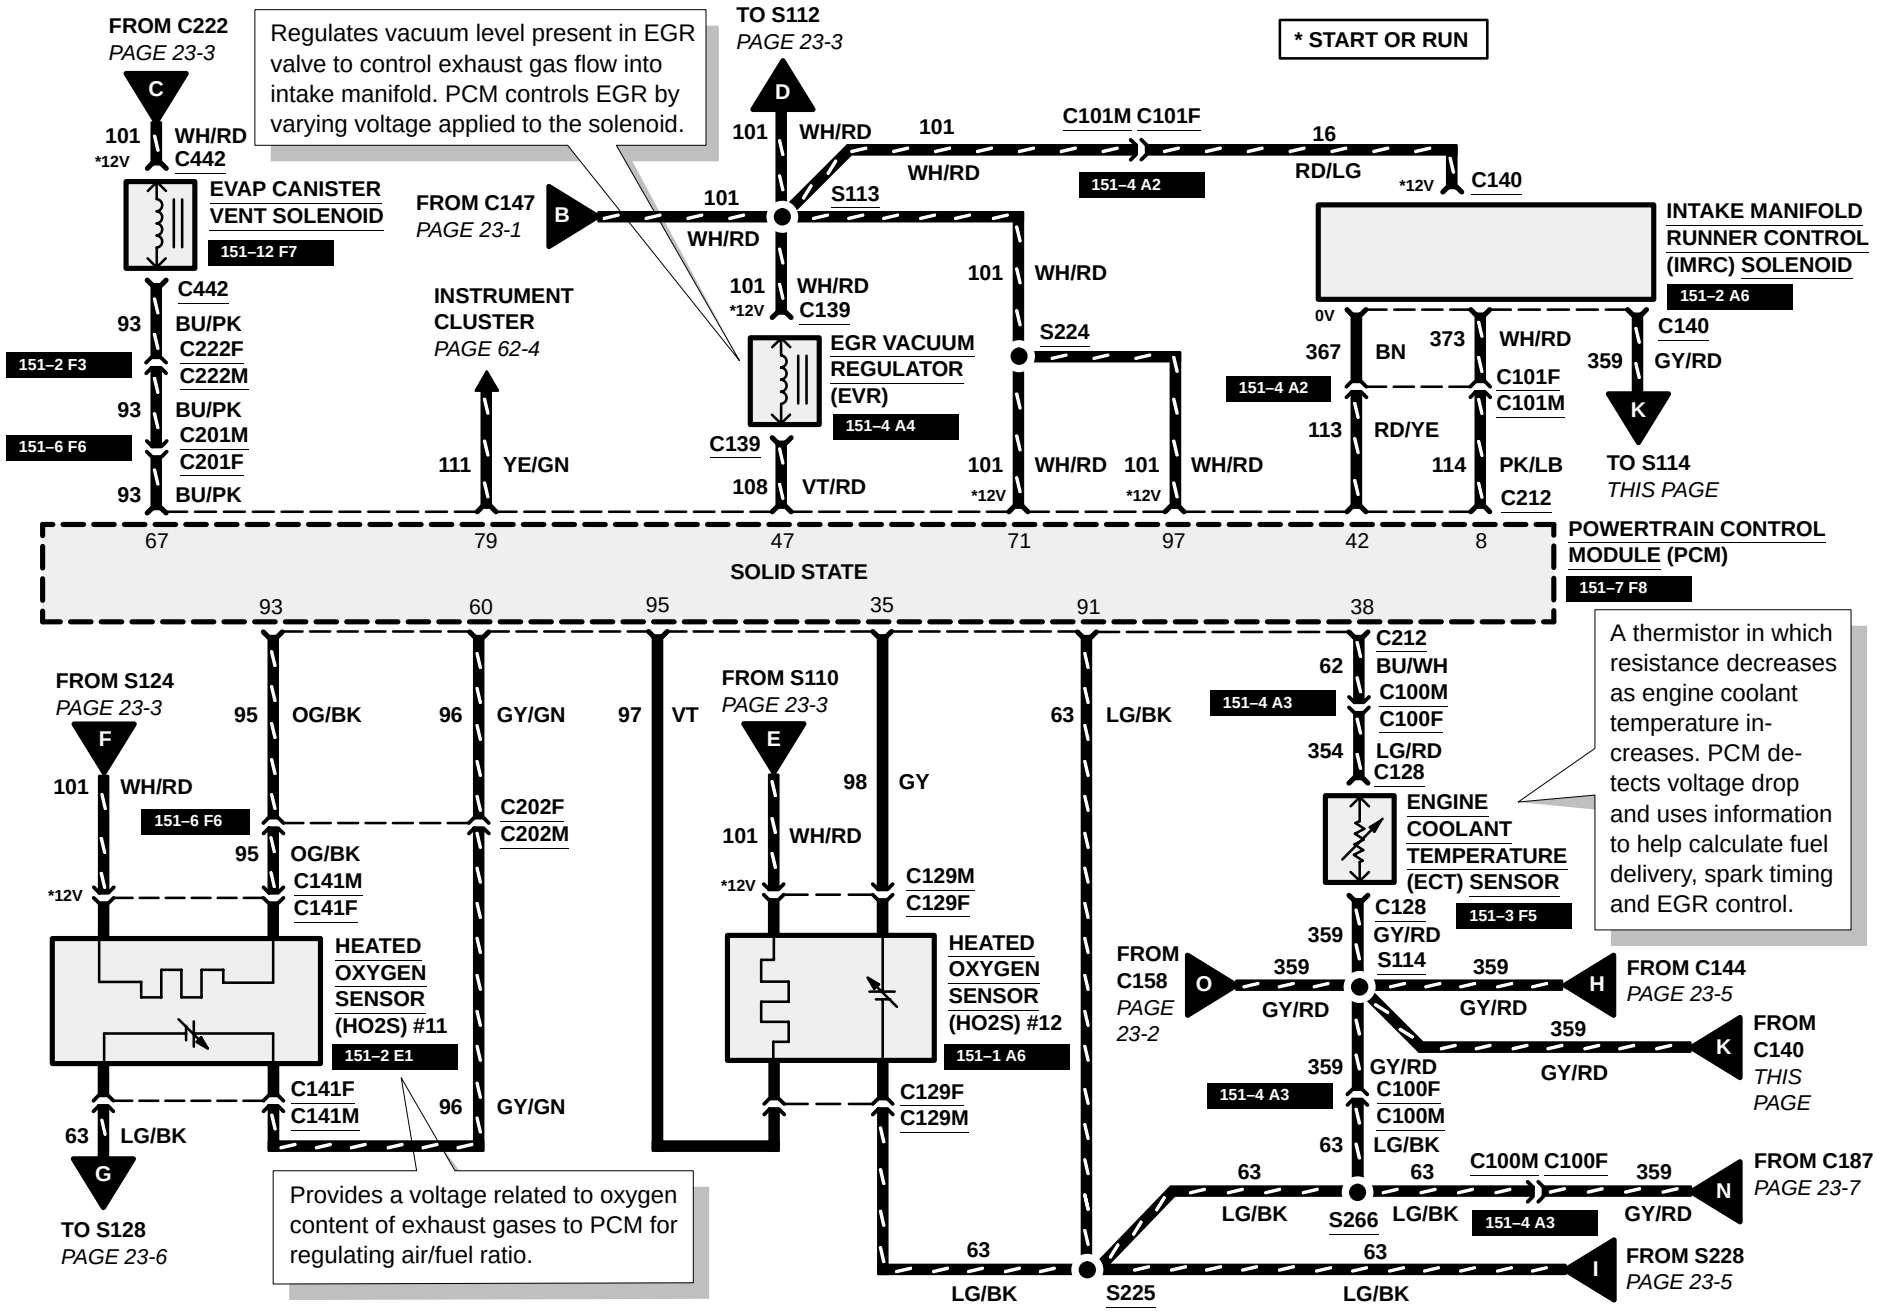
FROM C222
PAGE 23-3
C
101
*12V
WH/RD
C442
EVAP CANISTER VENT SOLENOID
151–12 F7
C442
93
BU/PK
C222F
C222M
151–2 F3
93
BU/PK
C201M
C201F
151–6 F6
93
BU/PK
Regulates vacuum level present in EGR valve to control exhaust gas flow into intake manifold. PCM controls EGR by varying voltage applied to the solenoid.
TO S112
PAGE 23-3
D
101
WH/RD
101
WH/RD
C101M C101F
151–4 A2
16
RD/LG
*12V
C140
* START OR RUN
FROM C147
PAGE 23-1
B
101
WH/RD
S113
INTAKE MANIFOLD RUNNER CONTROL (IMRC) SOLENOID
151–2 A6
INSTRUMENT CLUSTER
PAGE 62-4
101
*12V
WH/RD
C139
101
WH/RD
S224
0V
367
BN
373
WH/RD
C101F
C101M
359
GY/RD
C140
K
TO S114
THIS PAGE
151–4 A2
113
RD/YE
114
PK/LB
C212
EGR VACUUM REGULATOR (EVR)
151–4 A4
C139
111
YE/GN
108
VT/RD
101
WH/RD
*12V
101
WH/RD
*12V
POWERTRAIN CONTROL MODULE (PCM)
151–7 F8
SOLID STATE
67
79
47
71
97
42
8
93
60
95
35
91
38
FROM S124
PAGE 23-3
F
101
WH/RD
151–6 F6
95
OG/BK
96
GY/GN
97
VT
63
LG/BK
C212
62
BU/WH
C100M
C100F
354
LG/RD
C128
151–4 A3
C202F
C202M
95
OG/BK
C141M
C141F
*12V
FROM S110
PAGE 23-3
E
98
GY
101
WH/RD
*12V
C129M
C129F
ENGINE COOLANT TEMPERATURE (ECT) SENSOR
151–3 F5
C128
359
GY/RD
A thermistor in which resistance decreases as engine coolant temperature increases. PCM detects voltage drop and uses information to help calculate fuel delivery, spark timing and EGR control.
HEATED OXYGEN SENSOR (HO2S) #11
151–2 E1
HEATED OXYGEN SENSOR (HO2S) #12
151–1 A6
FROM C158
PAGE 23-2
O
359
GY/RD
S114
359
GY/RD
H
FROM C144
PAGE 23-5
359
GY/RD
K
FROM C140
THIS PAGE
359
GY/RD
151–4 A3
C100F
C100M
63
LG/BK
C141F
C141M
96
GY/GN
C129F
C129M
63
LG/BK
G
TO S128
PAGE 23-6
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.
63
LG/BK
S225
63
LG/BK
63
LG/BK
S266
63
LG/BK
C100M C100F
151–4 A3
359
GY/RD
N
FROM C187
PAGE 23-7
I
FROM S228
PAGE 23-5