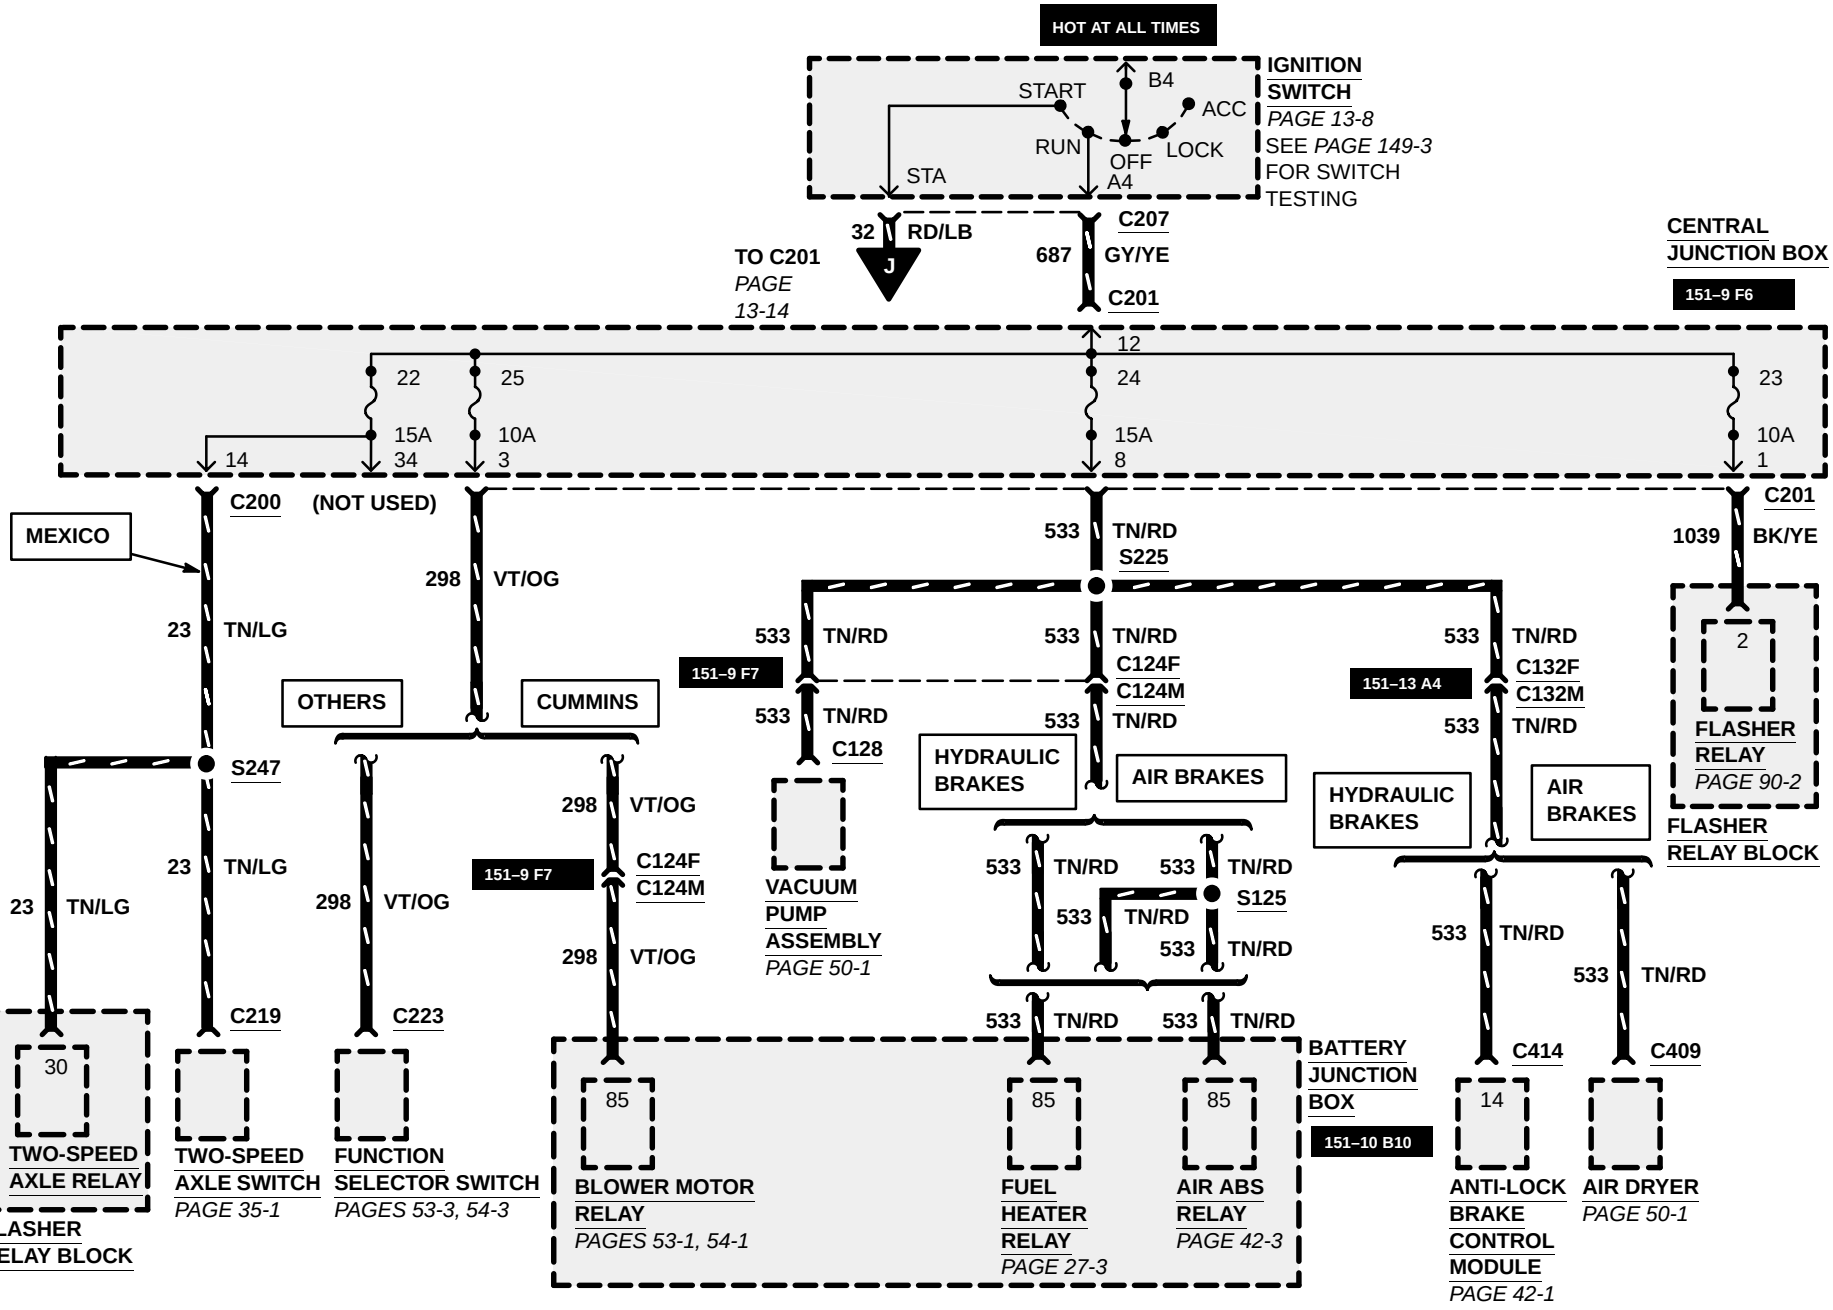
HOT AT ALL TIMES
IGNITION SWITCH
PAGE 13-8
SEE PAGE 149-3 FOR SWITCH TESTING
START
RUN
STA
OFF
ACC
LOCK
B4
A4
32 RD/LB
J
TO C201
PAGE 13-14
C207
687 GY/YE
C201
CENTRAL JUNCTION BOX
151–9 F6
12
22
25
24
23
15A
34
10A
3
15A
8
10A
1
14
C200
(NOT USED)
MEXICO
533 TN/RD
S225
C201
1039 BK/YE
298 VT/OG
23 TN/LG
533 TN/RD
C124F
C124M
533 TN/RD
C128
151–9 F7
533 TN/RD
C132F
C132M
533 TN/RD
151–13 A4
2
FLASHER RELAY
PAGE 90-2
FLASHER RELAY BLOCK
OTHERS
CUMMINS
HYDRAULIC BRAKES
AIR BRAKES
HYDRAULIC BRAKES
AIR BRAKES
S247
298 VT/OG
151–9 F7
C124F
C124M
298 VT/OG
VACUUM PUMP ASSEMBLY
PAGE 50-1
23 TN/LG
23 TN/LG
298 VT/OG
298 VT/OG
533 TN/RD
533 TN/RD
533 TN/RD
S125
533 TN/RD
533 TN/RD
533 TN/RD
533 TN/RD
533 TN/RD
533 TN/RD
C219
C223
C414
C409
30
85
85
85
14
BATTERY JUNCTION BOX
151–10 B10
TWO-SPEED AXLE RELAY
FLASHER RELAY BLOCK
TWO-SPEED AXLE SWITCH
PAGE 35-1
FUNCTION SELECTOR SWITCH
PAGES 53-3, 54-3
BLOWER MOTOR RELAY
PAGES 53-1, 54-1
FUEL HEATER RELAY
PAGE 27-3
AIR ABS RELAY
PAGE 42-3
ANTI-LOCK BRAKE CONTROL MODULE
PAGE 42-1
AIR DRYER
PAGE 50-1