## C310a

### 14A005

A208
Restraints control
module (14B321)

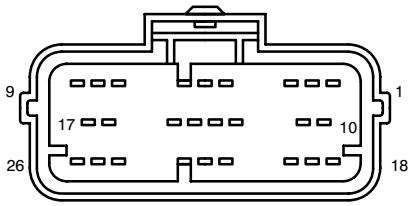


F26008

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1556 (DG/VT) | Seat weight sensor, passenger |
| 2 | 1557 (DB/OG) | Seat weight sensor, passenger |
| 3 | 1079 (LG/RD) | Driver safety belt retractor pretensioner, feed |
| 4 | 1080 (LG/BK) | Driver safety belt retractor pretensioner, return |
| 5 | 85 (BN/LB) | Safety belt buckle switch (10B924), input |
| 6 | 1081 (YE/RD) | Passenger safety belt retractor pretensioner, feed |
| 7 | 1082 (YE/BK) | Passenger safety belt retractor pretensioner, return |
| 8 | 1520 (LG) | Seat position sensor – horizontal sense |
| 9 | 1558 (TN/BK) | Seat track position sensor, driver |
| 10 | 1514 (RD/BK) | Safety belt buckle switch (10B924), input |
| 11 | 1516 (YE/WH) | Driver air bag, feed, monitor |
| 12 | 1517 (RD/OG) | Driver air bag, return |
| 13 | 1261 (WH/LG) | Air bag – driver side impact crash sensor to module – feed |
| 14 | 1262 (BN/LG) | Air bag – driver side impact crash sensor to module – return |
| 15 | 1257 (WH/LB) | Air bag – driver side impact to module – feed |
| 16 | 1258 (RD) | Air bag – driver side impact to module – return |
| 17 | 1263 (WH) | Air bag – passenger side impact crash sensor to module – feed |
| 18 | 1264 (BN) | Air bag – passenger side impact crash sensor to module – return |
| 19 | – | not used |
| 20 | 1518 (RD/WH) | Passenger air bag, feed, monitor |
| 21 | 1519 (LG/RD) | Passenger air bag, return |
| 22 | 629 (BN) | Passenger Air bag Deactivation (PAD) switch, Switches |
| 23 | 1259 (WH/YE) | Air bag – passenger side impact to module – feed |
| 24 | 1260 (BN/YE) | Air bag – passenger side impact to module – return |
| 25 | 617 (PK/OG) | Air bag crash sensor #1, feed |
| 26 | 618 (VT/LG) | Air bag crash sensor #1, monitor |

## C310b

### 14A005

A208
Restraints control
module (14B321)

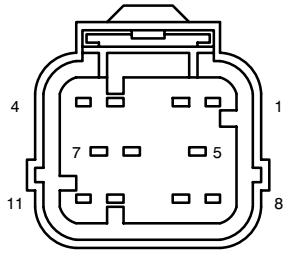


F11018

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 298 (VT/OG) | Voltage in Run (overload protected) |
| 2 | 615 (GY/WH) | Driver air bag, return |
| 3 | 614 (GY/OG) | Driver air bag, feed, monitor |
| 4 | 70 (LB/WH) | ISO Bus |
| 5 | 616 (PK/BK) | Passenger air bag, return |
| 6 | 607 (LB/OG) | Passenger air bag, feed, monitor |
| 7 | 866 (WH) | Inertia Fuel Shutoff (IFS) switch (9D362), Ground, input |
| 8 | 57 (BK) | Ground |
| 9 | 608 (BK/YE) | Air bag indicator, control |
| 10 | 57 (BK) | Ground |
| 11 | 1083 (LB/BK) | Air bag, tone driver |