C360

14B719

Seat adjust switch,
driver side front
(14A701)

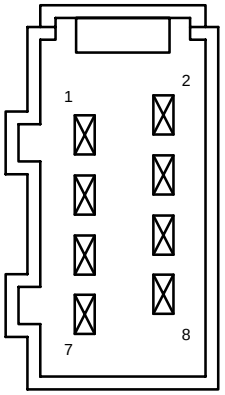

F08114

Pin	Circuit	Circuit function
1	31-AH6 (BK/YE)	Ground
2	32-AH11 (WH/VT)	Switched between: Battery voltage, Ground or Open
3	33-AH9 (YE/GN)	Switched between: Battery voltage, Ground or Open
4	33-AH10 (YE/BK)	Switched between: Battery voltage, Ground or Open
5	32-AH9 (WH/GN)	Switched between: Battery voltage, Ground or Open
6	32-AH10 (WH/BK)	Switched between: Battery voltage, Ground or Open
7	30-AH6 (RD/YE)	Voltage supplied at all times (not overload protected)
8	33-AH11 (YE/VT)	Switched between: Battery voltage, Ground or Open

C364

14B719

Seat cushion heater,
left front

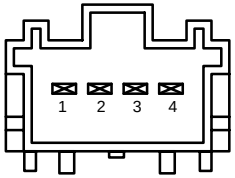

F04139

Pin	Circuit	Circuit function
1	32-HC17 (WH/BU)	Switched between: Battery voltage, Ground or Open
2	8-HC23 (WH/BK)	Sensor signal
3	9-HC23 (BN/YE)	Sensor signal return (reference/ground)
4	34-HC17 (BU/WH)	Switched between: Battery voltage, Ground or Open

C365

14B719

Seat back heater,
left front

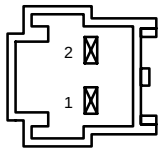

F02077

Pin	Circuit	Circuit function
1	34-HC17 (BU/WH)	Switched between: Battery voltage, Ground or Open
2	32-HC16 (WH/RD)	Switched between: Battery voltage, Ground or Open