C1254

A425
Natural Gas Vehicle
(NGV) timer jumper

14K069

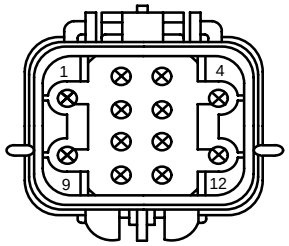

F12045

Pin	Circuit	Circuit function
1	1501 (BK)	Ground
2	1503 (BK/LB)	Ground
3	1503 (BK/LB)	Ground
4	1501 (BK)	Ground
5	–	not used
6	–	not used
7	–	not used
8	–	not used
9	1500 (RD/WH)	Voltage supplied in Start and Run (overload protected)
10	1502 (BK/YE)	Ground
11	1502 (BK/YE)	Ground
12	1500 (RD/WH)	Voltage supplied in Start and Run (overload protected)

12A581

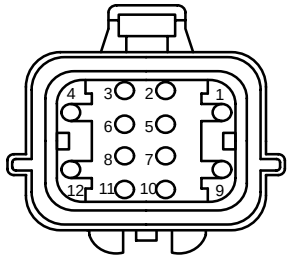

F12046

Pin	Circuit	Circuit function
1	1501 (BK)	Ground
2	396 (BK/OG)	Ground
3	1503 (BK/LB)	Ground
4	570 (BK/WH)	Ground
5	1093 (TN/RD)	Hot in Start with Park or Neutral
6	–	not used
7	–	not used
8	–	not used
9	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
10	570 (BK/WH)	Ground
11	1502 (BK/YE)	Ground
12	1500 (RD/WH)	Voltage supplied in Start and Run (overload protected)

C1257

12B637

B280
Fuel rail tempera-
ture sensor

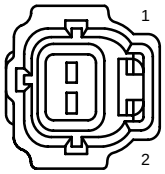

F02111

Pin	Circuit	Circuit function
1	1164 (LB)	Fuel rail temperature sensor, input
2	359 (GY/RD)	signal, return

C1258

12B637

Y257
Fuel rail cutoff valve

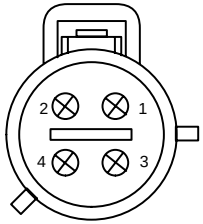

F04263

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	787 (PK/BK)	Fuel pump, Power
4	–	not used