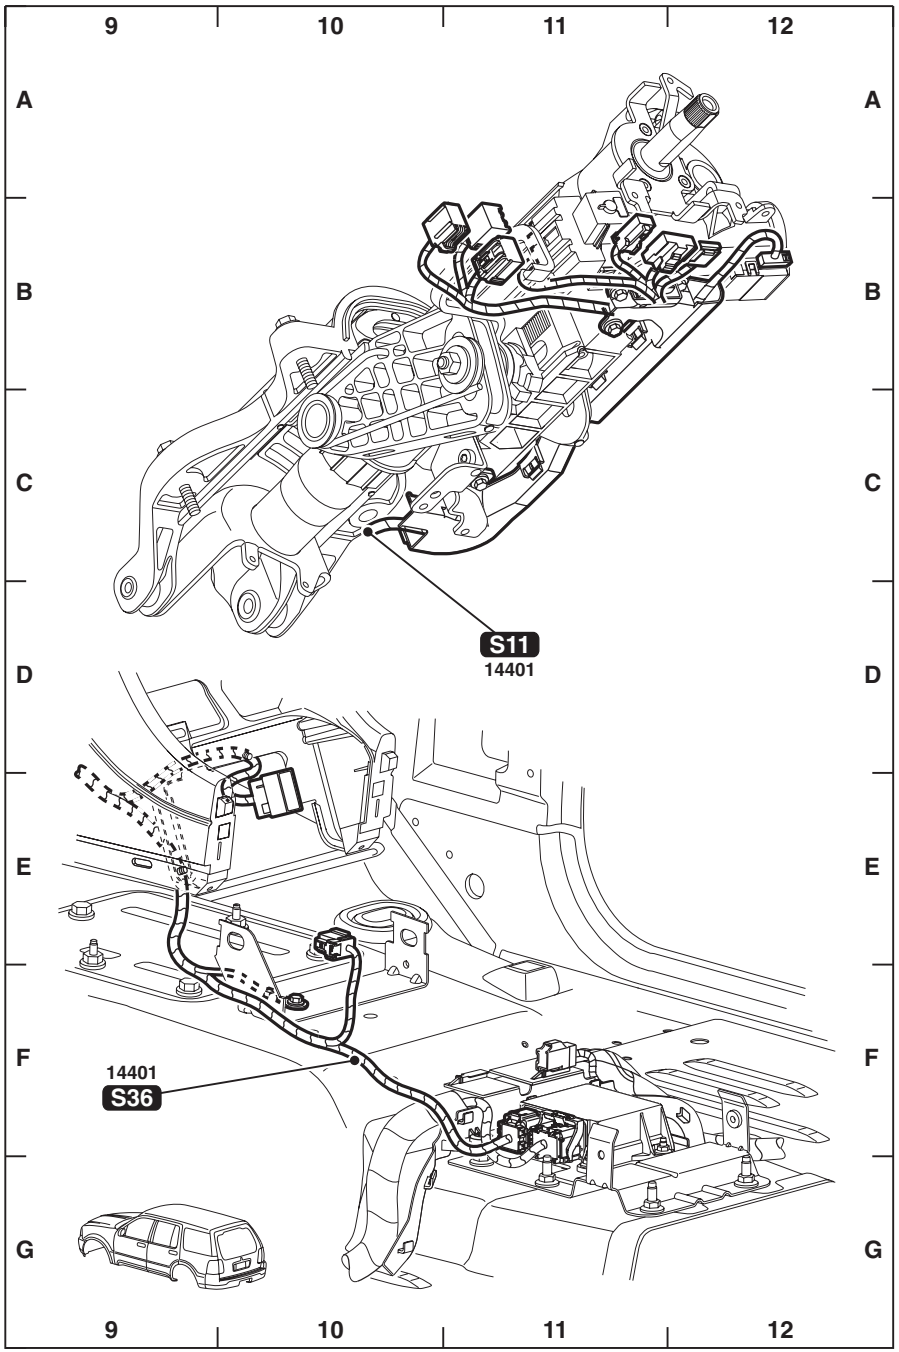


14401 - S1

Splice Location: **C7** - Near Instrument cluster, outboard T/O (C220b)

235 to Splice 14A488-S3 → 235 to Instrument cluster, outboard
235 to Main light switch

14401 - S2

Splice Location: **B4** - Center of I/P on Main Bundle

434 to 14A488 Illumination dimmer
434 to Audio unit
434 to Brake shift module → 434 to (EATC) module

14401 - S3

Splice Location: **F4** - Behind Cluster on Main Bundle

196 to 14A488 Central Security Module (CSM)
196 to Multi-function switch → 196 to Splice 14398-S1
196 to Main light switch

14401 - S4

Splice Location: **B3** - Center of I/P on Main Bundle

575 to 19D887 Auxiliary A/C relay → 1003 to (EATC) module
1003 to Central Junction Box (CJB)

14401 - S5

Splice Location: **C8** - Left Side of I/P Near Main light switch T/O (C205c)

1203 to Memory set switch
1205 to Instrument cluster, outboard
1205 to Memory set switch
1205 to G203 Ctr console brkt → 1205 to Main light switch
1205 to Main light switch
1205 to Main light switch

14401 - S6

Splice Location: **E2** - Right Side of I/P Near Fuel pump driver module T/O (C4033)

48 to Splice 14A488-S2
57 to G202 R cowl

Note: T/O = Take Out