C603 (WH)

14630

Door lock actuator, right front

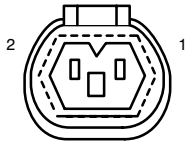

F02227

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door lock, output
2	118 (PK/OG)	Door unlock, output

C604 (GY)

14630

Window adjust switch, passenger side

* Without anti–theft

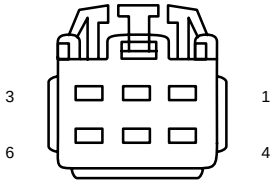

F06237

Pin	Circuit	Circuit function
1	1505 (YE/RD)	Window switch, feed, right front, Down
	*314 (TN/LB)	Window switch, feed, right front, Down
2	334 (RD/YE)	Window motor, feed, Down
3	170 (RD/LB)	Window lockout, switched power, output
4	–	not used
5	1159 (WH/LB)	Window motor, feed, Up
6	313 (WH/YE)	Window switch, feed, right front, Up

C605 (GN)

14630

Door lock switch, passenger side (14028)

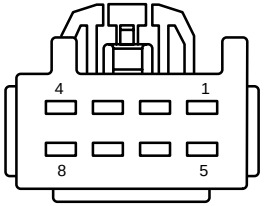

F08193

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	120 (PK/LG)	Door unlock relay, control
4	57 (BK)	Ground
5	400 (LB/BK)	Accessory relay, switched power, output
6	–	not used
7	119 (PK/YE)	Door lock relay, control
8	–	not used

C607 (GY)

14630

Lock cylinder switch, right

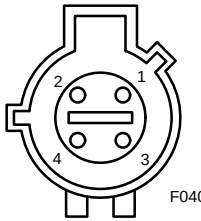

F04075

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	1088 (PK/WH)	Door unlock, input
4	–	not used