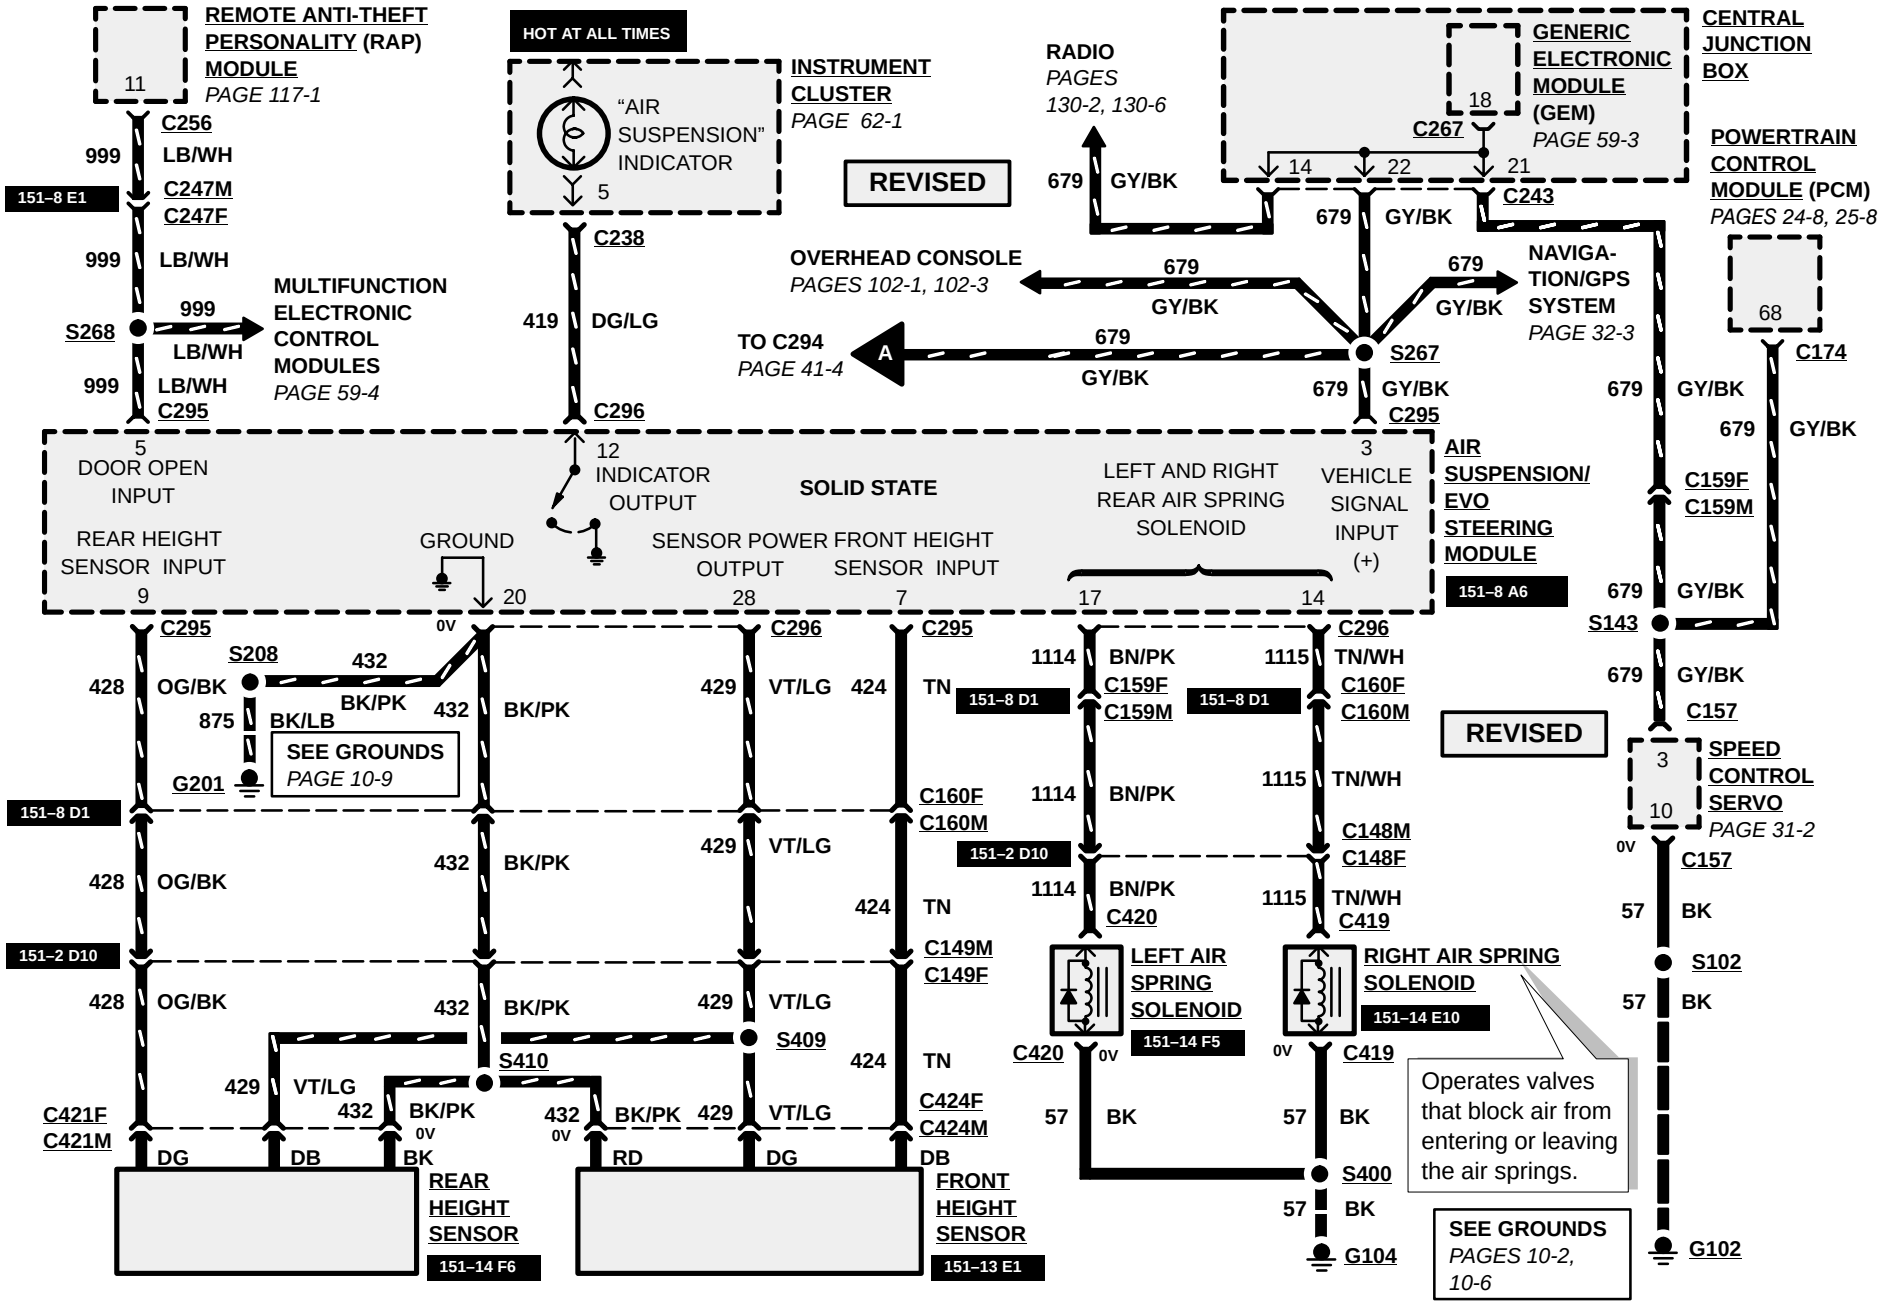
REMOTE ANTI-THEFT PERSONALITY (RAP) MODULE
PAGE 117-1
11
C256
999 LB/WH
151–8 E1
C247M
C247F
999 LB/WH
S268
999 LB/WH
MULTIFUNCTION ELECTRONIC CONTROL MODULES
PAGE 59-4
999 LB/WH
C295
5
DOOR OPEN INPUT
REAR HEIGHT SENSOR INPUT
9
HOT AT ALL TIMES
INSTRUMENT CLUSTER
PAGE 62-1
"AIR SUSPENSION" INDICATOR
5
C238
419 DG/LG
C296
12
INDICATOR OUTPUT
GROUND
20
SOLID STATE
SENSOR POWER OUTPUT
28
FRONT HEIGHT SENSOR INPUT
7
REVISED
RADIO
PAGES 130-2, 130-6
679 GY/BK
OVERHEAD CONSOLE
PAGES 102-1, 102-3
679 GY/BK
679 GY/BK
TO C294
PAGE 41-4
A
679 GY/BK
S267
679 GY/BK
C295
3
VEHICLE SIGNAL INPUT (+)
LEFT AND RIGHT REAR AIR SPRING SOLENOID
17
14
AIR SUSPENSION/ EVO STEERING MODULE
151–8 A6
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-3
18
C267
14
22
21
C243
679 GY/BK
NAVIGATION/GPS SYSTEM
PAGE 32-3
679 GY/BK
CENTRAL JUNCTION BOX
POWERTRAIN CONTROL MODULE (PCM)
PAGES 24-8, 25-8
68
C174
679 GY/BK
679 GY/BK
C159F
C159M
679 GY/BK
S143
679 GY/BK
C157
SPEED CONTROL SERVO
PAGE 31-2
3
10
0V
C157
57 BK
S102
57 BK
G102
C295
S208
428 OG/BK
432 BK/PK
875 BK/LB
G201
SEE GROUNDS
PAGE 10-9
0V
432 BK/PK
151–8 D1
428 OG/BK
151–2 D10
428 OG/BK
C421F
C421M
DG
429 VT/LG
432 BK/PK
DB
S410
429 VT/LG
432 BK/PK
0V
BK
C296
429 VT/LG
424 TN
C160F
C160M
429 VT/LG
C149M
C149F
S409
429 VT/LG
424 TN
432 BK/PK
0V
RD
C424F
C424M
DG
DB
C295
424 TN
151–8 D1
C160F
C160M
151–2 D10
424 TN
C149M
C149F
424 TN
C424F
C424M
DB
REAR HEIGHT SENSOR
151–14 F6
FRONT HEIGHT SENSOR
151–13 E1
1114 BN/PK
C159F
C159M
1114 BN/PK
1114 BN/PK
C420
C420
0V
57 BK
S400
57 BK
G104
C296
1115 TN/WH
C160F
C160M
1115 TN/WH
C148M
C148F
1115 TN/WH
C419
0V
C419
57 BK
LEFT AIR SPRING SOLENOID
151–14 F5
RIGHT AIR SPRING SOLENOID
151–14 E10
Operates valves that block air from entering or leaving the air springs.
SEE GROUNDS
PAGES 10-2, 10-6