C240b

14401

A220
Audio unit (18808)

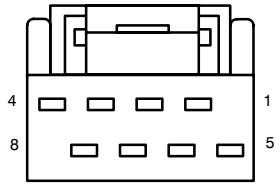

F08167

Pin	Circuit	Circuit function
1	2-MD19 (GY/RD)	Subwoofer, signal, Audio signal negative
2	1-MD19 (WH/RD)	Subwoofer, signal, Audio signal positive
3	48-MD15C	Subwoofer, signal, Drain wire
4	7-MD19 (YE/RD)	Subwoofer, Enable
5	2-MD12 (GY)	Center image amplifier, audio, In, Audio signal negative, (–)
6	1-MD12 (WH)	Center image amplifier, audio, In, Audio signal positive, (+)
7	48-MD12	Center image amplifier, audio, Drain wire
8	7-MD12 (YE)	Center image amplifier, Enable

C240c

14401

A220
Audio unit (18808)

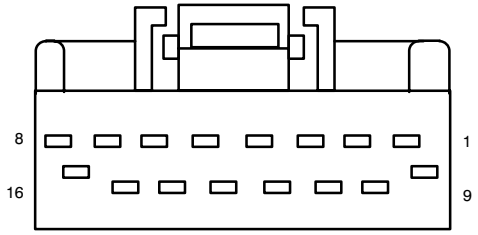

F16055

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	50-MD15 (GY/OG)	Voltage, ignition switch in Start (not overload protected)
4	–	not used
5	8-MD18 (WH)	Speaker, right rear (18808), Audio signal positive
6	10-MD18 (GY)	Speaker, right rear (18808), Audio signal negative
7	8-MD17 (WH/RD)	Speaker, right front (18808), Audio signal positive
8	10-MD17 (GY/RD)	Speaker, right front (18808), Audio signal negative
9	29-MD15 (OG/BK)	Voltage supplied at all times (overload protected)
10	75-MD15 (YE/GN)	Voltage: Ignition switch in Accessory or Run
11	31-MD15B (BK)	Ground
12	8-MD11 (WH/VT)	Speaker, left rear (18808), Audio signal positive
13	10-MD11 (GY/WH)	Speaker, left rear (18808), Audio signal negative
14	8-MD10 (WH/BK)	Speaker, left front (18808), Audio signal positive
15	10-MD10 (GY/BK)	Speaker, left front (18808), Audio signal negative
16	31-MD15A (BK/GN)	Ground