C381

14A699

B209
Height up/down sensor, front



F03056

Pin	Circuit	Circuit function
1	41C (OG/WH)	position sense
2	42 (LG/BK)	Height up/down sensor, front - position sense
3	44C (OG/RD)	position sense

C382

14A699

B204
Backrest forward/ rearward sensor



F03056

Pin	Circuit	Circuit function
1	41A (OG/WH)	position sense
2	43 (OG/LB)	Backrest forward/rearward sensor - position sense
3	44A (OG/RD)	position sense

C389 (WH)

14A699

N421
Power seat switch, left

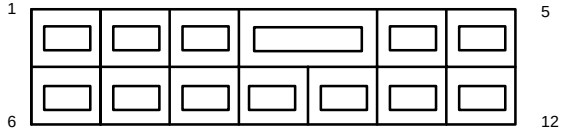

F12095

Pin	Circuit	Circuit function
1	38A (BN/WH)	switch sense
2	–	not used
3	46 (YE/WH)	Backrest rearward, input
4	36 (YE/LG)	Front height motor, Down, input
5	38B (BN/WH)	switch sense
6	47 (GY)	Fwd/Rwd motor, Rearward, input
7	39 (LG/BK)	Fwd/Rwd motor, Forward, input
8	35 (RD/LG)	Backrest forward, input
9	–	not used
10	–	not used
11	–	not used
12	37 (RD/LG)	Front height motor, Up, input