C62 (GY)

14K024

F14013

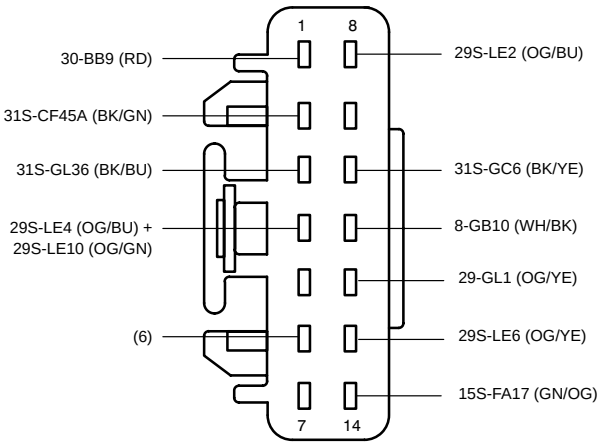

(6) 8-JA7 (WH/RD) + 8-GG14 (WH/BU)
8-AA6 (WH) + 8-GG14 (WH/BU)

14K733

F14012

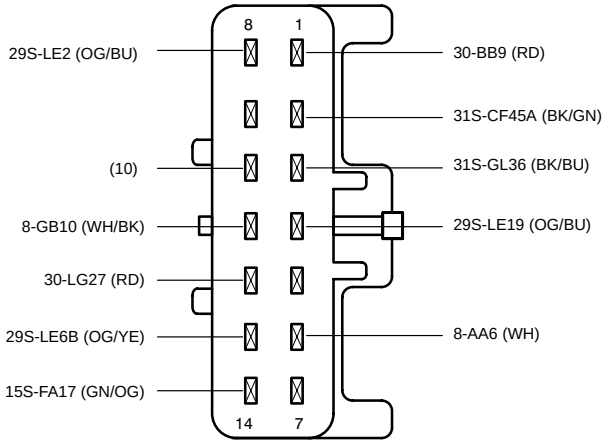

(10) 31S-GC6 (BK/YE) +
31S-GC6A (BK/YE)
31S-GC6 (BK/YE)

C69

14K733

K33
Horn relay

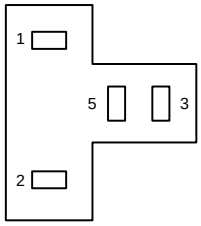

F04018

Pin	Circuit	Circuit Function
1	30-GJ7 (RD)	Voltage supplied at all times (not overload protected)
2	31S-GJ7 (BK/BU)	Ground, switched
3	30-GJ7 (RD)	Voltage supplied at all times (not overload protected)
	30-GJ8 (RD)	Voltage supplied at all times (not overload protected)
5	30S-GJ6 (RD/YE)	Voltage supplied at all times (not overload protected), switched

C71

14K138

M76
Mirror motor, passenger side

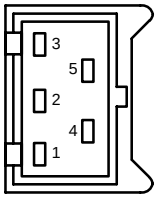

F05012

Pin	Circuit	Circuit Function
1	15S-HB37 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	33-AD20 (YE)	Switched between: Battery voltage, Ground or Open
3	31-HB37 (BK)	Ground
4	32-AD22 (WH)	Switched between: Battery voltage, Ground or Open
5	32-AD23 (WH/RD)	Switched between: Battery voltage, Ground or Open