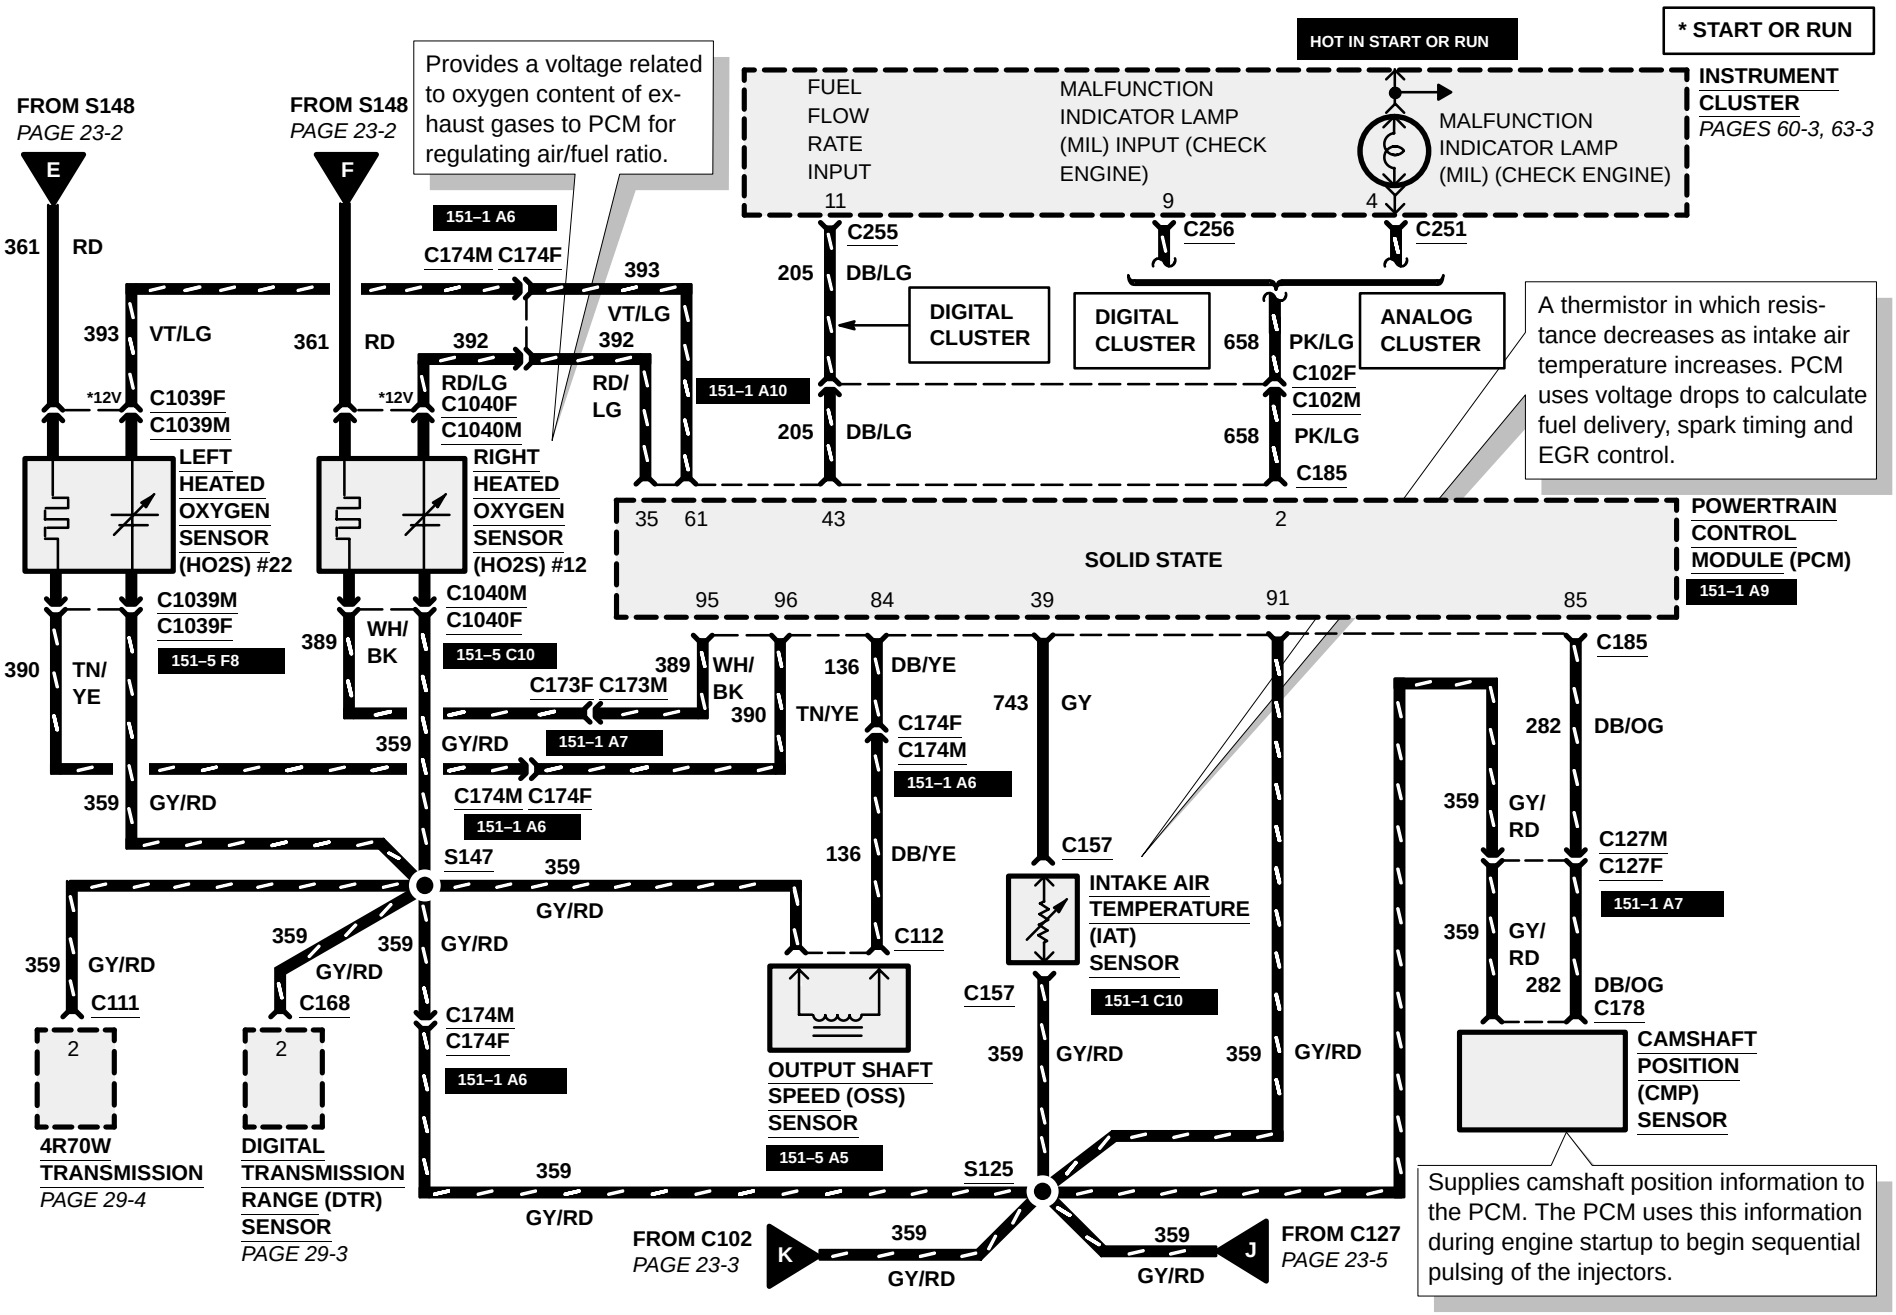
* START OR RUN
HOT IN START OR RUN
INSTRUMENT CLUSTER
PAGES 60-3, 63-3
FUEL FLOW RATE INPUT
MALFUNCTION INDICATOR LAMP (MIL) INPUT (CHECK ENGINE)
MALFUNCTION INDICATOR LAMP (MIL) (CHECK ENGINE)
11
9
4
C255
C256
C251
205 DB/LG
DIGITAL CLUSTER
DIGITAL CLUSTER
ANALOG CLUSTER
658 PK/LG
C102F
C102M
205 DB/LG
658 PK/LG
C185
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.
A thermistor in which resistance decreases as intake air temperature increases. PCM uses voltage drops to calculate fuel delivery, spark timing and EGR control.
FROM S148
PAGE 23-2
FROM S148
PAGE 23-2
E
F
361 RD
393 VT/LG
361 RD
392
392 VT/LG
151–1 A6
C174M C174F
393
151–1 A10
*12V
C1039F
C1039M
*12V
RD/LG
C1040F
C1040M
RD/LG
LEFT HEATED OXYGEN SENSOR (HO2S) #22
RIGHT HEATED OXYGEN SENSOR (HO2S) #12
35 61 43 2
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–1 A9
95 96 84 39 91 85
C1039M
C1039F
151–5 F8
390 TN/YE
359 GY/RD
389 WH/BK
C1040M
C1040F
151–5 C10
C173F C173M
389 WH/BK
390 TN/YE
359 GY/RD
151–1 A7
C174M C174F
151–1 A6
136 DB/YE
743 GY
C174F
C174M
151–1 A6
C185
282 DB/OG
359 GY/RD
C127M
C127F
151–1 A7
359 GY/RD
282 DB/OG
C178
S147
359 GY/RD
136 DB/YE
C112
C157
INTAKE AIR TEMPERATURE (IAT) SENSOR
151–1 C10
359 GY/RD
C111
2
4R70W TRANSMISSION
PAGE 29-4
359 GY/RD
359 GY/RD
C168
2
DIGITAL TRANSMISSION RANGE (DTR) SENSOR
PAGE 29-3
C174M C174F
151–1 A6
OUTPUT SHAFT SPEED (OSS) SENSOR
151–5 A5
359 GY/RD
359 GY/RD
CAMSHAFT POSITION (CMP) SENSOR
Supplies camshaft position information to the PCM. The PCM uses this information during engine startup to begin sequential pulsing of the injectors.
S125
FROM C102
PAGE 23-3
K
359 GY/RD
359 GY/RD
J
FROM C127
PAGE 23-5