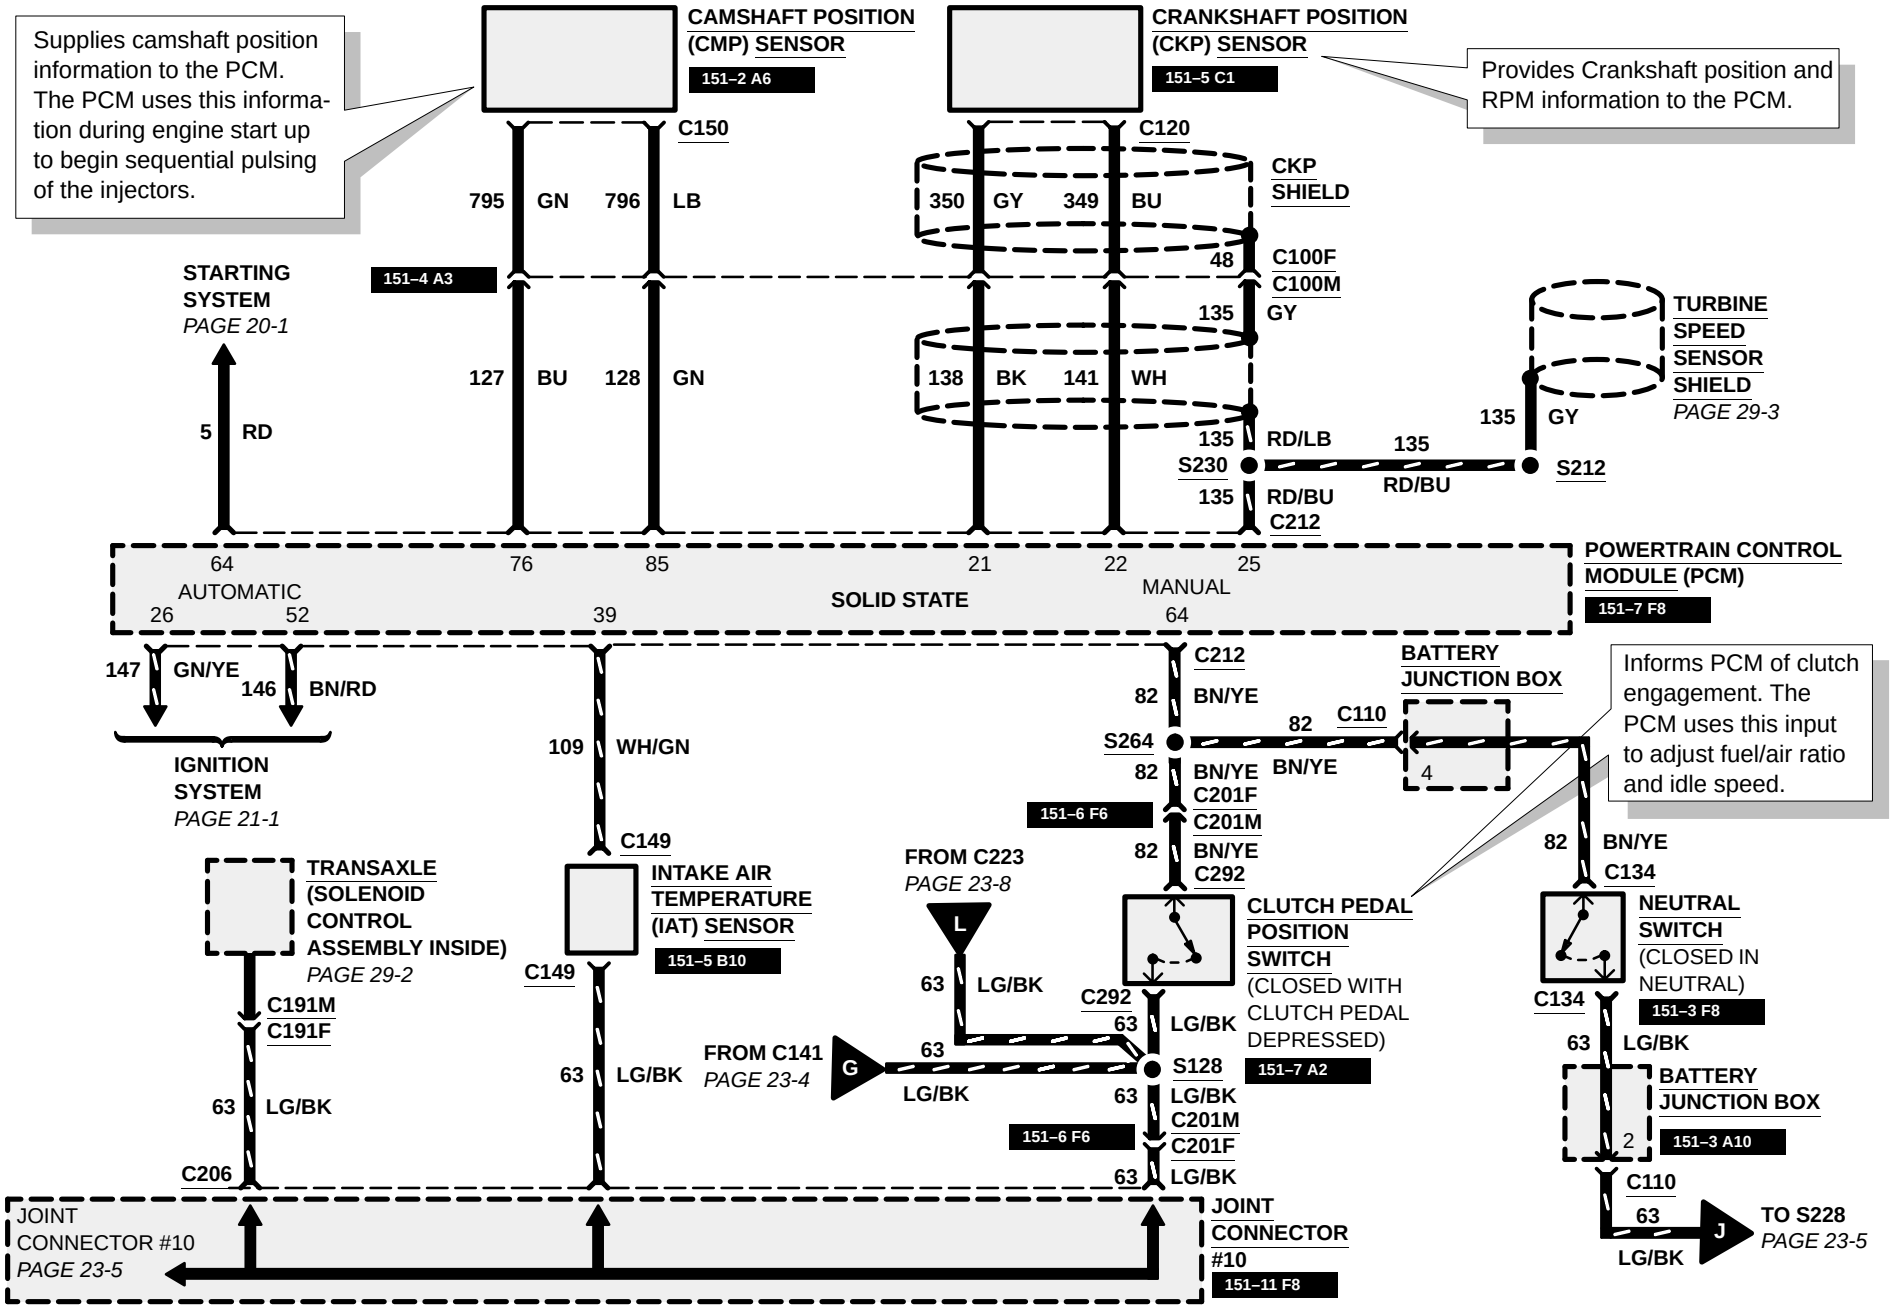
Supplies camshaft position information to the PCM. The PCM uses this information during engine start up to begin sequential pulsing of the injectors.
CAMSHAFT POSITION (CMP) SENSOR
151–2 A6
CRANKSHAFT POSITION (CKP) SENSOR
151–5 C1
Provides Crankshaft position and RPM information to the PCM.
C150
C120
795 GN
796 LB
350 GY
349 BU
CKP SHIELD
48
C100F
C100M
151–4 A3
135 GY
STARTING SYSTEM
PAGE 20-1
127 BU
128 GN
138 BK
141 WH
TURBINE SPEED SENSOR SHIELD
PAGE 29-3
5 RD
135 GY
135 RD/LB
S230
135 RD/BU
135
RD/BU
S212
C212
64
76
85
21
22
25
AUTOMATIC
SOLID STATE
MANUAL
26
52
39
64
POWERTRAIN CONTROL MODULE (PCM)
151–7 F8
147 GN/YE
146 BN/RD
IGNITION SYSTEM
PAGE 21-1
109 WH/GN
C212
82 BN/YE
BATTERY JUNCTION BOX
82
C110
S264
82 BN/YE
BN/YE
4
Informs PCM of clutch engagement. The PCM uses this input to adjust fuel/air ratio and idle speed.
C201F
C201M
151–6 F6
82 BN/YE
C292
82 BN/YE
C134
C149
FROM C223
PAGE 23-8
L
CLUTCH PEDAL POSITION SWITCH (CLOSED WITH CLUTCH PEDAL DEPRESSED)
NEUTRAL SWITCH (CLOSED IN NEUTRAL)
151–3 F8
TRANSAXLE (SOLENOID CONTROL ASSEMBLY INSIDE)
PAGE 29-2
INTAKE AIR TEMPERATURE (IAT) SENSOR
151–5 B10
C149
63 LG/BK
C292
63 LG/BK
C134
63 LG/BK
C191M
C191F
63 LG/BK
FROM C141
PAGE 23-4
G
63 LG/BK
63 LG/BK
S128
151–7 A2
63 LG/BK
BATTERY JUNCTION BOX
151–3 A10
2
C206
C201M
C201F
151–6 F6
63 LG/BK
C110
63 LG/BK
J
TO S228
PAGE 23-5
JOINT CONNECTOR #10
PAGE 23-5
JOINT CONNECTOR #10
151–11 F8