C177

14290

Forward crash sensor

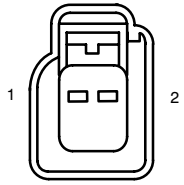

F02132

Pin	Circuit	Circuit function
1	9-JA49 (BN)	Forward crash sensor, Signal return
2	7-JA49 (YE)	Forward crash sensor, signal

C178

12B637

Exhaust Pressure Transducer (EPT) sensor

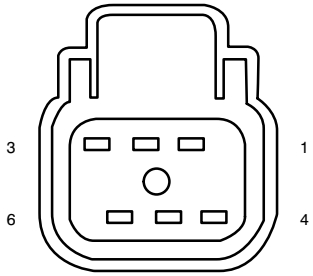

F06297

Pin	Circuit	Circuit function
1	91S-RL7 (BN/GN	Exhaust Pressure Transducer (EPT) sensor, control
2	7-RJ7 (YE/BU)	Reference voltage
3	8-RJ20 (WH/GN)	Exhaust Pressure Transducer (EPT) sensor, signal
4	15S-RL7 (GN/BK)	Voltage supplied in Start and Run (overload protected)
5	8-RJ7 (WH/BU)	Exhaust Pressure Transducer (EPT) sensor, signal
6	9-RJ7 (BN/BU)	Signal return

C181

9D930/12B637

Fuel injector 1 (9F593)

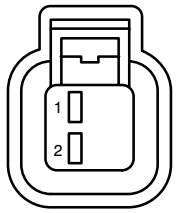

F02069

Pin	Circuit	Circuit function
1	91S-RL10 (BN/WH)	Fuel injector 1 (9F593), control
2	15S-RL10 (GN/WH)	Voltage supplied in Start and Run (overload protected)

C182

9D930/12B637

Fuel injector 2 (9F593)

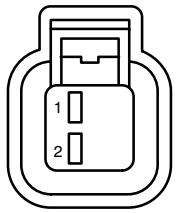

F02069

Pin	Circuit	Circuit function
1	91S-RL11 (BN)	Fuel injector 2 (9F593), control
2	15S-RL11 (GN/YE)	Voltage supplied in Start and Run (overload protected)

C183

9D930/12B637

Fuel injector 3 (9F593)

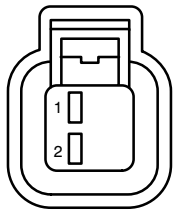

F02069

Pin	Circuit	Circuit function
1	91S-RL12 (BN/RD)	Fuel injector 3 (9F593), control
2	15S-RL12 (GN/BU)	Voltage supplied in Start and Run (overload protected)