4.6L

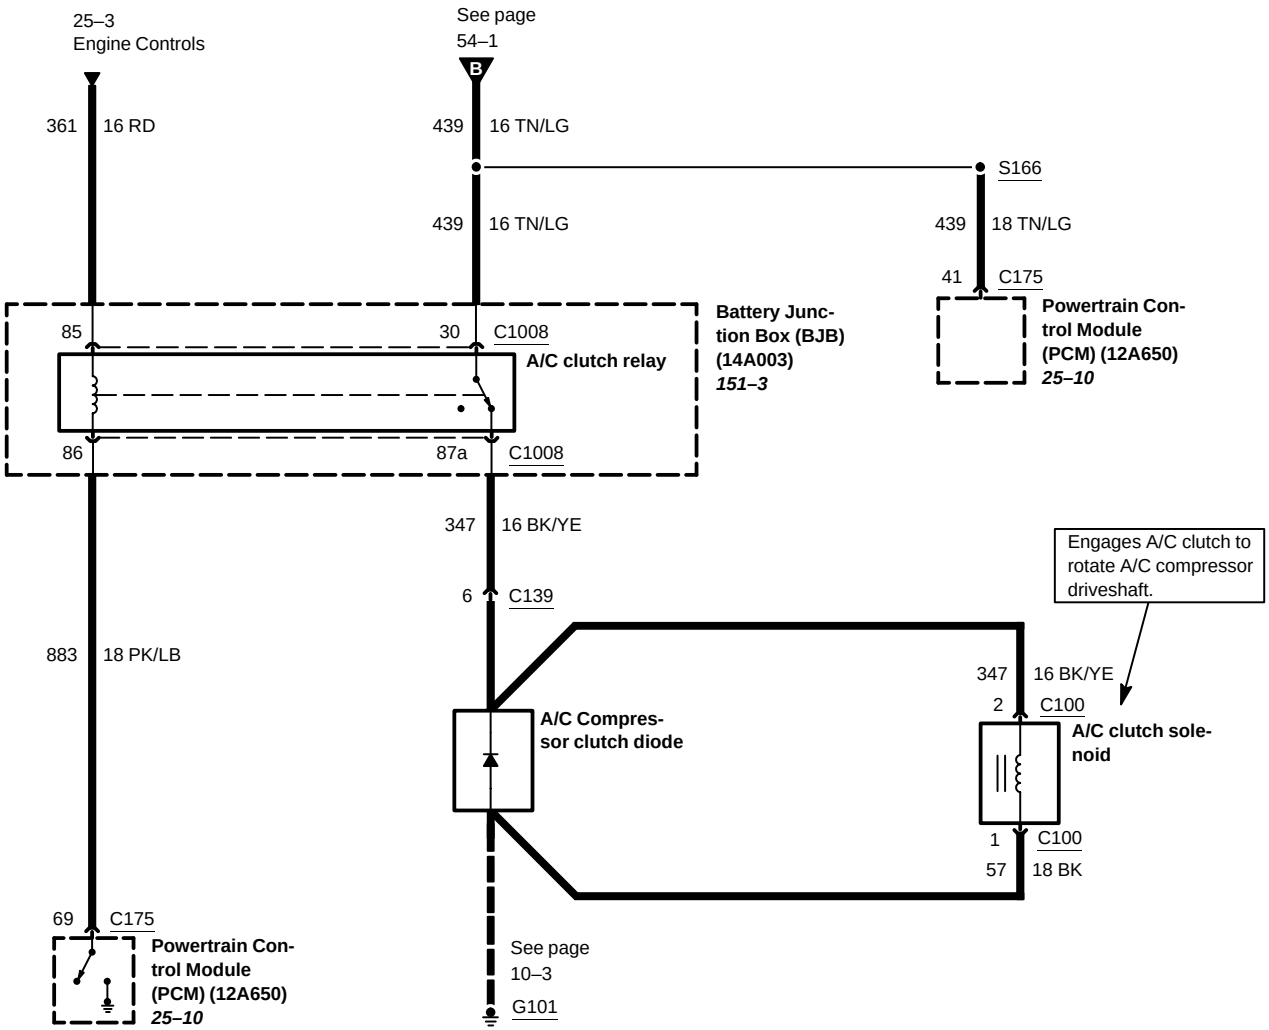
25–3
Engine Controls
See page
54–1
B
361 16 RD
439 16 TN/LG
439 16 TN/LG
S166
439 18 TN/LG
41 C175
Powertrain Control Module (PCM) (12A650)
25–10
85
30 C1008
A/C clutch relay
Battery Junction Box (BJB) (14A003)
151–3
86
87a C1008
347 16 BK/YE
6 C139
Engages A/C clutch to rotate A/C compressor driveshaft.
883 18 PK/LB
347 16 BK/YE
2 C100
A/C Compressor clutch diode
A/C clutch solenoid
1 C100
57 18 BK
69 C175
Powertrain Control Module (PCM) (12A650)
25–10
See page
10–3
G101