## C267a (BK)

**14N104**

A30
Instrument cluster

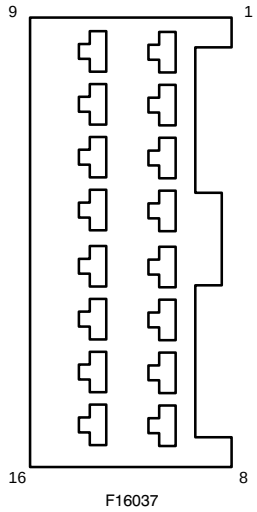


| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | MA04 (BU/RD) | Fuel pump/fuel gauge sender |
| 2 | MA03 (BU/WH) | Coolant temperature sensor 2, input |
| 3 | MJ01 (PK/BU) | Vehicle Speed Sensor (VSS) + |
| 4 | AV02 (LG) | Tachometer |
| 5 | MA06 (VT) | Voltage supplied at all times (overload protected) |
| 6 | AV32 (GN/YE) | Vehicle Speed Sensor (VSS) + |
| 7 | – | not used |
| 8 | AV05 (OG/BK) | Powertrain Control Module (PCM) (12A650) - fuel flow |
| 9 | MA16 (BN) | Message center switch - Select |
| 10 | MA15 (GN/RD) | Message center switch - Reset |
| 11 | MA14 (YE/GN) | Message center switch - Units |
| 12 | – | not used |
| 13 | MA11 (RD/BU) | Message center switch - Trip select |
| 14 | MA12 (GN) | Message center switch - Trip reset |
| 15 | – | not used |
| 16 | – | not used |

## C267b (BK)

**14N104**

A30
Instrument cluster

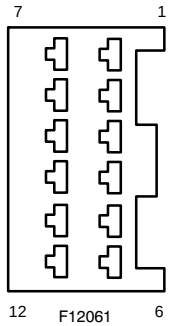


| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | MA17 (YE/GN) | Outside temperature sensor, input |
| 2 | – | not used |
| 3 | MA01 (BU) | Voltage supplied in Start and Run (overload protected) |
| 4 | MJE2 (BK/RD) | Ground |
| 5 | IG91 (PK/BK) | Illumination, Ground |
| 6 | MAE2 (BK) | Ground |
| 7 | – | not used |
| 8 | NN01 (VT/WH) | Low fuel indicator, control |
| 9 | – | not used |
| 10 | EJ18 (RD) | Cruise set, indicator, switch sense |
| 11 | MA41 (BN/WH) | Door ajar indicator, control |
| 12 | HC06 (YE/GN) | Instrument cluster, from,EATC |