## C643

### 12A690

B43
Crankshaft position sensor

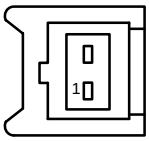


F02012

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 8-RJ4 (WH/RD) | Sensor signal |
| 2 | 9-RJ4 (BN/RD) | Sensor signal return (reference/ground) |

## C644

### 12A690

N96
Power steering pressure switch




F02058

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 8-CE6 (WH) | Ground, switched |
| 2 | 91-CE6 (BK/YE) | Ground |

## C647 (GY)

### 9H589, 12A522

U1
Ignition transformer capacitor

F01005

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 15-MD20 (GN/BU) | Voltage, ignition switch in Start or Run (not overload protected) |

## C681

### 9D866, 12A522

Y131
Evaporative emission (EVAP) canister vent valve

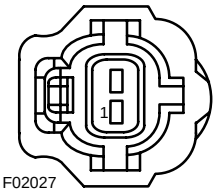


F02027

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 15-RL3 (GN/RD) | Voltage, ignition switch in Start or Run (not overload protected) |
| 2 | 91S-RL3 (BK/OG) | Ground, switched |

## C684

### 14014

N240
Door ajar switch, passenger side front

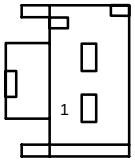


F02023

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 31S-GL16 (BK/BU) | Ground, switched |
| 2 | 31-GL16 (BK) | Ground |

## C685

### 14014

N239
Door ajar switch, driver side front

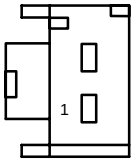


F02023

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 31S-GL9 (BK/YE) | Ground, switched |
| 2 | 31-GL9 (BK) | Ground |

## C686

### 14014

N238
Door ajar switch, passenger side rear

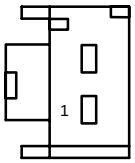


F02023

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 31S-GL19 (BK/GN) | Ground, switched |
| 2 | 31-GL19 (BK) | Ground |

## C687

### 14014

N237
Door ajar switch, driver side rear

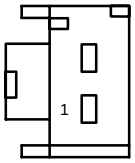


F02023

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 31S-GL12 (BK/OG) | Ground, switched |
| 2 | 31-GL12 (BK) | Ground |