C277b (GY)

7A488

A203
Transaxle Control
Module (TCM)

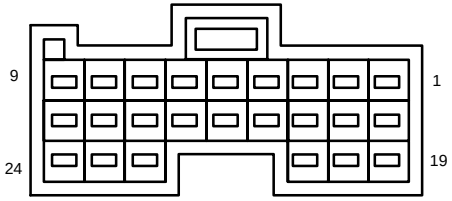

F24011

Pin	Circuit	Circuit function
1	ZE15 (BK/RD)	Ground
2	ZY16 (BU/BK)	Voltage supplied in 1st
3	ZY17 (BU/YE)	Voltage supplied in 2nd
4	ZY23 (VT)	Voltage supplied at all times (overload protected)
5	ZY25 (WH)	Pulse signal generator
6	ZY28 (YE/RD)	Transaxle Control Module (TCM)
7	ZY30 (YE/BK)	Transaxle Control Module (TCM)
8	ZY31 (BN)	Reference, voltage
9	–	not used
10	ZY18 (BU/WH)	Voltage supplied in drive
11	ZY20 (BU/RD)	Voltage supplied in reverse
12	ZY19 (BU)	Voltage supplied with park/neutral
13	–	not used
14	–	not used
15	ZY24 (GN/WH)	Tachometer
16	ZY27 (GN/YE)	Vehicle Speed Sensor (VSS) +
17	ZY34 (RD/GN)	Powertrain Control Module (PCM) (12A650), Transaxle Control Module (TCM)
18	ZY35 (BK/YE)	signal, return
19	–	not used
20	–	not used
21	–	not used
22	–	not used
23	ZY33 (LB)	Transmission Fluid Temperature (TFT) sensor, input
24	ZE48 (BK/RD)	Ground

C278 (BU)

14N104

N423
Deactivator switch



F02165

Pin	Circuit	Circuit function
1	EJ22 (BU)	Voltage supplied in Start and Run (overload protected)
2	SL04 (WH)	Deactivator switch, input

C279 (BK)

14N104

R42
Cigar lighter, front
(15055)



F02123

Pin	Circuit	Circuit function
1	QBE1 (BK)	Ground
2	QB01 (BN/YE)	Voltage in Run or Accessory (overload protected)

C280 (BK)

14N104

N82
Brake pedal position
switch (13480)



F02003

Pin	Circuit	Circuit function
1	LQ01 (RD/WH)	Voltage supplied at all times (overload protected)
2	LQ11 (YE/BK)	Brake pedal position switch (13480), input