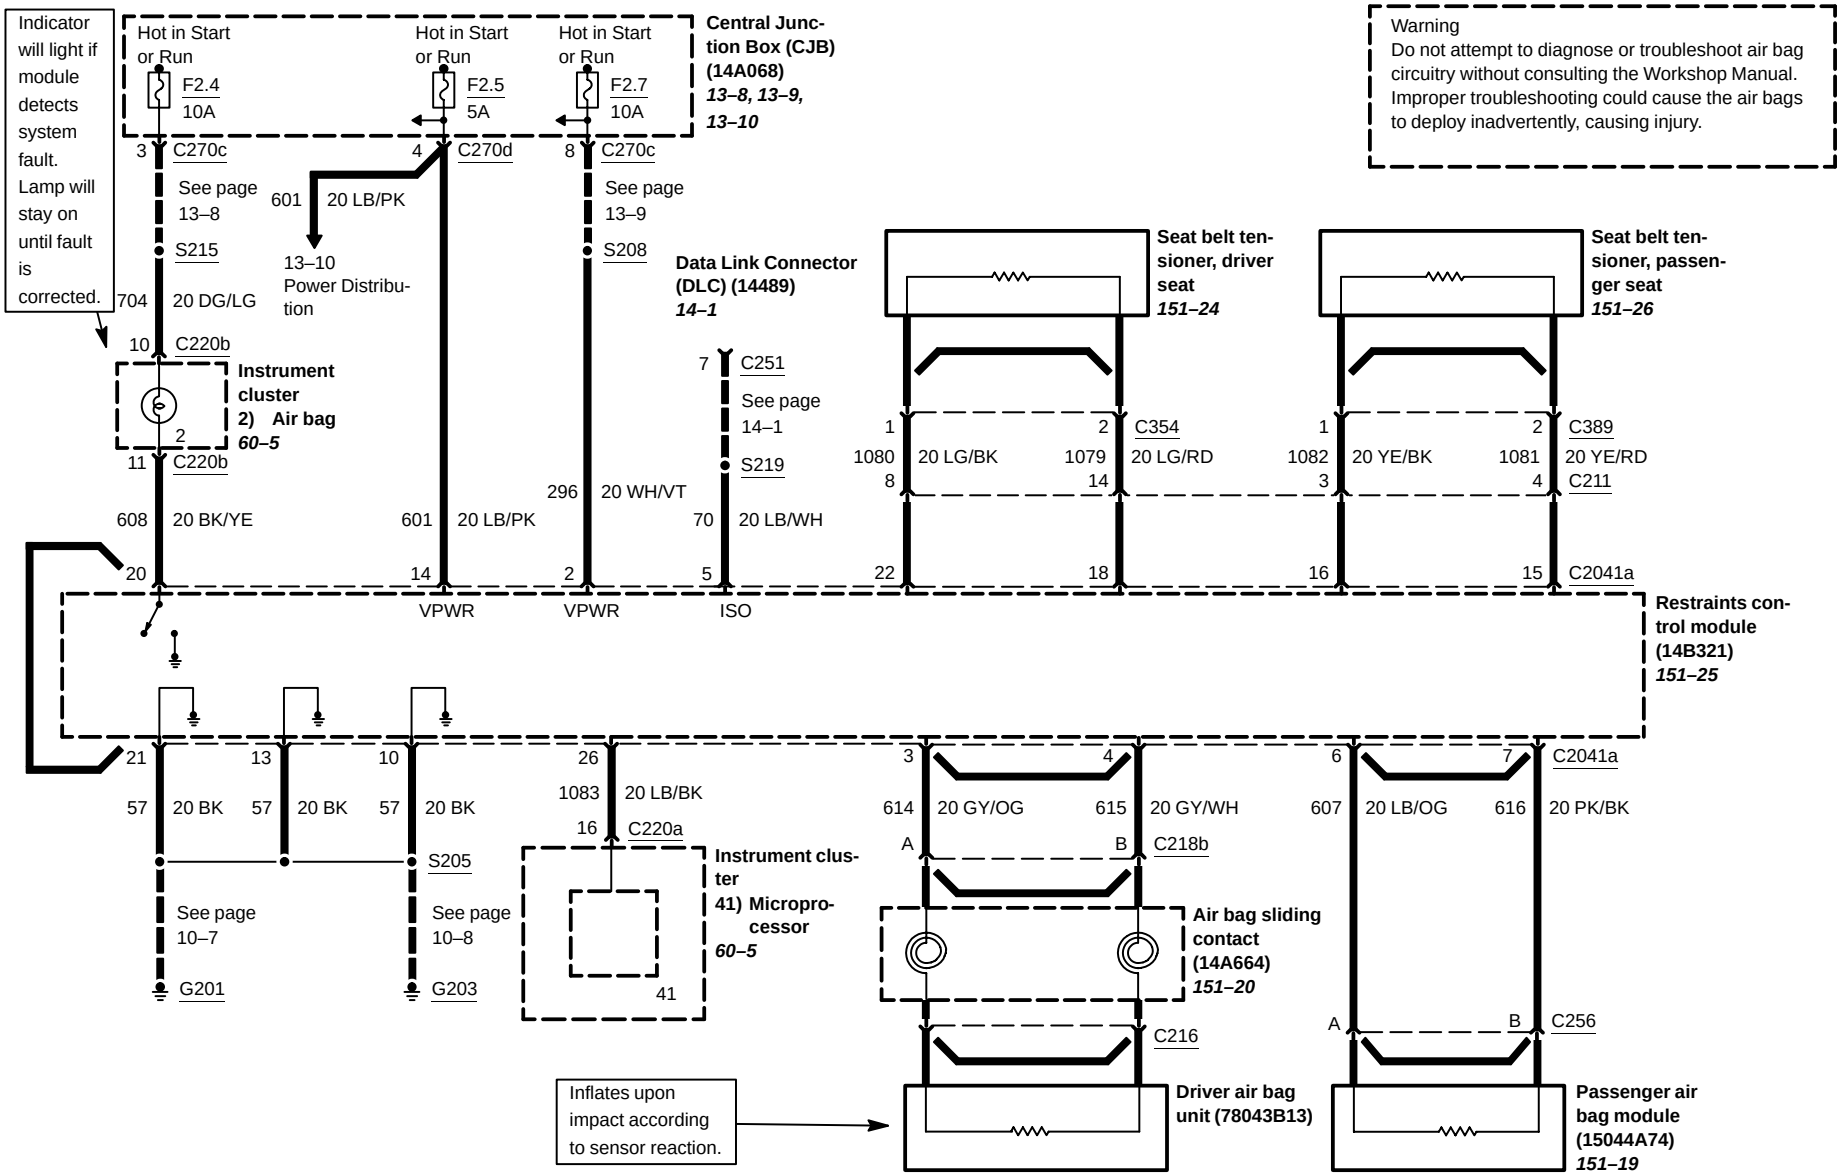
Indicator will light if module detects system fault. Lamp will stay on until fault is corrected.
Hot in Start or Run
F2.4 10A
Hot in Start or Run
F2.5 5A
Hot in Start or Run
F2.7 10A
Central Junction Box (CJB) (14A068) 13–8, 13–9, 13–10
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
3 C270c
See page 13–8
S215
704 20 DG/LG
10 C220b
Instrument cluster
2) Air bag 60–5
2
11 C220b
608 20 BK/YE
20
601 20 LB/PK
13–10 Power Distribution
4 C270d
14
VPWR
8 C270c
See page 13–9
S208
296 20 WH/VT
2
VPWR
Data Link Connector (DLC) (14489) 14–1
7 C251
See page 14–1
S219
70 20 LB/WH
5
ISO
Seat belt tensioner, driver seat 151–24
1 2 C354
1080 20 LG/BK 1079 20 LG/RD
8 14
22 18
Seat belt tensioner, passenger seat 151–26
1 2 C389
1082 20 YE/BK 1081 20 YE/RD
3 4 C211
16 15 C2041a
Restraints control module (14B321) 151–25
21 13 10
57 20 BK 57 20 BK 57 20 BK
S205
See page 10–7
G201
See page 10–8
G203
26
1083 20 LB/BK
16 C220a
41
Instrument cluster
41) Microprocessor 60–5
3 4
614 20 GY/OG 615 20 GY/WH
A B C218b
Air bag sliding contact (14A664) 151–20
C216
Driver air bag unit (78043B13)
6 7 C2041a
607 20 LB/OG 616 20 PK/BK
A B C256
Passenger air bag module (15044A74) 151–19
Inflates upon impact according to sensor reaction.