C112

12B637

P67
Coil On Plug (COP)
2

F02109

Pin	Circuit	Circuit Function
1	91S-RR (BN/RD)	Ground, Switched
2	15-RR6 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)

C113

12B637

P68
Coil On Plug (COP)
3

F02109

Pin	Circuit	Circuit Function
1	91S-RR7 (BN/BU)	Ground, Switched
2	15-RR7 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)

C114

12B637

P69
Coil On Plug (COP)
4

F02109

Pin	Circuit	Circuit Function
1	91S-RR8 (BN/GN)	Ground, Switched
2	15-RR8 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)

C115

12B637

P70
Coil On Plug (COP)
5

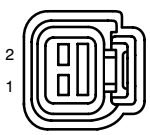

F02183

Pin	Circuit	Circuit Function
1	91S-RR9 (BN/YE)	Ground, Switched
2	15-RR9 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)

C116

12B637

P71
Coil On Plug (COP)
6

F02183

Pin	Circuit	Circuit Function
1	91S-RR10 (BN/WH)	Ground, Switched
2	15-RR10 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)

C117

12B637

P72
Coil On Plug (COP)
7

F02183

Pin	Circuit	Circuit Function
1	91S-RR11 (BN)	Ground, Switched
2	15-RR11 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)

C118

12B637

P73
Coil On Plug (COP)
8

F02183

Pin	Circuit	Circuit Function
1	91S-RR12 (BN/RD)	Ground, Switched
2	15-RR12 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)

C119

12B637

Y218
Inlet air control
valve solenoid

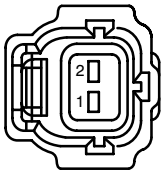

F02091

Pin	Circuit	Circuit Function
1	29-RL19 (OG/YE)	Variable D.C. voltage (not overload protected)
	15S-RL19 (GN/YE)	Hot in start or run
2	91S-RL19 (BN)	Ground, Switched