## C127

**14290**

Anti–theft hood switch (19A434)




F02058

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1304 (VT/OG) | Anti–theft hood switch (19A434), signal |
| 2 | 57 (BK) | Ground |

## C128

**14290**

Mass Air Flow (MAF) sensor (12B579)

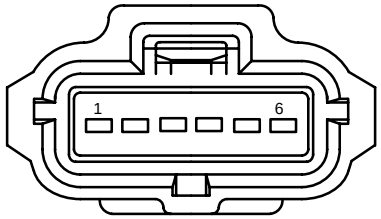


F06077

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 359 (GY/RD) | signal, return |
| 2 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |
| 3 | 570 (BK/WH) | Ground |
| 4 | 968 (TN/LB) | Mass Air Flow (MAF) sensor (12B579), signal, return |
| 5 | 967 (LB/RD) | Mass Air Flow (MAF) sensor (12B579), output |
| 6 | 743 (GY) | Intake Air Temperature (IAT) sensor (12A697), input |

## C130 (BN)

**12B637**

A/C clutch cycling pressure switch (19D594)

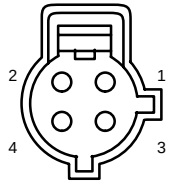


F04195

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 883 (PK/LB) | A/C clutch cycling pressure switch (19D594), to, Powertrain Control Module (PCM) (12A650) |
| 2 | – | not used |
| 3 | – | not used |
| 4 | 1040 (RD/BK) | Voltage in Run (overload protected) |

## C131

**14290**

Horn (13832)




F02058

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 6 (YE/LG) | Horn relay, switched power |

## C132

**14290**

Ambient air temperature sensor (19E702)

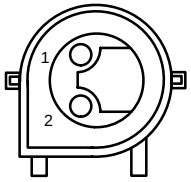


F02177

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 470 (PK/BK) | Sensor signal return (reference/ground) |
| 2 | 767 (LB/OG) | Ambient air temperature sensor (19E702), feed |