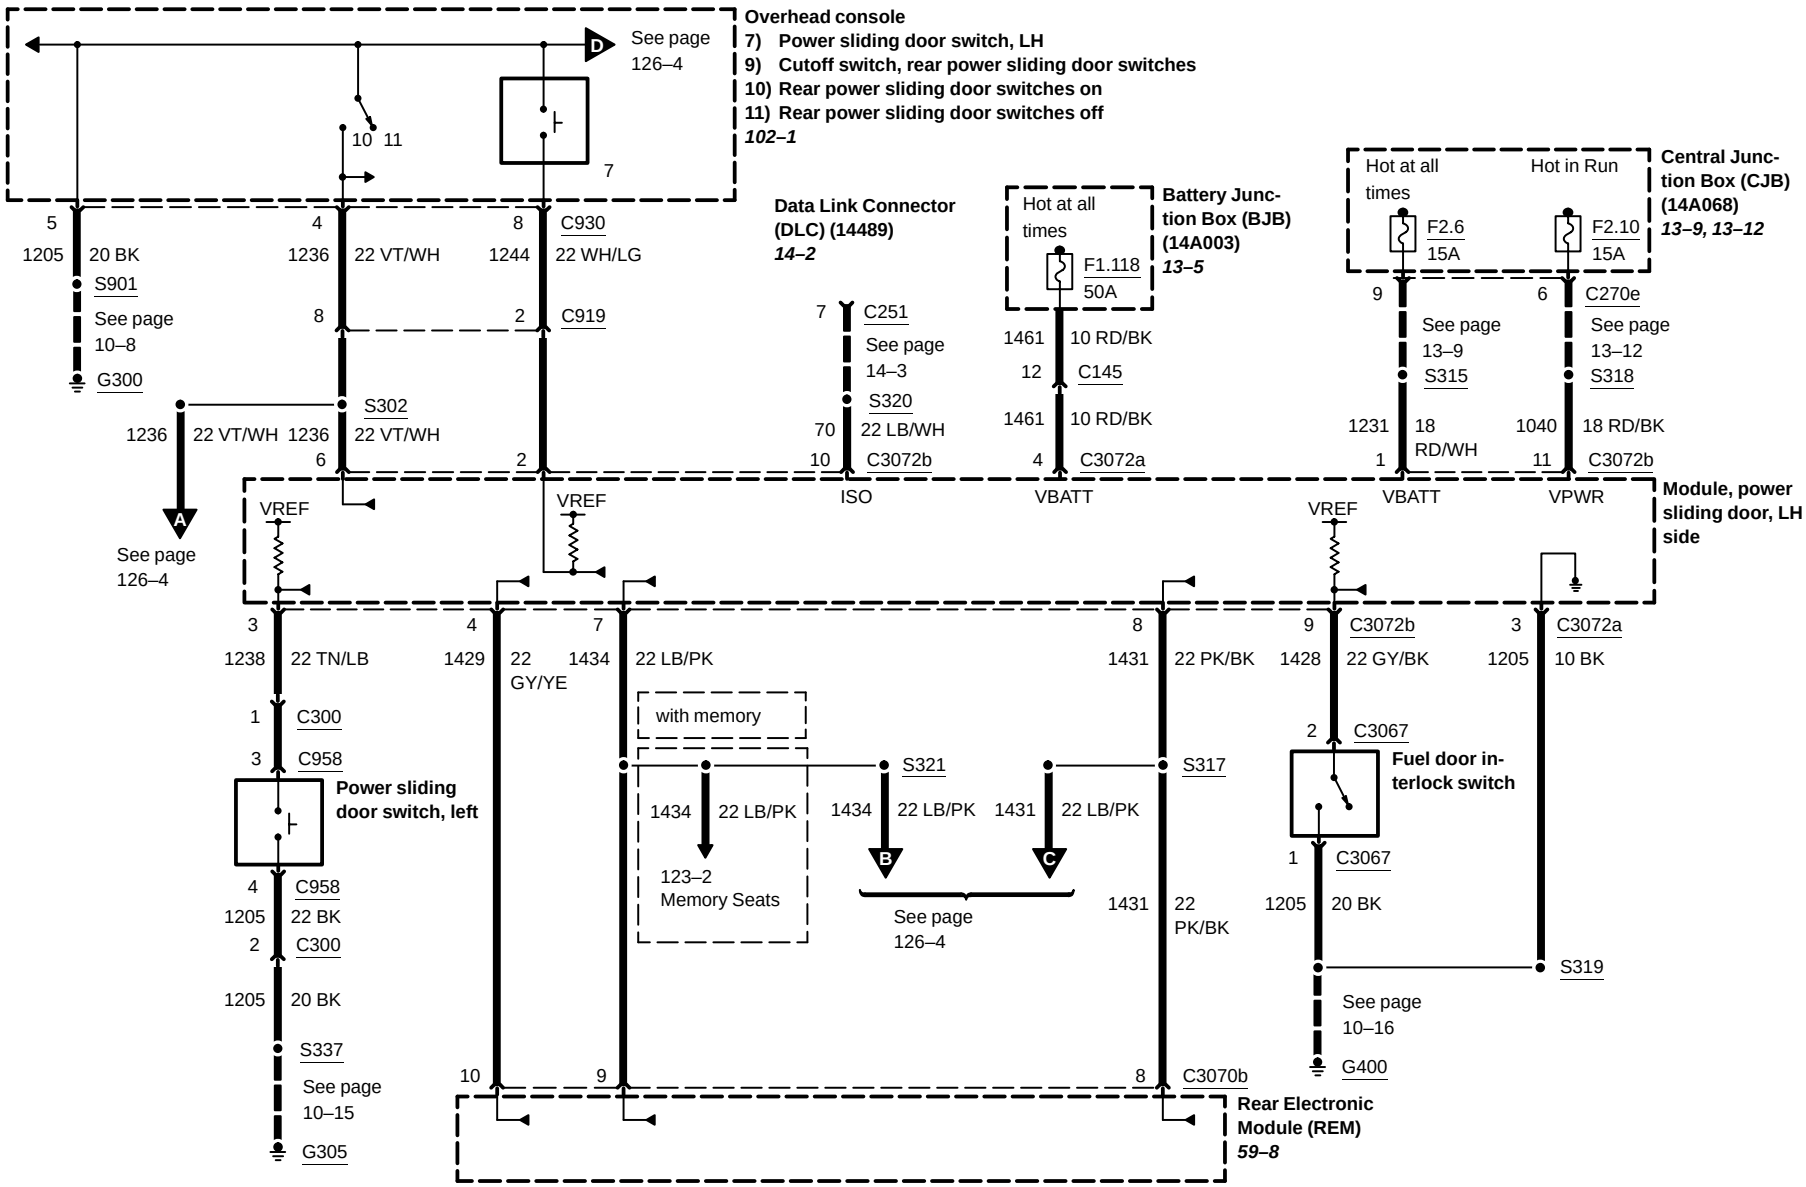
Overhead console
7) Power sliding door switch, LH
9) Cutoff switch, rear power sliding door switches
10) Rear power sliding door switches on
11) Rear power sliding door switches off
102–1
See page 126–4
10 11
7
5 1205 20 BK
S901
See page 10–8
G300
4 1236 22 VT/WH
8
S302
1236 22 VT/WH
6
8 1244 22 WH/LG
C930
2
C919
1236 22 VT/WH
See page 126–4
Data Link Connector (DLC) (14489)
14–2
7 C251
See page 14–3
S320
70 22 LB/WH
10 C3072b
ISO
Hot at all times
F1.118 50A
Battery Junction Box (BJB) (14A003)
13–5
1461 10 RD/BK
12 C145
1461 10 RD/BK
4 C3072a
VBATT
Hot at all times
Hot in Run
F2.6 15A
F2.10 15A
Central Junction Box (CJB) (14A068)
13–9, 13–12
9
See page 13–9
S315
1231 18 RD/WH
1
6 C270e
See page 13–12
S318
1040 18 RD/BK
11 C3072b
VBATT
VPWR
Module, power sliding door, LH side
VREF
VREF
VREF
3 1238 22 TN/LB
1 C300
3 C958
Power sliding door switch, left
4 C958
1205 22 BK
2 C300
1205 20 BK
S337
See page 10–15
G305
4 1429 22 GY/YE
7 1434 22 LB/PK
with memory
1434 22 LB/PK
123–2 Memory Seats
S321
1434 22 LB/PK
B
C
1431 22 LB/PK
S317
See page 126–4
8 1431 22 PK/BK
1431 22 PK/BK
9 1428 C3072b 22 GY/BK
2 C3067
Fuel door interlock switch
1 C3067
1205 20 BK
S319
See page 10–16
G400
3 1205 C3072a 10 BK
10
9
8 C3070b
Rear Electronic Module (REM)
59–8