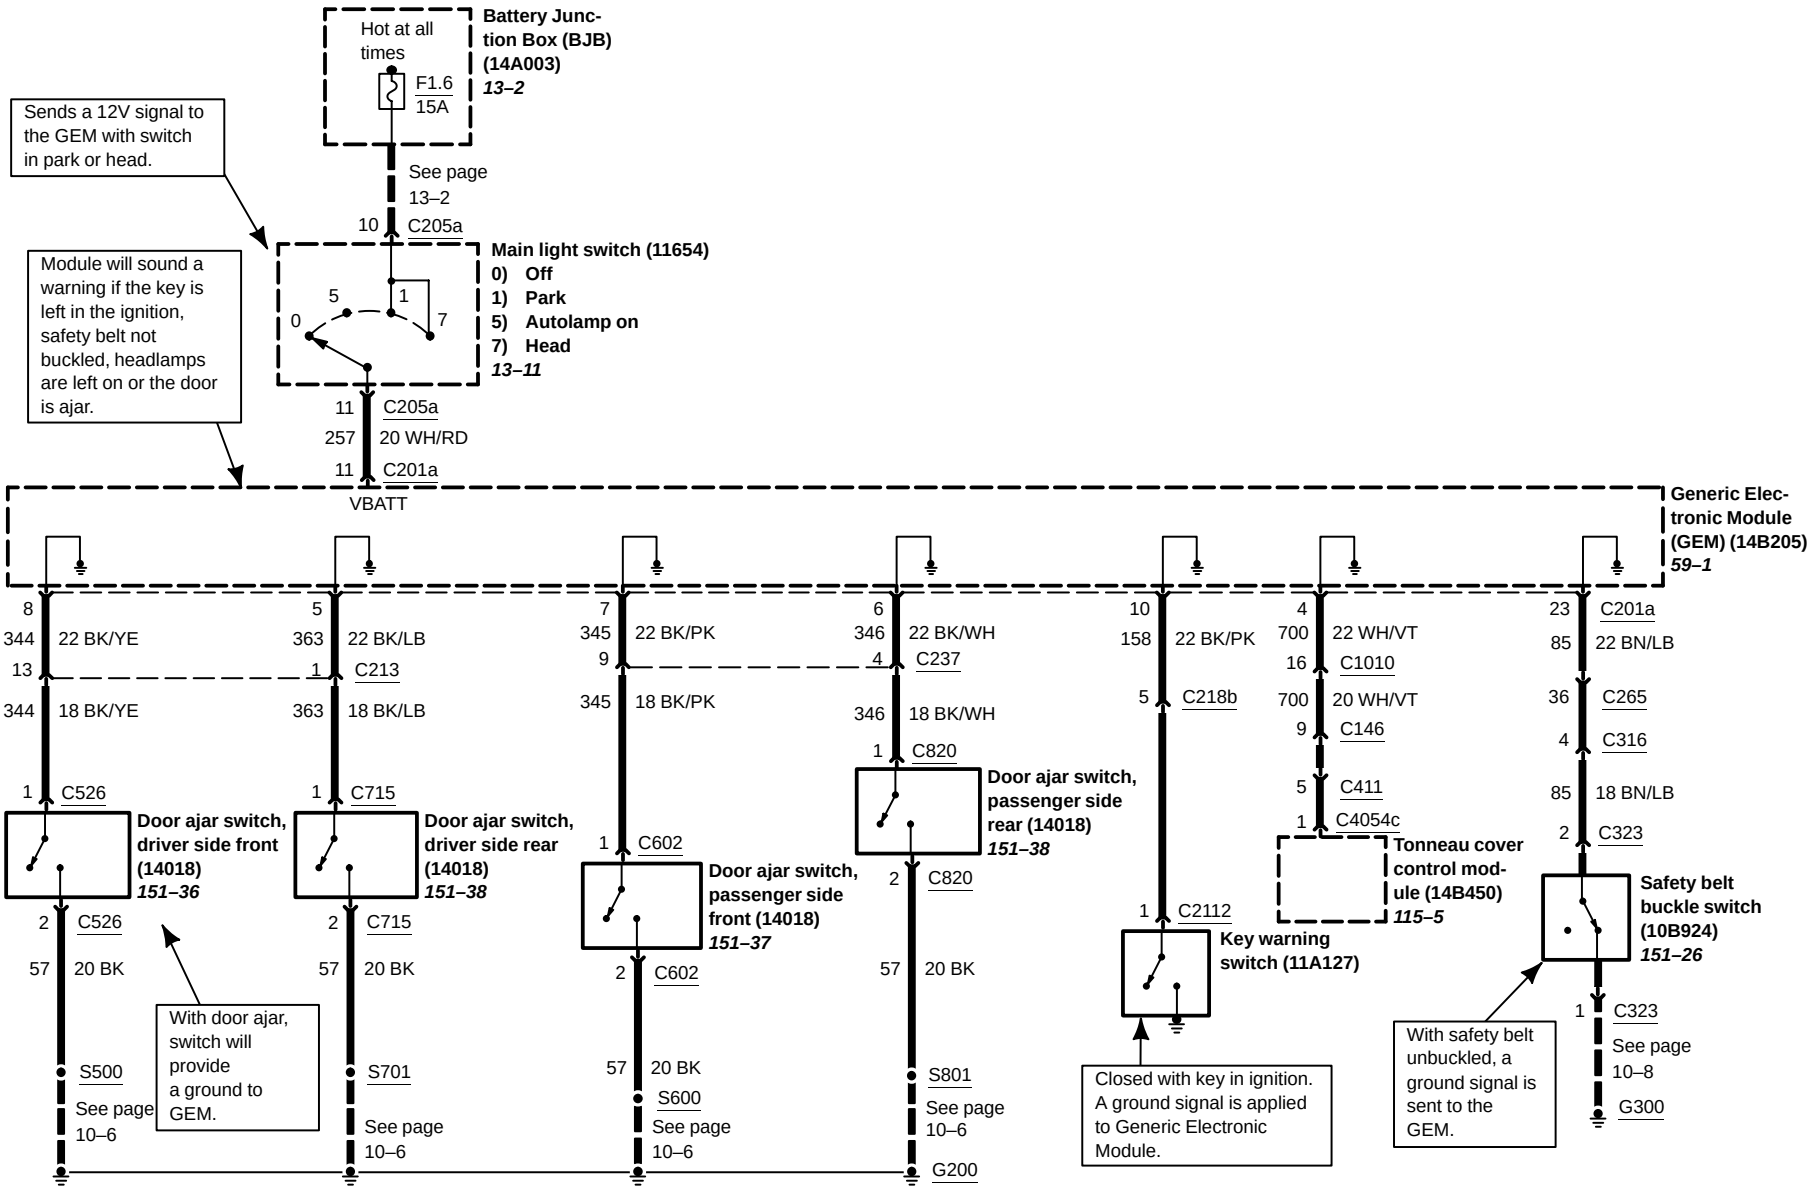
Hot at all times
F1.6
15A
Battery Junction Box (BJB) (14A003)
13–2
Sends a 12V signal to the GEM with switch in park or head.
See page 13–2
10 C205a
Main light switch (11654)
0) Off
1) Park
5) Autolamp on
7) Head
13–11
Module will sound a warning if the key is left in the ignition, safety belt not buckled, headlamps are left on or the door is ajar.
11 C205a
257 20 WH/RD
11 C201a
VBATT
Generic Electronic Module (GEM) (14B205)
59–1
8 344 22 BK/YE 13 344 18 BK/YE 1 C526
Door ajar switch, driver side front (14018)
151–36
2 C526 57 20 BK S500
See page 10–6
With door ajar, switch will provide a ground to GEM.
5 363 22 BK/LB 1 C213 363 18 BK/LB 1 C715
Door ajar switch, driver side rear (14018)
151–38
2 C715 57 20 BK S701
See page 10–6
7 345 22 BK/PK 9 345 18 BK/PK 1 C602
Door ajar switch, passenger side front (14018)
151–37
2 C602 57 20 BK S600
See page 10–6
6 346 22 BK/WH 4 C237 346 18 BK/WH 1 C820
Door ajar switch, passenger side rear (14018)
151–38
2 C820 57 20 BK S801
See page 10–6
G200
10 158 22 BK/PK 5 C218b 1 C2112
Key warning switch (11A127)
Closed with key in ignition. A ground signal is applied to Generic Electronic Module.
4 700 22 WH/VT 16 C1010 700 20 WH/VT 9 C146 5 C411 1 C4054c
Tonneau cover control module (14B450)
115–5
23 C201a 85 22 BN/LB 36 C265 4 C316 85 18 BN/LB 2 C323
Safety belt buckle switch (10B924)
151–26
1 C323
See page 10–8
G300
With safety belt unbuckled, a ground signal is sent to the GEM.