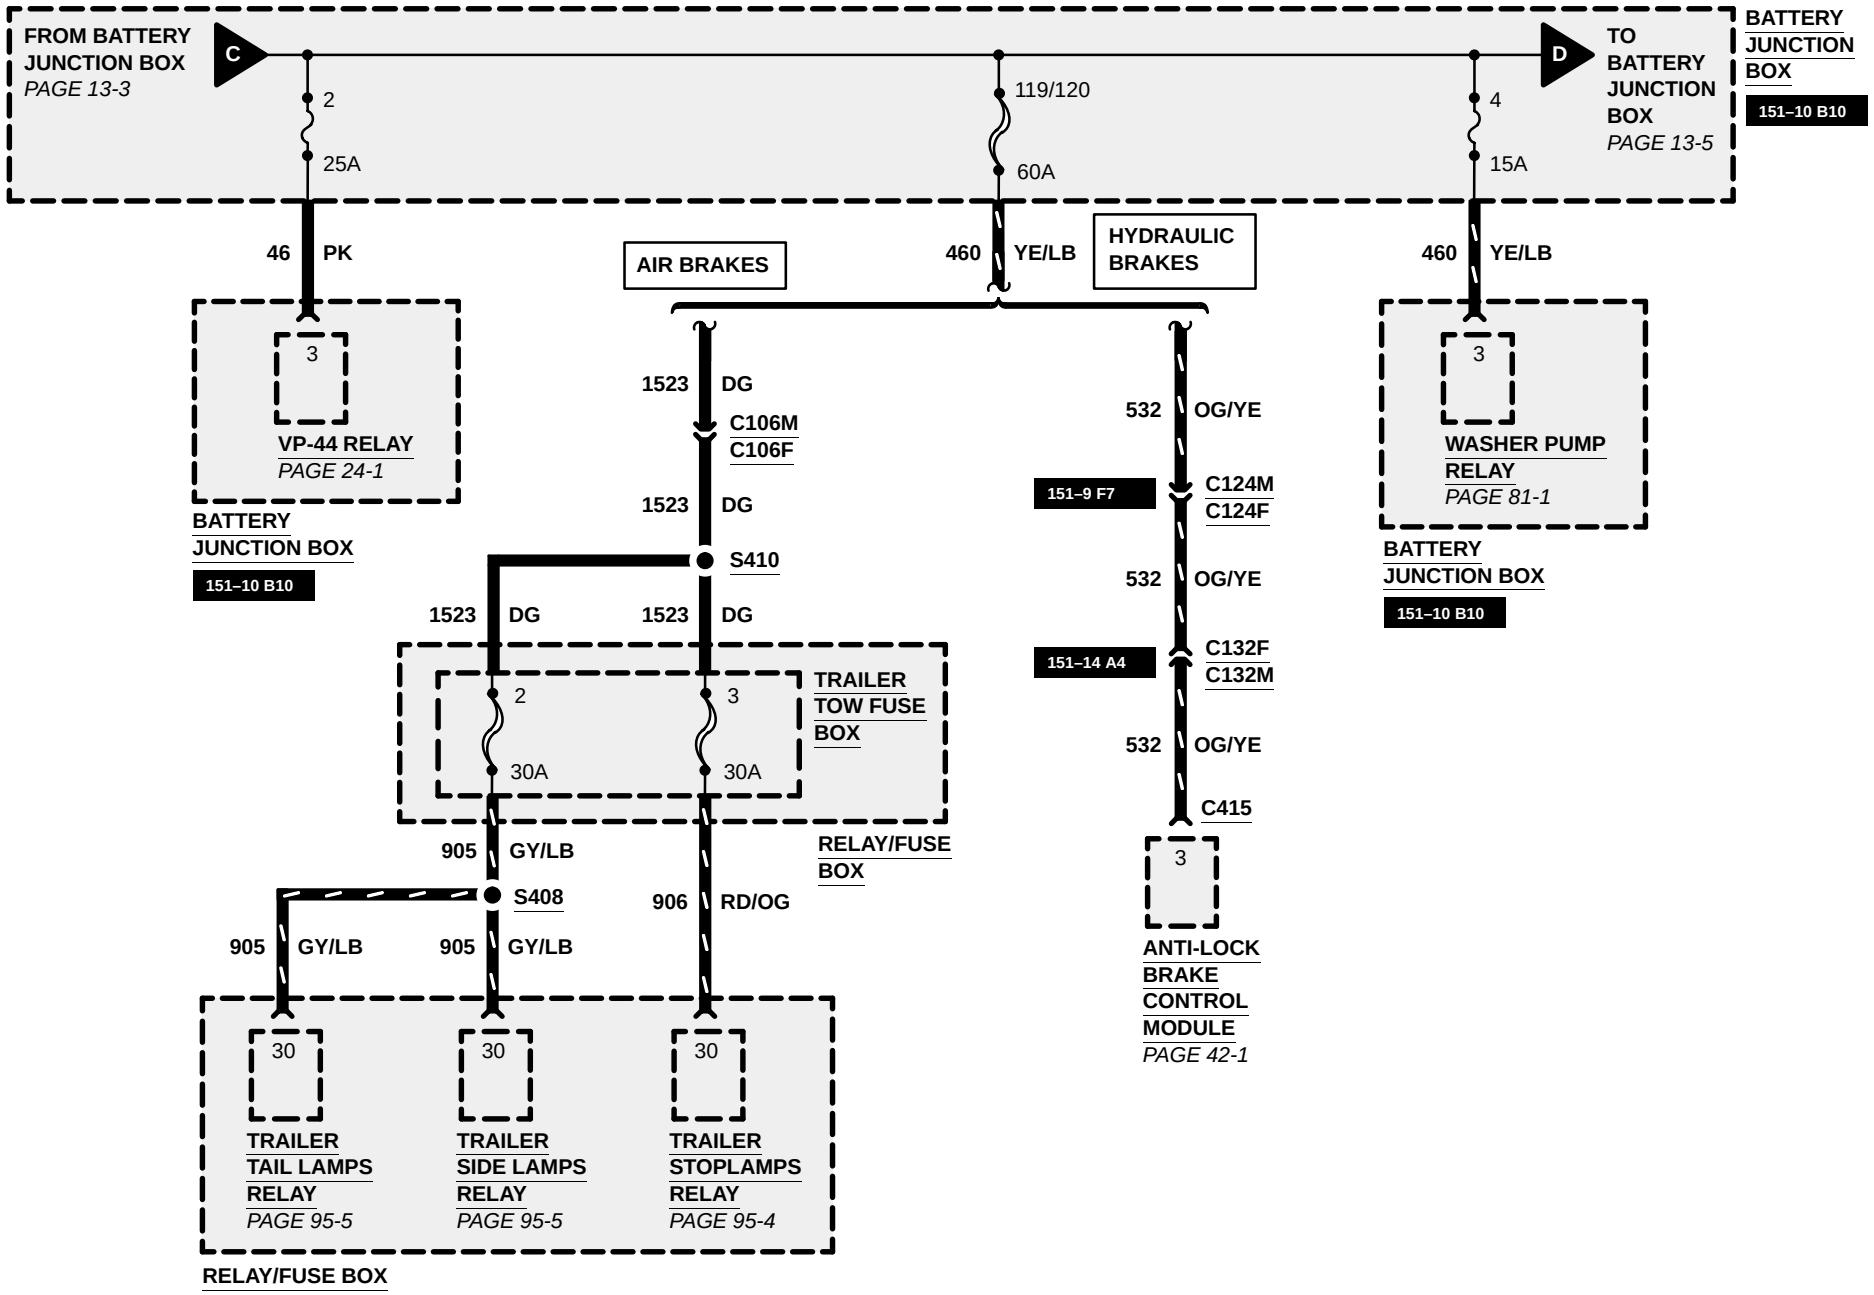
FROM BATTERY JUNCTION BOX
PAGE 13-3
C
2
25A
119/120
60A
4
15A
D
TO BATTERY JUNCTION BOX
PAGE 13-5
BATTERY JUNCTION BOX
151–10 B10
46 PK
460 YE/LB
460 YE/LB
AIR BRAKES
HYDRAULIC BRAKES
3
VP-44 RELAY
PAGE 24-1
BATTERY JUNCTION BOX
151–10 B10
1523 DG
C106M
C106F
1523 DG
S410
1523 DG
1523 DG
2
3
30A
30A
TRAILER TOW FUSE BOX
RELAY/FUSE BOX
905 GY/LB
S408
906 RD/OG
905 GY/LB
905 GY/LB
30
30
30
TRAILER TAIL LAMPS RELAY
PAGE 95-5
TRAILER SIDE LAMPS RELAY
PAGE 95-5
TRAILER STOPLAMPS RELAY
PAGE 95-4
RELAY/FUSE BOX
532 OG/YE
151–9 F7
C124M
C124F
532 OG/YE
151–14 A4
C132F
C132M
532 OG/YE
C415
3
ANTI-LOCK BRAKE CONTROL MODULE
PAGE 42-1
3
WASHER PUMP RELAY
PAGE 81-1
BATTERY JUNCTION BOX
151–10 B10