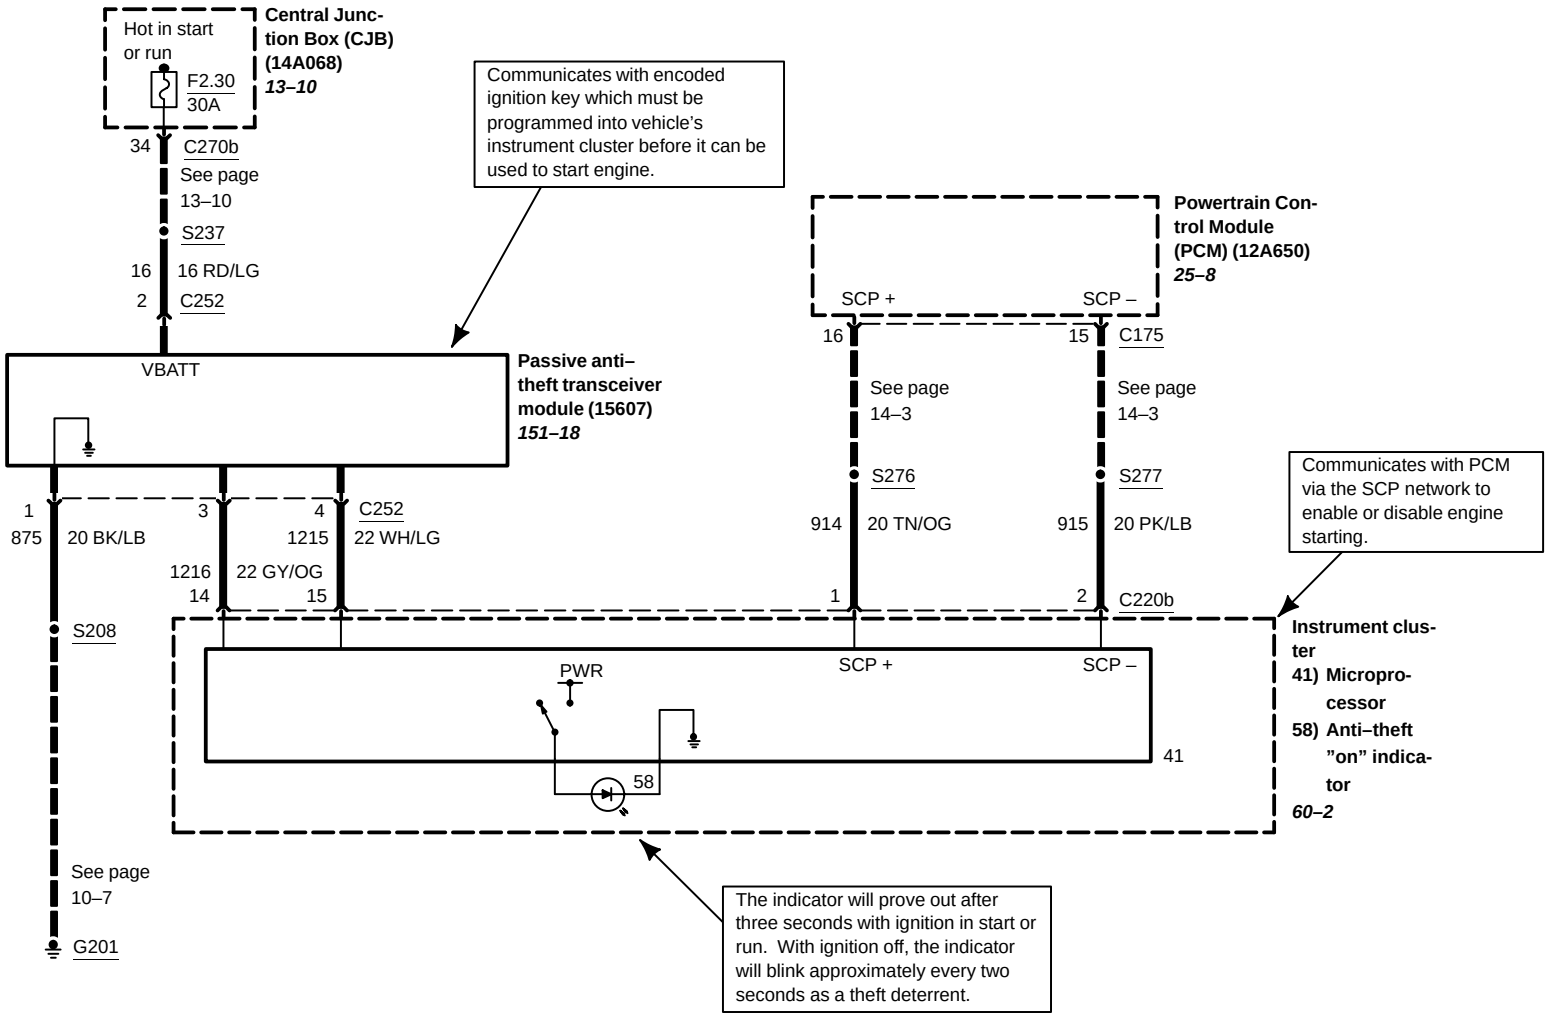
Hot in start or run
F2.30
30A
Central Junction Box (CJB) (14A068)
13–10
34
C270b
See page 13–10
S237
16
16 RD/LG
2
C252
Communicates with encoded ignition key which must be programmed into vehicle's instrument cluster before it can be used to start engine.
Powertrain Control Module (PCM) (12A650)
25–8
SCP +
SCP –
16
15
C175
See page 14–3
See page 14–3
S276
S277
914
20 TN/OG
915
20 PK/LB
VBATT
Passive anti–theft transceiver module (15607)
151–18
1
875
20 BK/LB
3
1216
22 GY/OG
14
4
C252
1215
22 WH/LG
15
1
2
C220b
Communicates with PCM via the SCP network to enable or disable engine starting.
S208
PWR
SCP +
SCP –
41
58
Instrument cluster
41) Microprocessor
58) Anti–theft "on" indicator
60–2
See page 10–7
G201
The indicator will prove out after three seconds with ignition in start or run. With ignition off, the indicator will blink approximately every two seconds as a theft deterrent.